



INSTRUKCJA SERWISOWA
urządzeń klimatyzacyjnych KAISAI



Energy Related Products

SUPER DC INVERTER SERIES

Service Manual 2013

LFIS-B-1309



Part 1 General Information 1

Part 2 Indoor Units 6

Part 3 Outdoor Units..... 65

Part 4 Installation..... 77

Part 5 Electrical Control System 109

※The specifications, designs, and information in this book are subject to change without notice for product improvement.

Part 1

General Information

1. Model Lists	2
2. External Appearance	3
2.1 Indoor Units.....	3
2.2 Outdoor Units.....	3
3. Nomenclature	4
4. Features	5

1. Model Lists

1.1 Indoor Units

R410A (capacity multiplied by 1000Btu/h)

Type	Function	12	16	18	24	30	36
Super slim cassette	Cooling and heating			●	●	●	●
Duct	Cooling and heating	●		●	●	●	●
Ceiling-floor	Cooling and heating			●	●	●	●
New Four-way cassette (compact)	Cooling and heating	●		●			
Console	Cooling and heating	●	●				

1.2 Outdoor Units

Universal Outdoor unit Model	Compressor type	Compressor Brand	Matched indoor units
KOU-12HFN1-QRC8	Rotary	GMCC	KCA2U-12HRFN1-QRC8 KFAU-12HRFN1-QRC8 KTBU-12HWFN1-QRC8
KOU-18HFN1-QRC4	Rotary	GMCC	KCD-18HRFN1-QRC4 KTB-18HWFN1-QRC4 KUE-18HRDN1-QRC4
KOU-18HFN1-QRC8	Rotary	GMCC	KCD-18HRFN1-QRC8 KTB-18HWFN1-QRC8(A) KUE-18HRFN1-QRC8 KCA2-18HRFN1-QRC8 KFA-16HRFN1-QRC8
KOU-24HFN1-QRC4	Rotary	GMCC	KCD-24HRFN1-QRC4 KTB-24HWDN1-QRC4 KUE-24HRDN1-QRC4
KOU-24HFN1-QRC8	Rotary	GMCC	KCD-24HRFN1-QRC8 KTB-24HWFN1-QRC8 KUE-24HRFN1-QRC8
KOU-30HFN1-QRC8	Rotary	GMCC	KTB-30HWFN1-QRC8 KCD-30HRFN1-QRC8 KUE-30HRFN1-QRC8
KOU-36HFN1-QRC4	Rotary	Mitsubishi	KCD-36HRFN1-QRC4 KTB-36HWFN1-QRC4 KUE-36HRFN1-QRC4
KOU-36HFN1-RRC4	Rotary	Mitsubishi	
KOU-36HFN1-QRC8(5A0)	Rotary	Mitsubishi	KCD-36HRFN1-QRC8 KTB-36HWFN1-QRC8(A) KUE-36HRFN1-QRC8(A)
KOU-36HFN1-QRC8(520)			
KOU-36HFN1-RRC8(5A0)	Rotary	Mitsubishi	
KOU-36HFN1-RRC8(520)			

2. External Appearance

2.1 Indoor Units

Super slim cassette



Duct



Ceiling-Floor




Compact Four-way cassette



Console



2.2 Outdoor Units

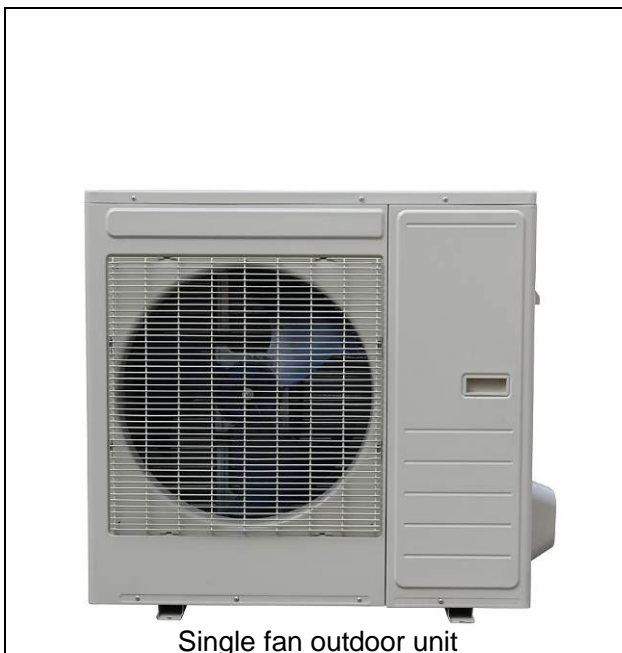

Single fan outdoor unit




Double fan outdoor unit

3. Nomenclature

3.1 Indoor Unit

M U B T- 36 H R D N1- Q RC4

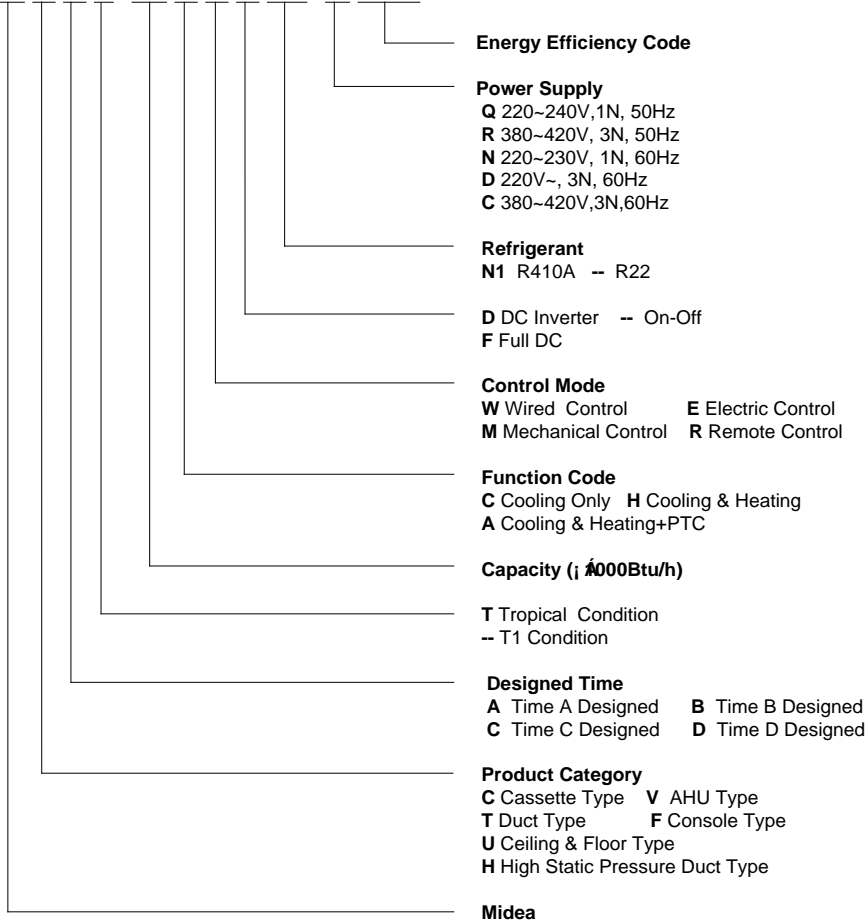

Energy Efficiency Code

Power Supply

- Q 220~240V, 1N, 50Hz
- R 380~420V, 3N, 50Hz
- N 220~230V, 1N, 60Hz
- D 220V~, 3N, 60Hz
- C 380~420V, 3N, 60Hz

Refrigerant

N1 R410A -- R22

D DC Inverter -- On-Off
F Full DC

Control Mode

- W Wired Control E Electric Control
- M Mechanical Control R Remote Control

Function Code

- C Cooling Only H Cooling & Heating
- A Cooling & Heating+PTC

Capacity (i 1000Btu/h)

T Tropical Condition
-- T1 Condition

Designed Time

- A Time A Designed B Time B Designed
- C Time C Designed D Time D Designed


Product Category

- C Cassette Type V AHU Type
- T Duct Type F Console Type
- U Ceiling & Floor Type
- H High Static Pressure Duct Type

Midea

3.2 Outdoor Unit

M O U T- 36 H D N1- R RC4

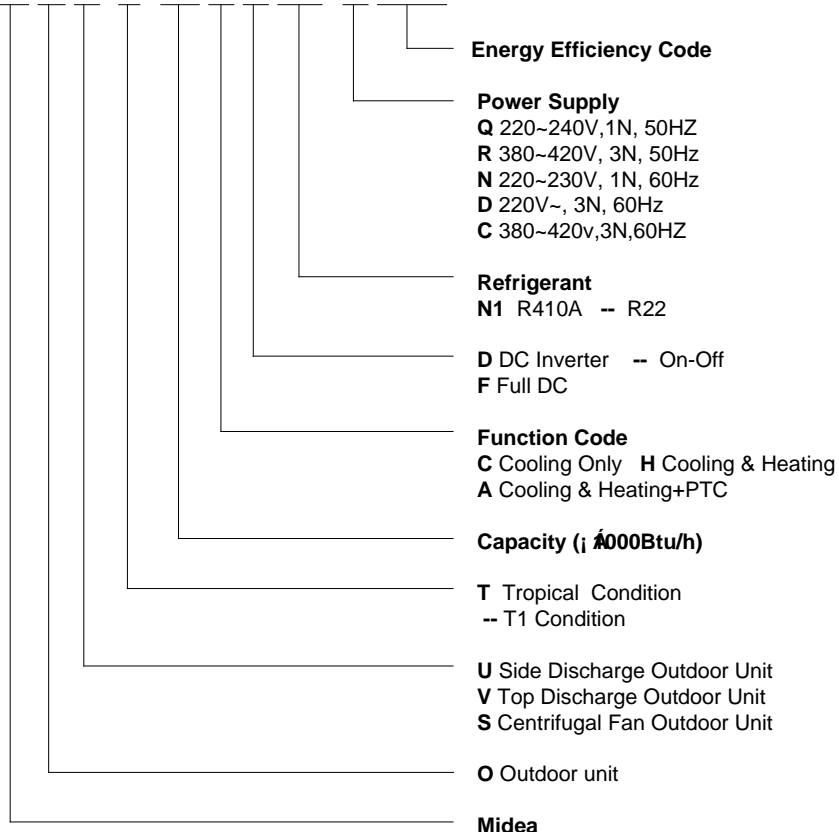

Energy Efficiency Code

Power Supply

- Q 220~240V, 1N, 50HZ
- R 380~420V, 3N, 50Hz
- N 220~230V, 1N, 60Hz
- D 220V~, 3N, 60Hz
- C 380~420v, 3N, 60HZ

Refrigerant

N1 R410A -- R22

D DC Inverter -- On-Off
F Full DC

Function Code

- C Cooling Only H Cooling & Heating
- A Cooling & Heating+PTC

Capacity (i 1000Btu/h)

T Tropical Condition
-- T1 Condition

- U Side Discharge Outdoor Unit
- V Top Discharge Outdoor Unit
- S Centrifugal Fan Outdoor Unit

O Outdoor unit

Midea

4. Features

- 4.1. To meet Europe A level, actual EER/COP of new product with BLDC motors of indoor & outdoor unit and DC compressor will be higher than 3.4.
- 4.2. Low ambient kit is standard for outdoor units
- 4.3. Network control function is standard for the indoor units.
- 4.4. Standard auto restart function and follow me function.
- 4.5. Slim cassette with standard remote controller, wire controller and CCM for optional. Med Duct and HESP duct with standard wired controller, remote controller and CCM for optional.
- 4.6. Standard anti-cold air function.
- 4.7. Standard auto defrosting function.
- 4.8. Standard self-diagnose function.
- 4.9. Standard timer function and sleep mode function controlled by controller.

Part 2

Indoor Units

Super Slim Cassette Type.....	7
Duct Type.....	20
Ceiling & Floor Type	35
New Four-way Cassette Type (Compact).....	44
Console Type	53


Super Slim Cassette Type

1. Features	8
2. Dimensions.....	12
3. Service Space	13
4. Wiring Diagrams.....	14
5. Electric Characteristics	15
6. Sound Levels.....	16
7. Accessories	17
8. The Specification of Power.....	18
9. Field Wiring	19

1. Features

1.1 Overview


- Compact design, super slim body size, less space requiring in installation
- Each louver can be separately controlled, more comfort air blowing is possible.
- Auto-lifting panel design, more convenient to clean and maintain the filter. (optional)

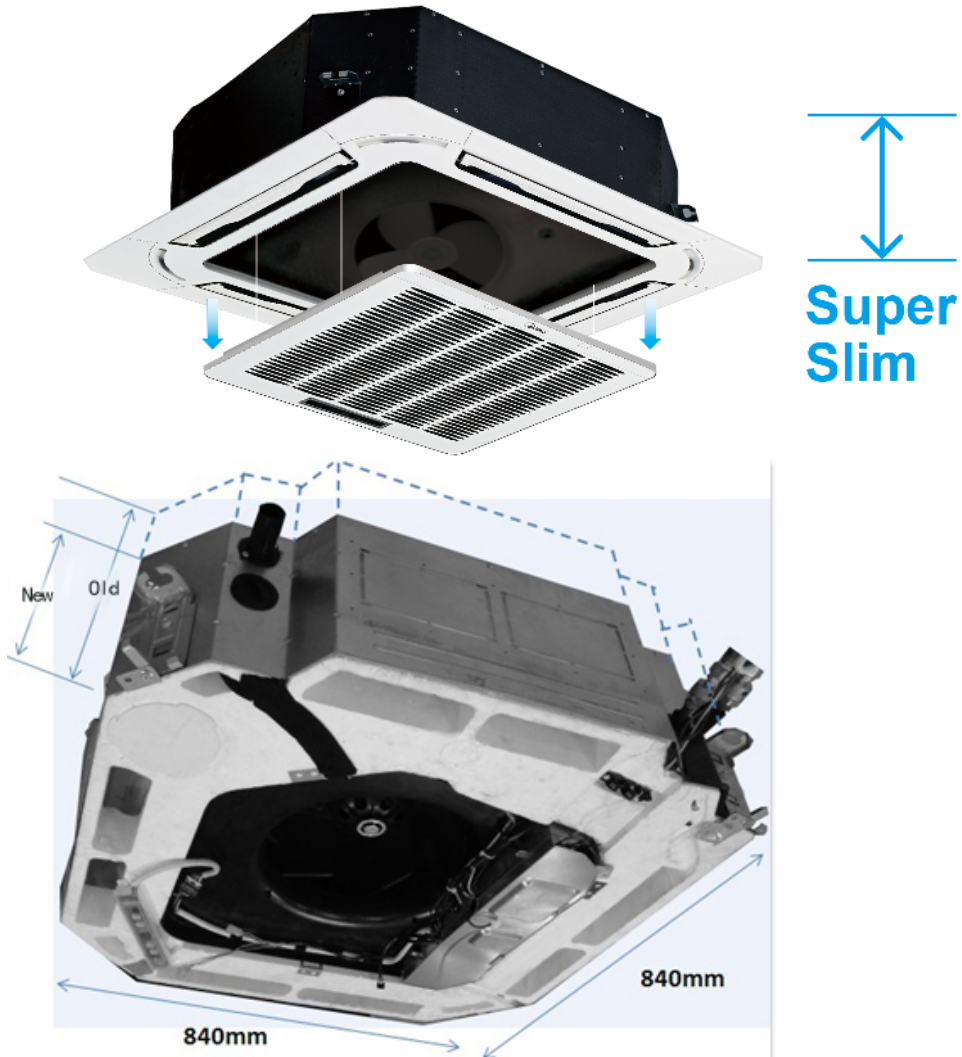

	Old Cassette	New Slim Cassette	Reduction
18K-24K	840*230*840	840*205*840	11%↓
30K	840*300*840	840*205*840	32%↓
36K-48K	840*300*840	840*245*840	18%↓
60K	840*300*840	840*287*840	4%↓


1.2 Fresh air intake function

- Fresh air fulfills air quality more healthy and comfortable.
- Ventilation motor is optional to increase the effect of fresh air.

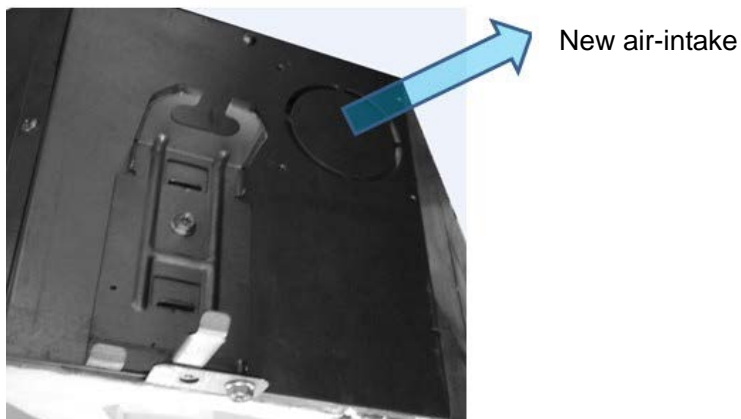

1.3 Optional ionizer generator

- Ionizer generator is optional to get refreshing air to your room.

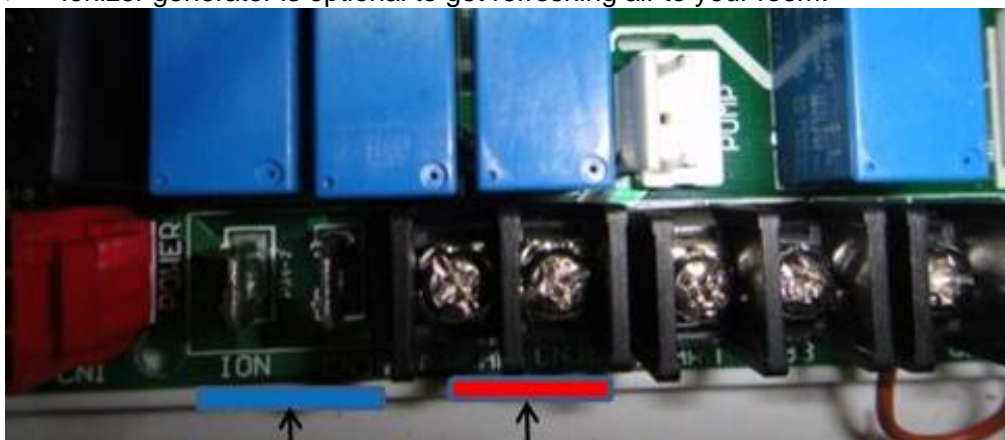


Ionizer generator connector Ventilation motor connector

- Ionizer can be switched on or off by remote controller. When pressing the Clean Air button on the remote controller, Ionizer will work and the indicator light on display board will shine.




1.4 External air duct design

- Reserve external air duct, more flexible for the air supply.

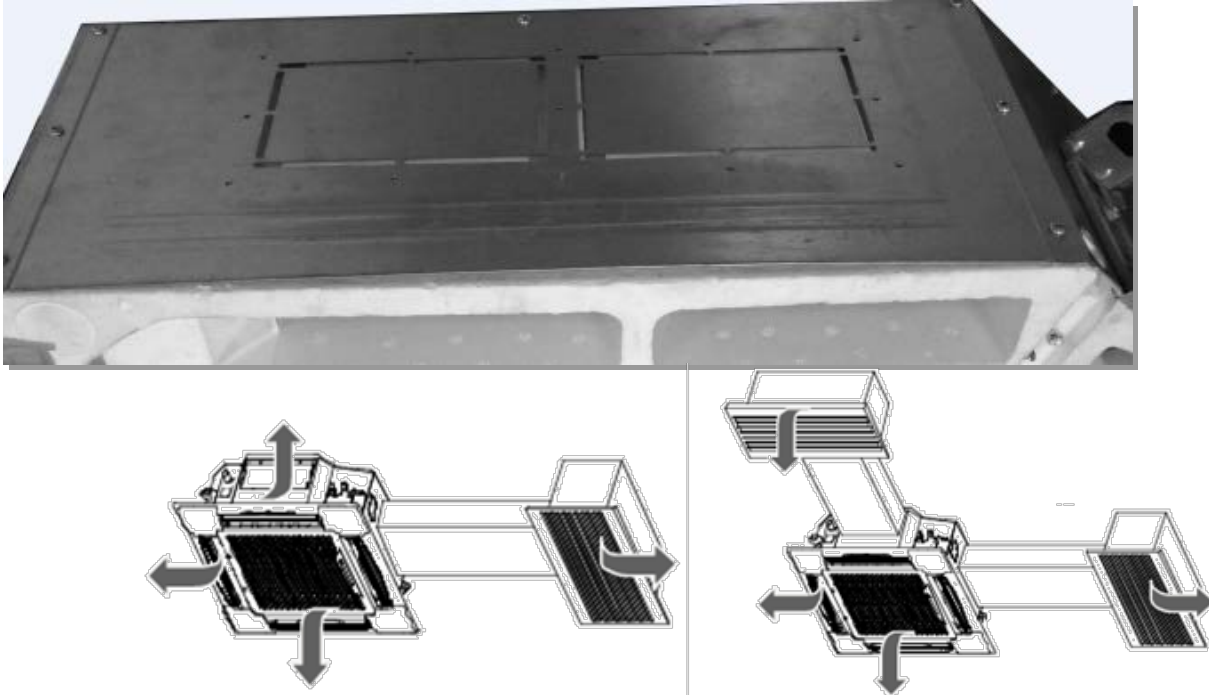


1.5 Built-in draining pump

- Due to the improvement of structure, more convenient to repair or replace the draining pump.

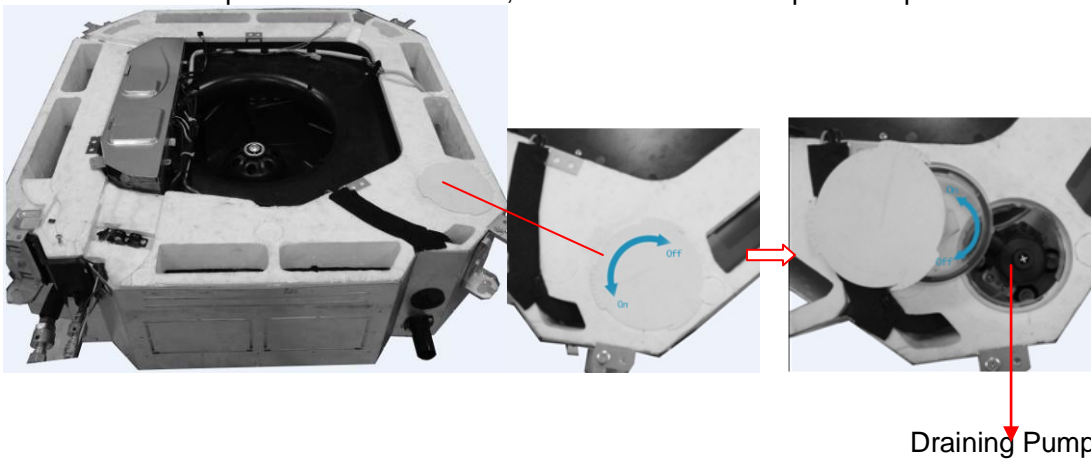


- Built-in draining pump to make sure condensed water drain out reliably.

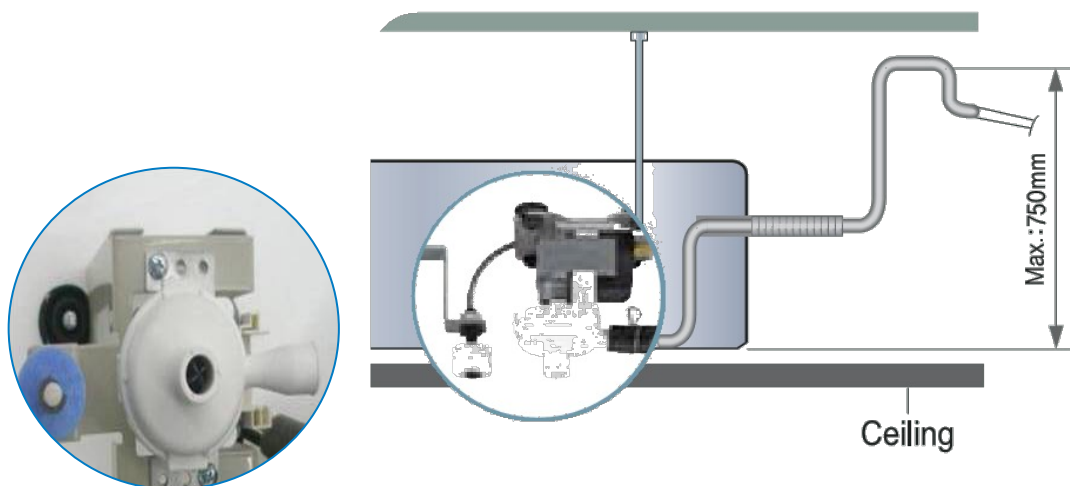

1.6 Terminals for alarm lamp and long-distance on-off controller connection are standard

- Reserve terminals for the connection of alarm lamp and long-distance on-off controller, more human control.

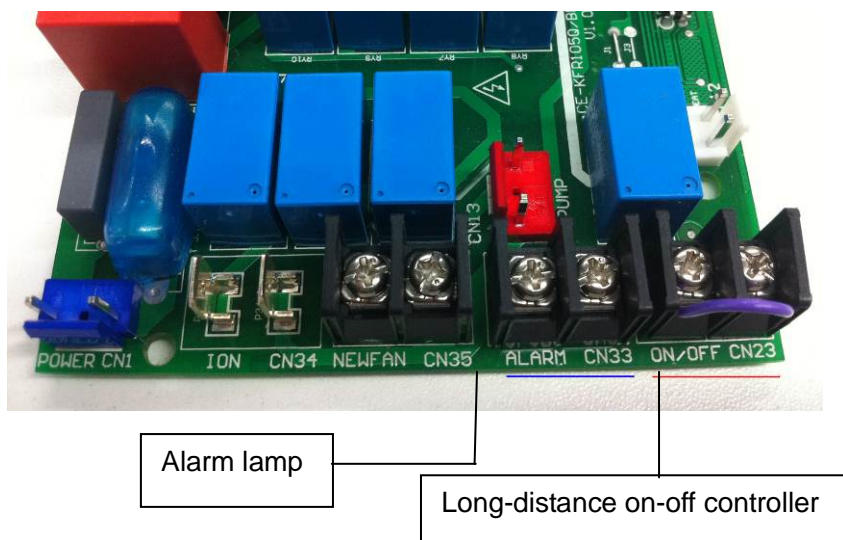


1.7 Optional touch screen wired controller

- Touch screen wired controller is optional, with error code indication function. Better man-machine conversation interface.
- Undated structure design, 4-way wire layout design, no raised part at backside, more convenient to place the wires and install the device.





1.8 Twins Combination(18k-30k)

- The units can be installed as Twin systems: one outdoor unit can connect with two indoor units. The indoor units can be combined in any of the different available ratings.

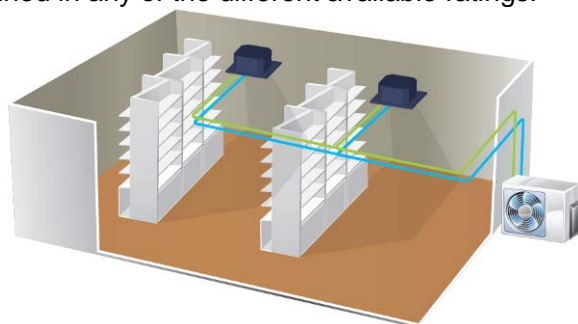


2. Dimensions

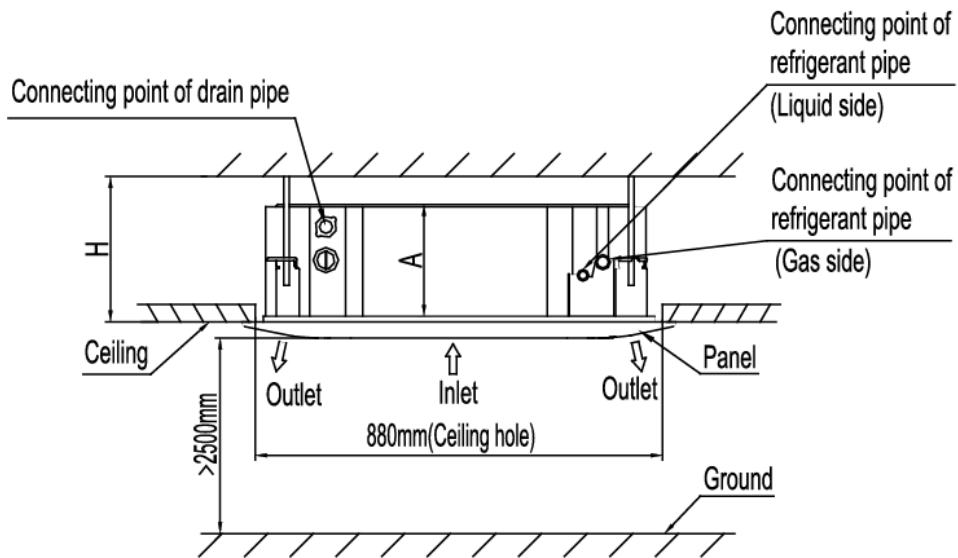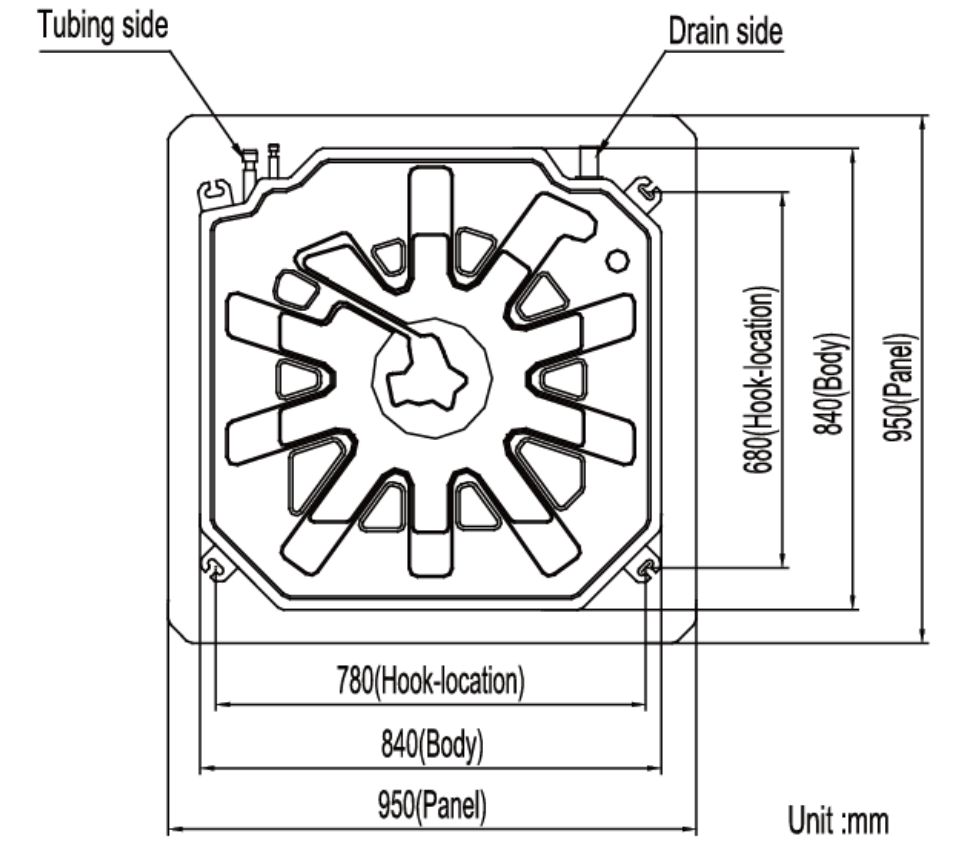


Model	A	H
KCD-18HRFN1-QRC4	205	>235
KCD-18HRFN1-QRC8	205	>235
KCD-24HRFN1-QRC4	205	>235
KCD-24HRFN1-QRC8	245	>275
KCD-30HRFN1-QRC8	245	>275
KCD-36HRFN1-QRC4	245	>275
KCD-36HRFN1-QRC8	245	>275

3. Service Space

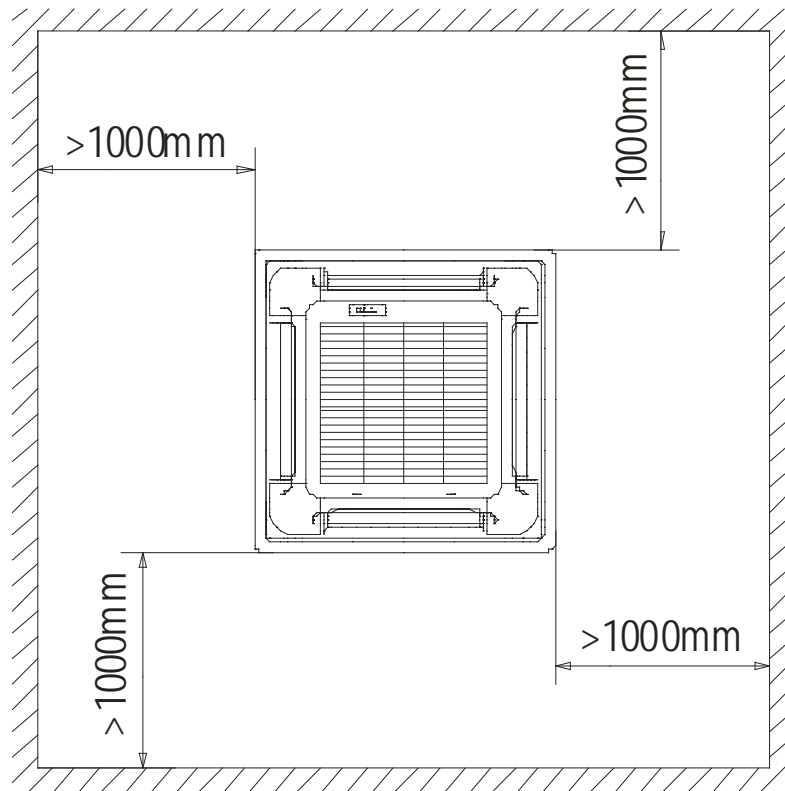

4. Wiring Diagrams

KCD-18HRFN1-QRC4 KCD-18HRFN1-QRC8 KCD-24HRFN1-QRC4 KCD-24HRFN1-QRC8
 KCD-30HRFN1-QRC8 KCD-36HRFN1-QRC4 KCD-36HRFN1-QRC8

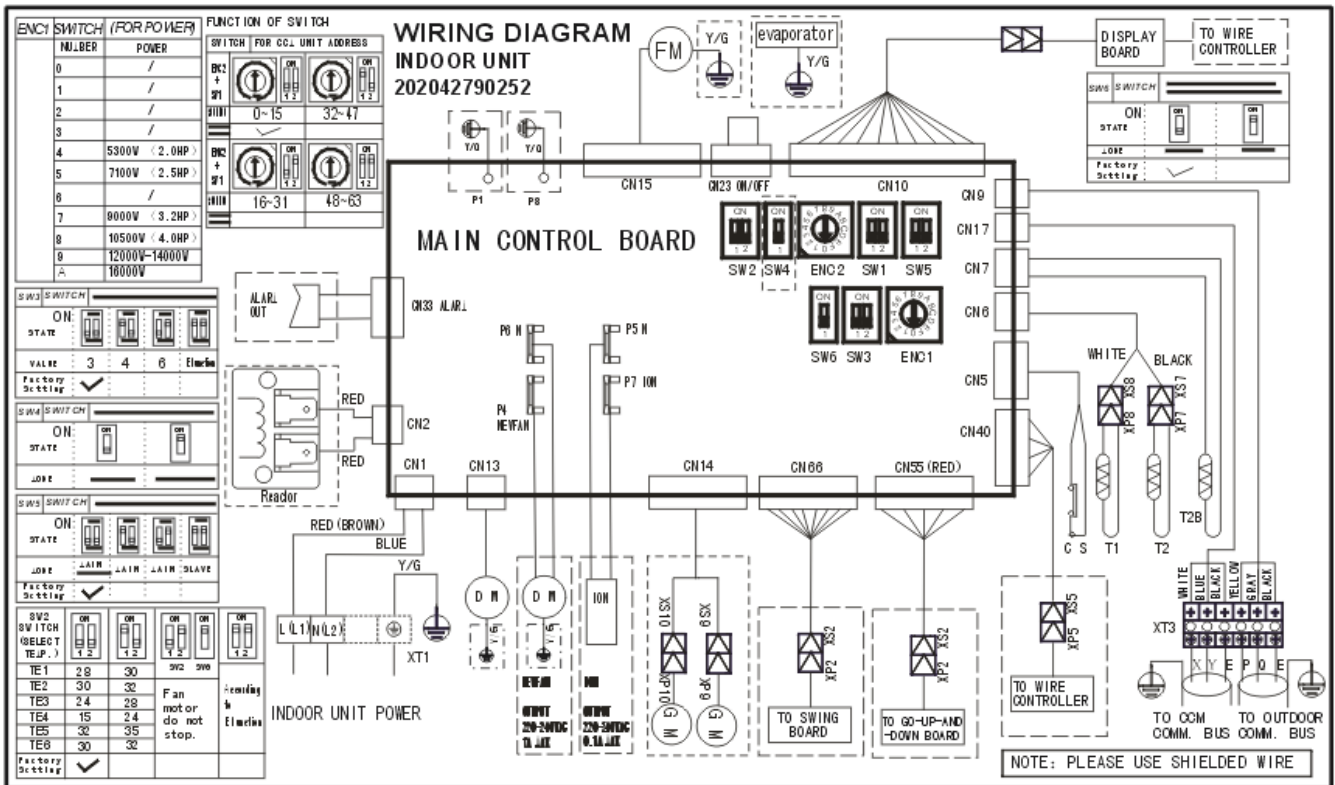


5. Electric Characteristics

Model	Indoor Unit				Power Supply
	Hz	Voltage	Min	Max	MFA
KCD-18HRFN1-QRC4	50	220-240	198	254	10
KCD-18HRFN1-QRC8	50	220-240	198	254	10
KCD-24HRFN1-QRC4	50	220-240	198	254	10
KCD-24HRFN1-QRC8	50	220-240	198	254	10
KCD-30HRFN1-QRC8	50	220-240	198	254	10
KCD-36HRFN1-QRC4	50	220-240	198	254	10
KCD-36HRFN1-QRC8	50	220-240	198	254	10

Notes:





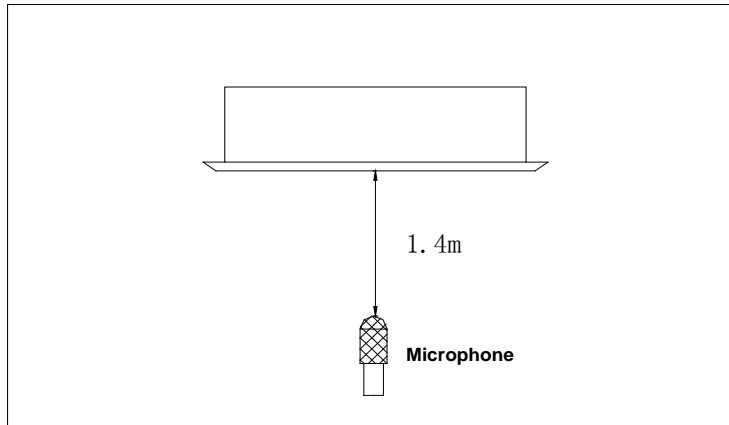











MFA: Max. Fuse Amps. (A)

6. Sound Levels



Model	Noise Power dB(A)	Noise level dB(A)		
		H	M	L
KCD-18HRFN1-QRC4	58	49	44	40
KCD-18HRFN1-QRC8	59	49	44	39
KCD-24HRFN1-QRC4	59	50	45	42
KCD-24HRFN1-QRC8	62	50	47	42
KCD-30HRFN1-QRC8	62	52	49	46
KCD-36HRFN1-QRC4	65	53	49	46
KCD-36HRFN1-QRC8	65	52	49	46


7. Accessories

	Name	Shape	Quantity
Installation Fittings	Installation paper board		1
Tubing & Fittings	Soundproof / insulation sheath		1
Drainpipe Fittings	Out-let pipe sheath		1
	Out-let pipe clasp		1
	Drain joint		1
	Seal ring		1
Remote controller & Its Frame (The product you have might not be provided the following accessories)	Remote controller & Its Frame		1
	Remote controller holder		1
	Mounting screw(ST2.9x10-C-H)		2
	Remote controller manual		1
	Alkaline dry batteries (AM4)		2
Others	Owner's manual		1
	Installation manual		1
Installation accessory (The product you have might not be provided the following accessories)	Expansive hook		4
	Installation hook		4
	Orifice		1

8. The Specification of Power

Model		18000-24000Btu/h	30000 Btu/h	36000 Btu/h	36000 Btu/h
INDOOR UNIT POWER	Phase	1-phase	1-phase	1-phase	1-phase
	Frequency and Voltage	220-240V, 50Hz	220-240V, 50Hz	220-240V, 50Hz	220-240V, 50Hz
	POWER WIRING (mm ²)	3×1.0	3×1.0	3×1.0	3×1.0
	CIRCUIT BREAKER / Fuse (A)	15/10	15/10	15/10	15/10
OUTDOOR UNIT POWER	Phase	1-phase	1-phase	1-phase	3-phase
	Frequency and Voltage	220-240V, 50Hz	220-240V, 50Hz	220-240V, 50Hz	380-420V, 50Hz
	POWER WIRING (mm ²)	3×2.5	3×2.5	3×4.0	5×2.5
	CIRCUIT BREAKER / Fuse (A)	30/20	40/30	40/30	30/20
Indoor/Outdoor Connecting Wiring (Weak Electric Signal) (mm ²)		3×0.5	3×0.5	3×0.5	3×0.5
Indoor/Outdoor Connecting Wiring (Strong Electric Signal) (mm ²)		—————	—————	—————	—————

9. Field Wiring

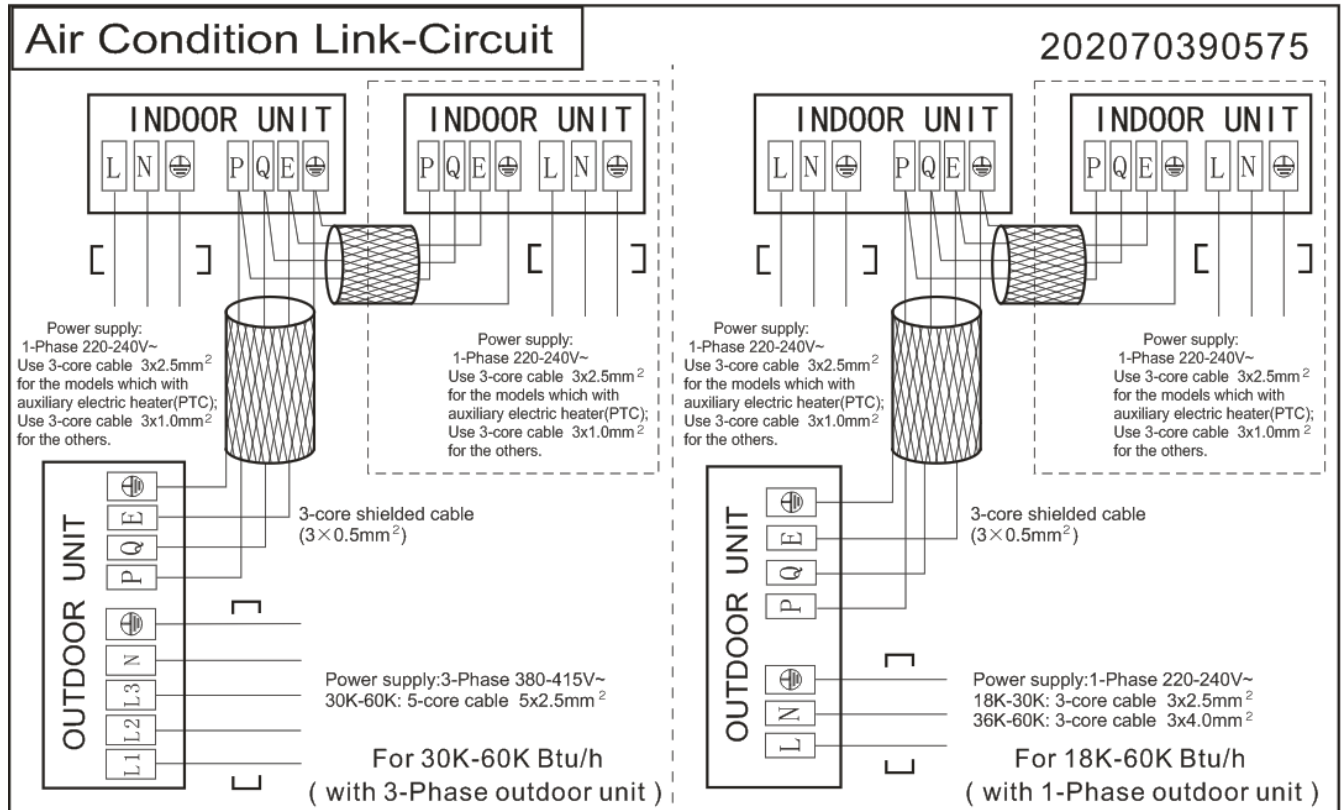


Duct Type

1. Features	21
2. Dimensions.....	24
3. Service Space.....	25
4. Wiring Diagrams.....	26
5. Static Pressure	28
6. Electric Characteristics	30
7. Sound Levels.....	31
8. Accessories	32
9. The Specification of Power.....	33
10. Field Wiring.....	34

1. Features


1.1 Installation accessories: (Optional)

- Front Board, Canvas Air Passage, Filter, Panel, for easy installation

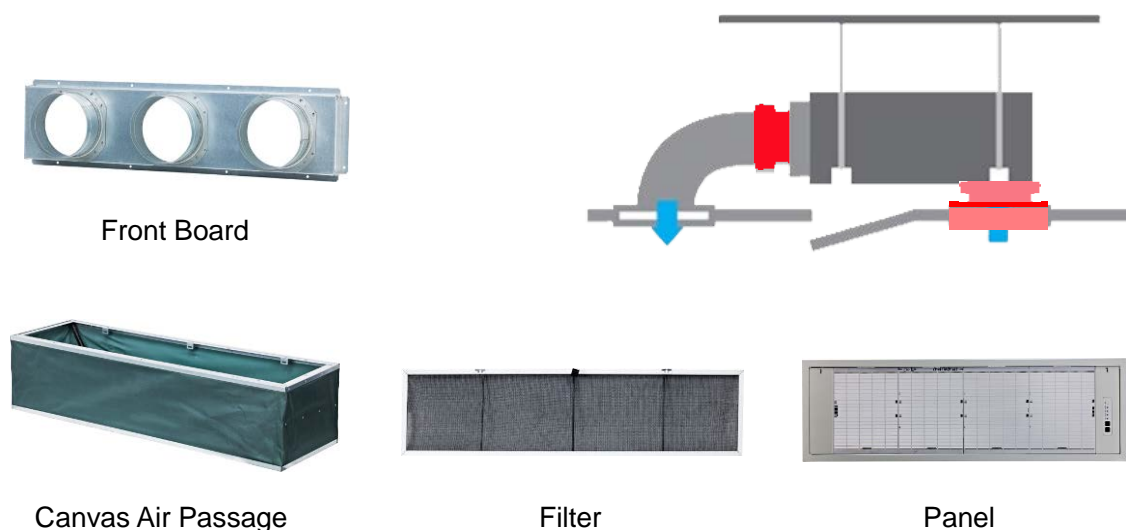


1.2 Easy Installation: Two air inlet styles (Bottom side or Rear side)

- Air inlet from rear is standard for all capacity; air inlet from bottom is optional.
- The size of air inlet frame from rear and bottom is same, it's very easy to move the cover from bottom to rear side, or from rear to the bottom, in order to matching the installation condition.

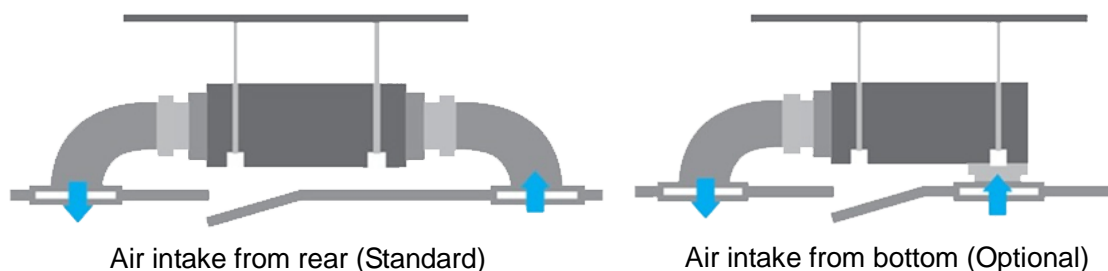


1.3 Fresh air intake function(Optional for 18~60k)

- Install one duct from the reserved fresh-air intake to outdoor. Continually inhale the fresh air to improve the quality of the indoor air, fulfills air quality more healthy and comfortable.

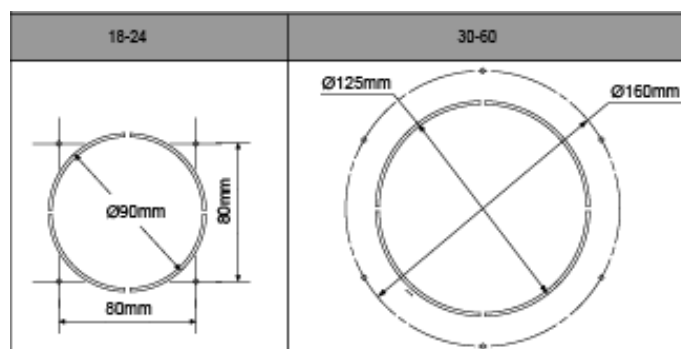


1.4 Easy maintenance

- Clean the filter (Optional, standard product without filter)
It is easy to draw out the filter from the indoor unit for cleaning, even the filter is installed in rear side or bottom side.

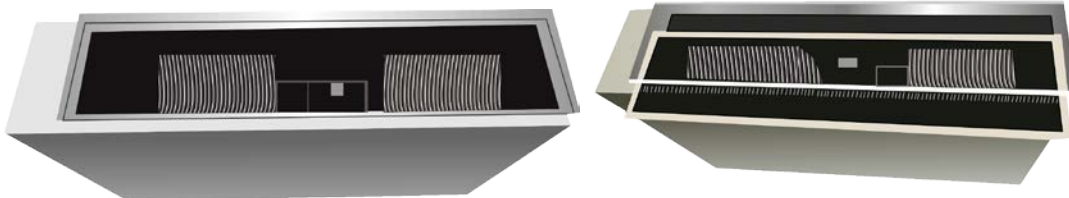


- Replace the motor or centrifugal fan
Remove the ventilated panel firstly. Remove a half of blower housing and take out the motor with centrifugal fan. Directly remove two bolts, and then replace the motor or centrifugal fan easily.

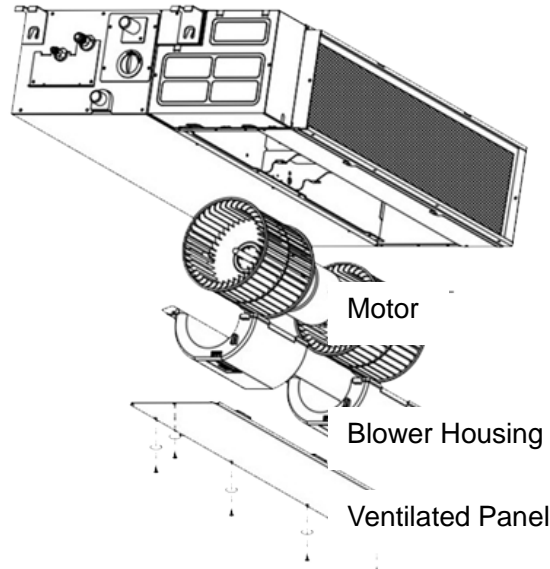

1.5 Reserved remote on-off and central control ports



- Reserved remote on-off ports and central control ports, can connect the cable of an on-off controller or a central controller to realize remote on-off control function or group control function.

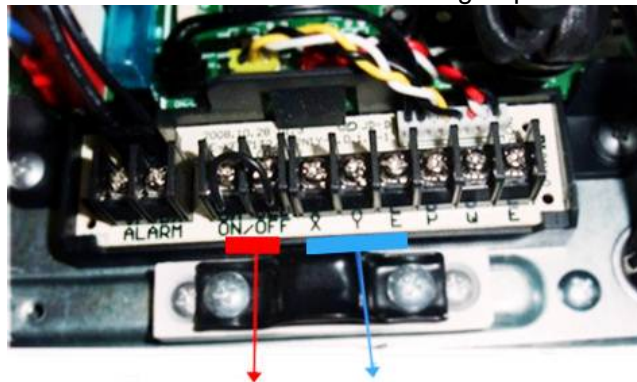

Remote on-off ports Central control ports

1.6 Built-in drain pump (Optional):


- Built-in drain pump can lift the water to 750mm upmost. It's convenient to install drainage piping under most space condition.

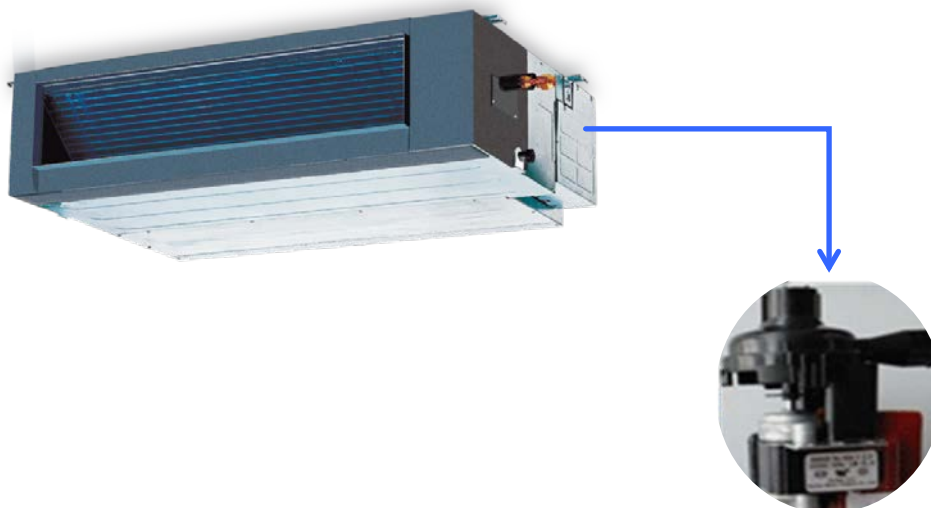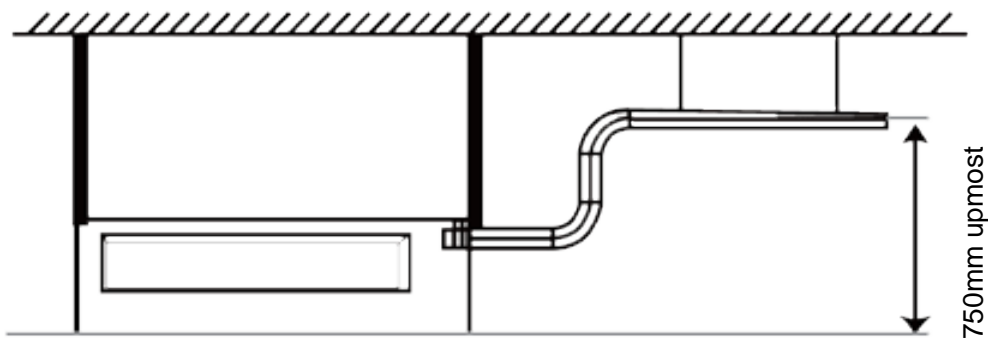


1.7 Built-in display board

- The standard indoor unit can be controlled by wired controller.
- There is a display board with a receiver in the E-box. Move out the display, and fix it in other place, even in the distance of 10m. The unit will realized remoter control.
- The wired controller and the display board can display the error code or production code when the chips detect some failure.

Wired Controller (Standard)

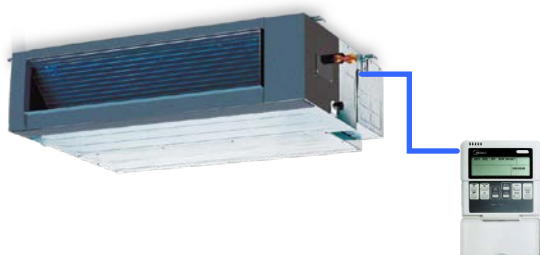


Remote Controller (Optional)



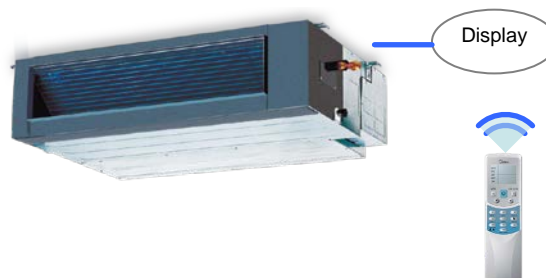


1.8 Twins Combination

- The units can be installed as Twin systems: one outdoor unit can connect with two indoor units. The indoor units can be combined in any of the different available ratings.

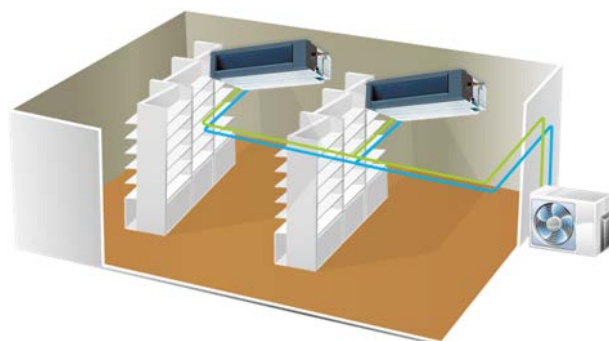


2. Dimensions

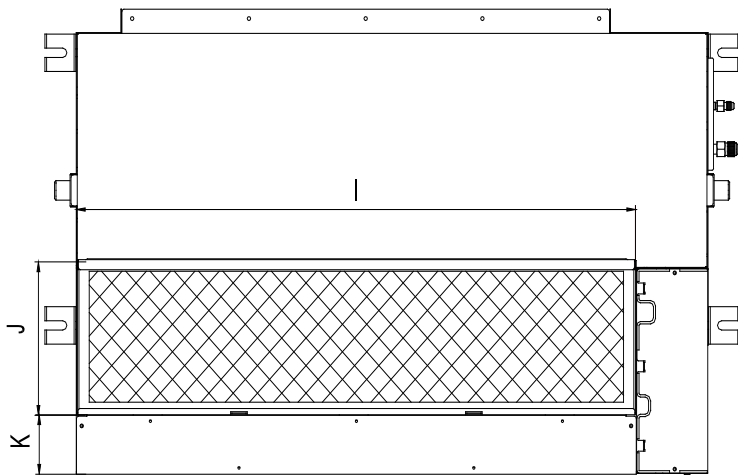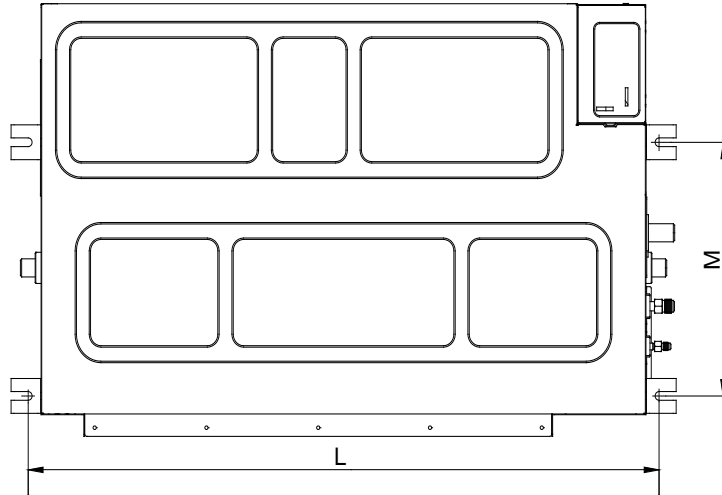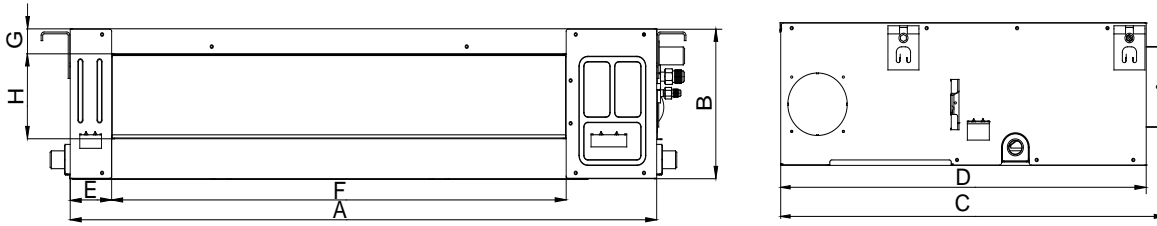


Capacity (KBtu)	Outline dimension(mm)				Air outlet opening size				Air return opening size			Size of outline dimension mounted plug	
	A	B	C	D	E	F	G	H	I	J	K	L	M
12	700	210	635	570	65	493	35	119	595	200	80	740	350
18/24	920	270	635	570	65	713	35	179	815	260	20	960	350
30/36	1140	270	775	710	65	933	35	179	1035	260	20	1180	490

3. Service Space

Ensure enough space required for installation and maintenance.

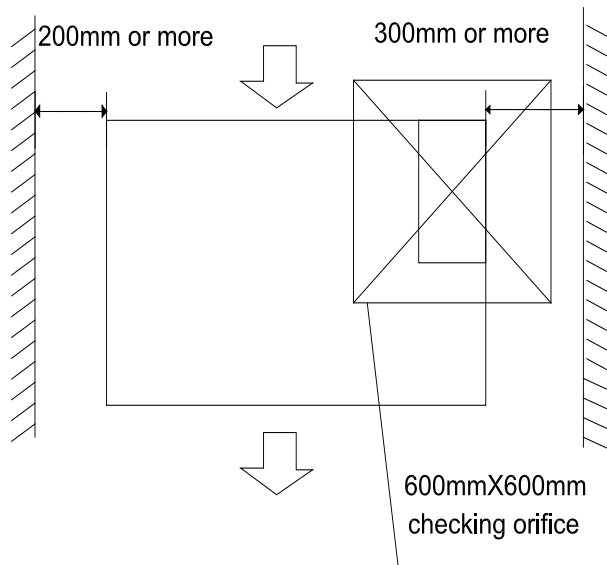


All the indoor units reserve the hole to joint the fresh air pipe. The hole size as following:

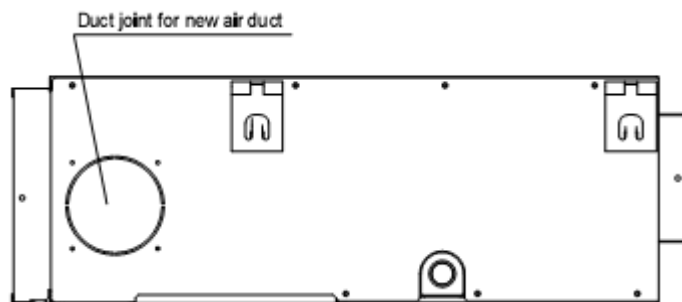

MODLE	
12-24	30-60
<p>Ø90mm</p> <p>80mm</p> <p>80mm</p>	<p>Ø125mm</p> <p>Ø160mm</p>

4. Wiring Diagrams

KTBU-12HWFN1-QRC8

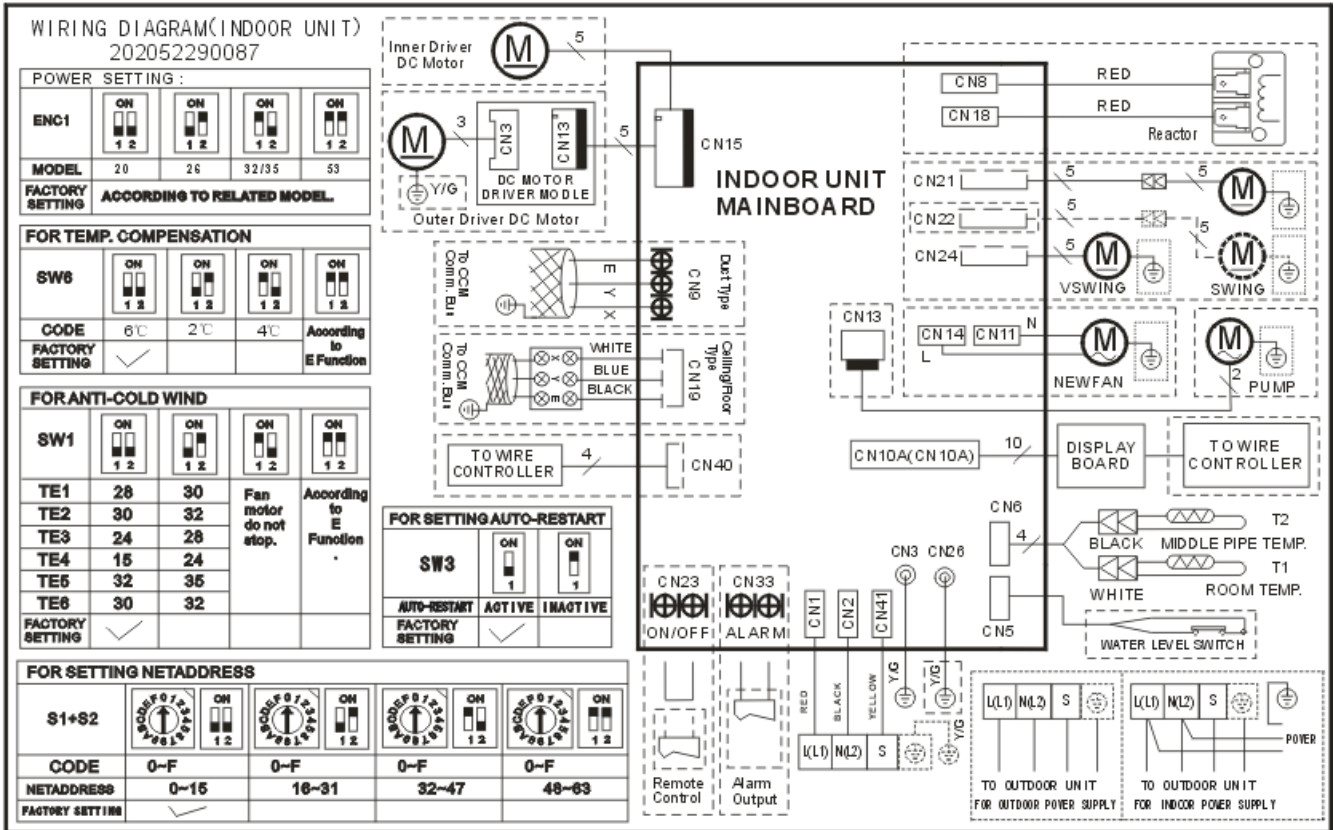


KTB-18HWFN1-QRC4
KTB-36HWFN1-QRC4

KTB-18HWFN1-QRC8(A)
KTB-36HWFN1-QRC8(A)


KTB-24HWFN1-QRC8

KTB-30HWFN1-QRC8

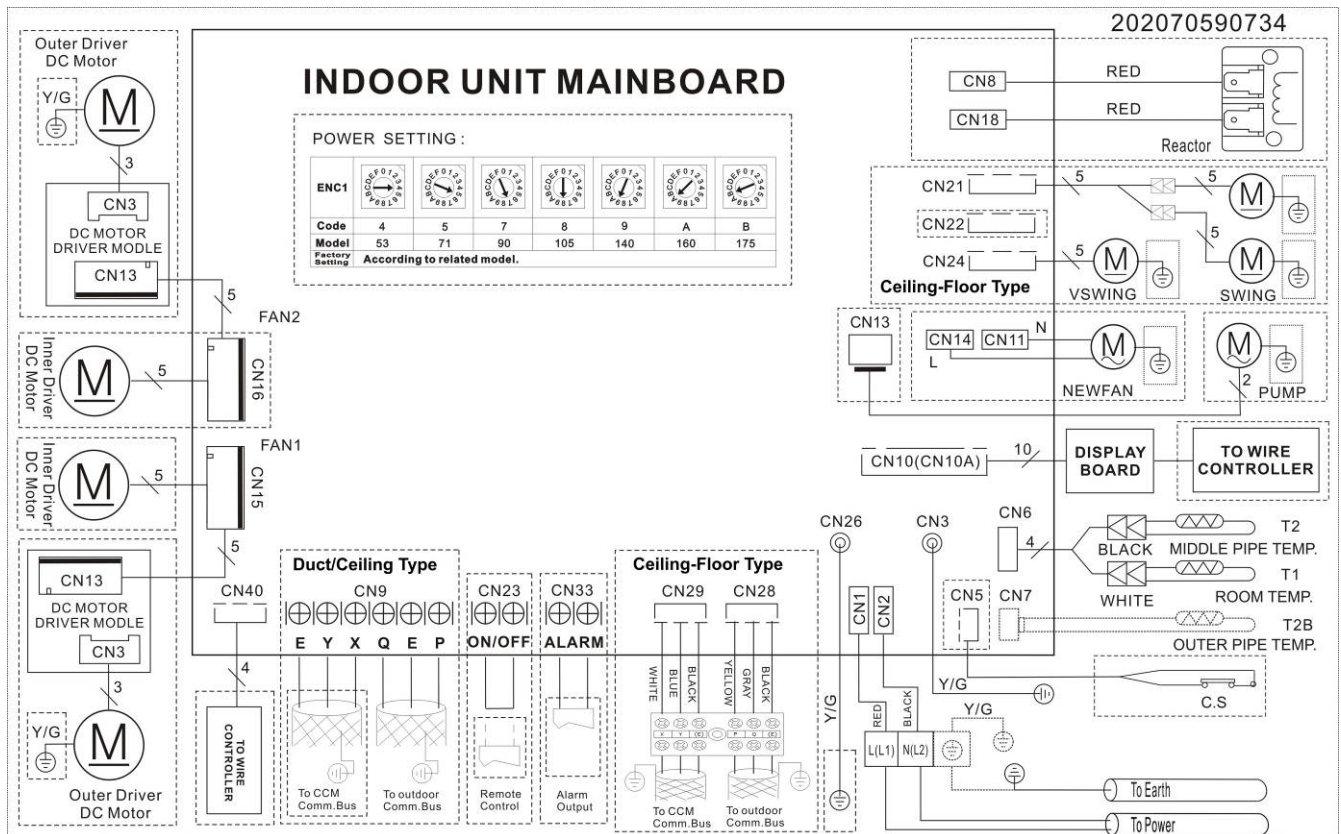

KTB-24HWDN1-QRC4

202070390580

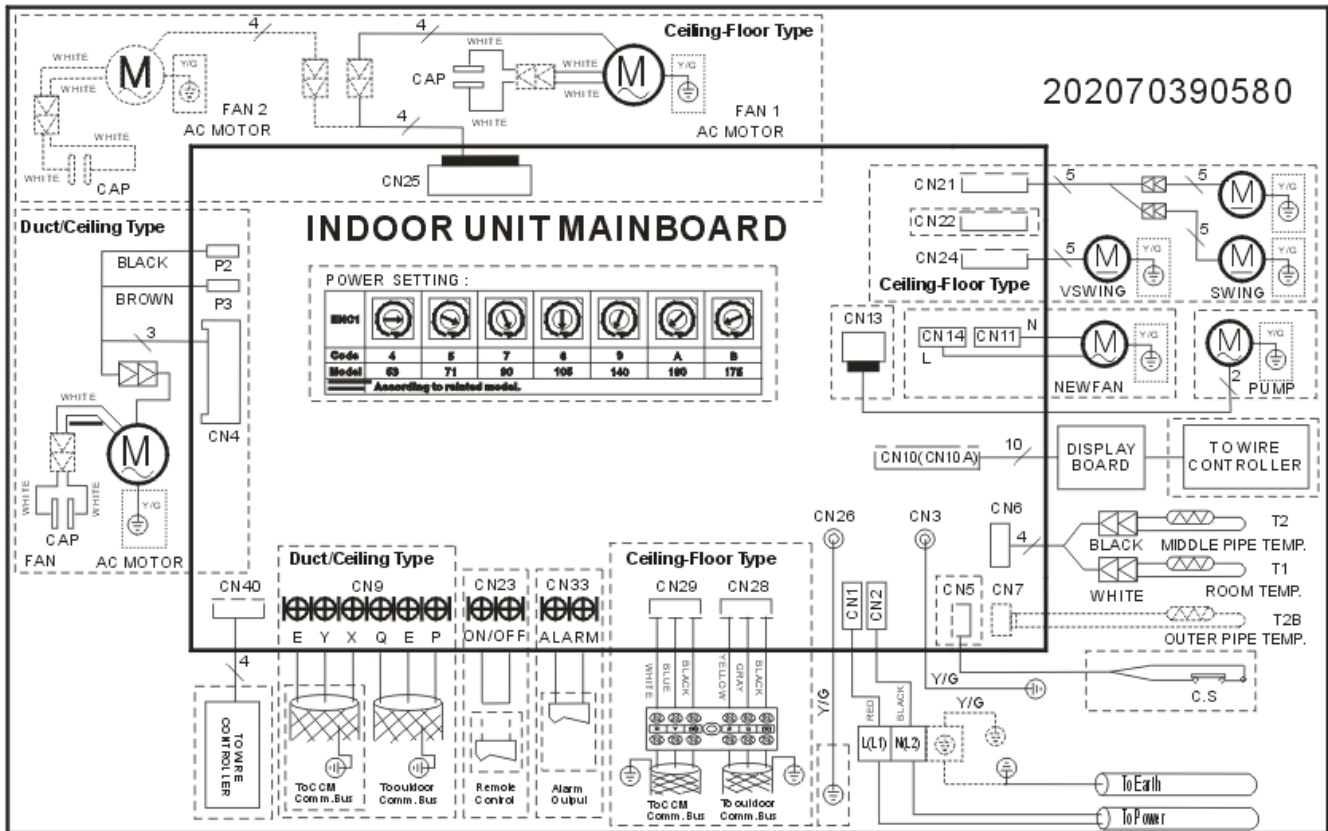


FOR SETTING POWER							FOR MAIN-SLAVE SETTING				
ENC1							SW1				
CODE	4	5	7	8	9	A	MODE	MAIN NO SLAVE	MAIN	MAIN	SLAVE
Power	53	71	90	105	140	160	FACTORY SETTING	<input checked="" type="checkbox"/>			
FACTORY SETTING ACCORDING TO RELATED MODEL.											
FOR SETTING NETADDRESS							FOR SETTING FAN MOTOR CONTROL THEN NO POWER REQUEST				
S1+S2							SW2				
CODE	0~F	0~F	0~F	0~F	0~F	0~F	MODE	FAN OFF	FAN ON		
NETADDRESS	0~15	16~31	32~47	48~63			FACTORY SETTING	<input checked="" type="checkbox"/>			
FACTORY SETTING <input checked="" type="checkbox"/>											
FOR SETTING STATIC PRESSURE							FOR TEMP. COMPENSATION				
ENC2							SW6				
Code	0	1	2	3	4			DUCT TYPE	3°C	4°C	6°C
HIGH STATIC PRESSURE	0~50	51~80	81~120	121~150	>150			CEILING AND FLOOR TYPE	1°C	4°C	6°C
MIDDLE STATIC PRESSURE	0~25	26~37	38~50	51~100	>100			FOR SETTING CEILING TYPE OR FLOOR TYPE	FLOOR TYPE	CEILING TYPE	According to E Function
FACTORY SETTING <input checked="" type="checkbox"/>							FACTORY SETTING <input checked="" type="checkbox"/>				
FOR SETTING AUTO-RESTART											
SW3											
AUTO-RESTART	ACTIVE	INACTIVE									
FACTORY SETTING <input checked="" type="checkbox"/>											


202070290383
FUNCTION SETTING INDICATION

5. Static Pressure


12,000Btu/h

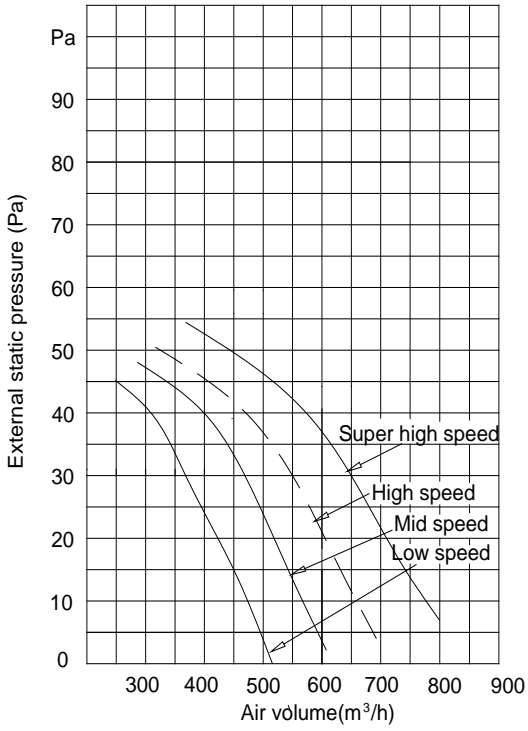


18,000Btu/h

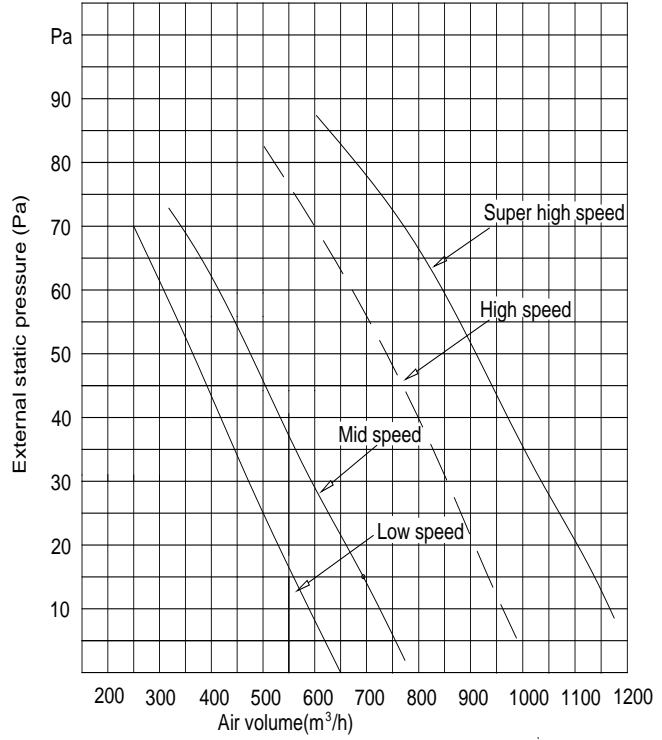


24,000Btu/h

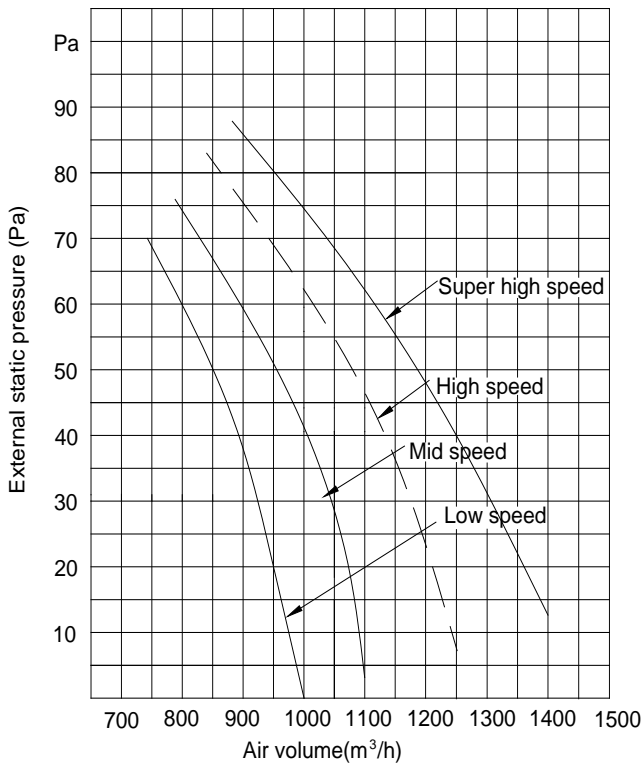

30,000Btu/h

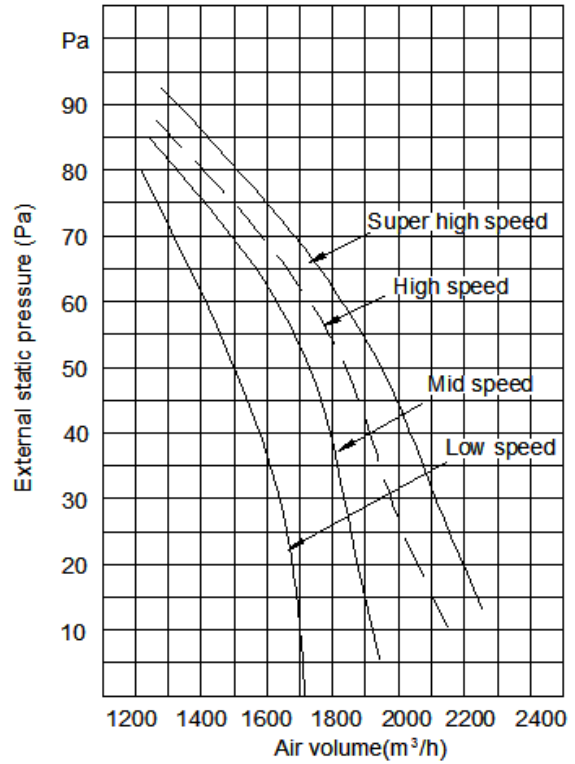

36,000Btu/h

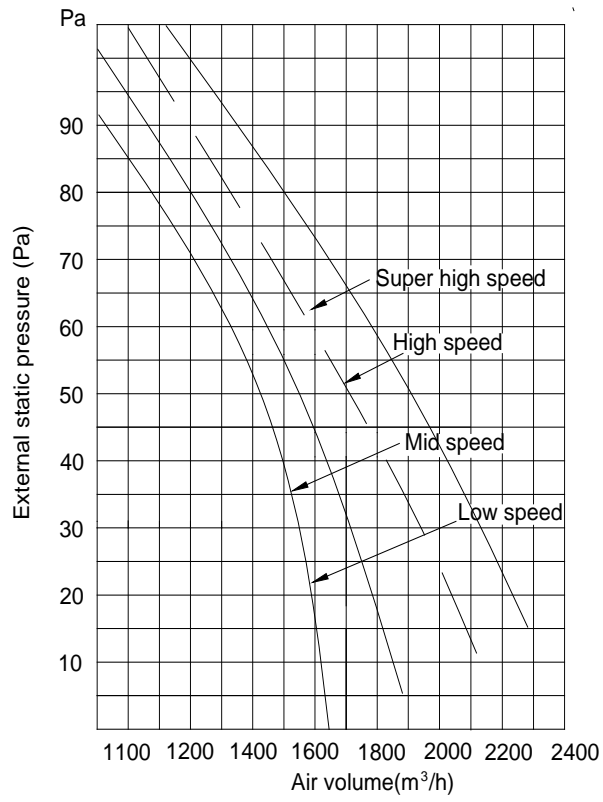


6. Electric Characteristics

Model	Indoor Unit				Power Supply
	Hz	Voltage	Min.	Max.	MFA
KTBU-12HWFN1-QRC8	50	220-240	198	254	16
KTB-18HWFN1-QRC4	50	220-240	198	254	10
KTB-18HWFN1-QRC8(A)	50	220-240	198	254	10
KTB-24HWDN1-QRC4	50	220-240	198	254	10
KTB-24HWFN1-QRC8	50	220-240	198	254	10
KTB-30HWFN1-QRC8	50	220-240	198	254	10
KTB-36HWFN1-QRC4	50	220-240	198	254	10
KTB-36HWFN1-QRC8(A)	50	220-240	198	254	10

Note:





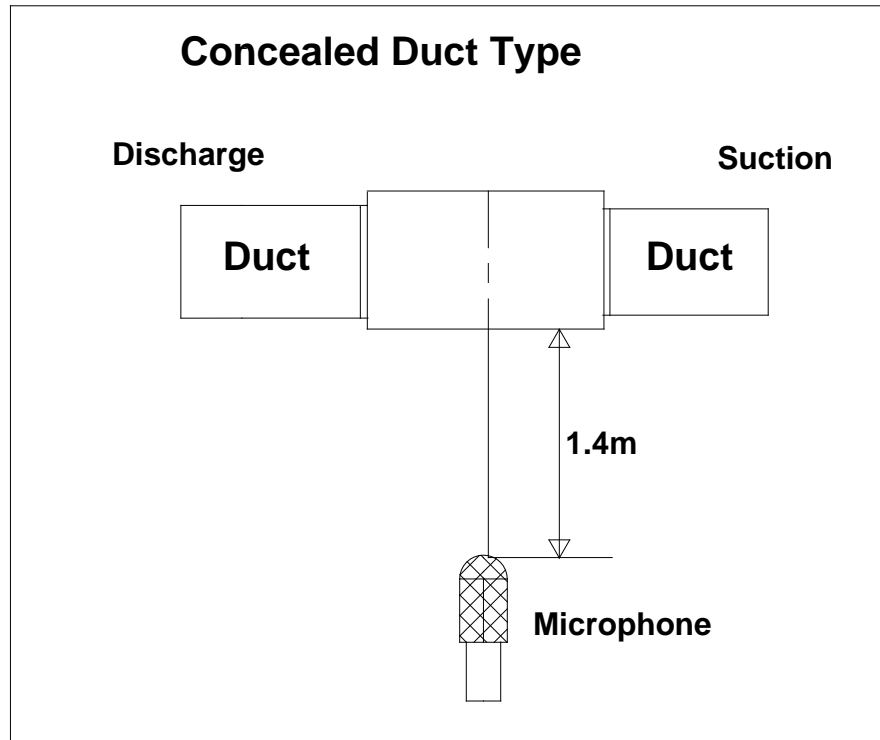




MFA: Max. Fuse Amps. (A)

7. Sound Levels



Model	Sound Power dB(A)	Noise level dB(A)		
		H	M	L
KTBU-12HWFN1-QRC8	59	41	38	36
KTB-18HWFN1-QRC4	59	46	43	41
KTB-18HWFN1-QRC8(A)	59	45	42	40
KTB-24HWDN1-QRC4	58	43	38	32
KTB-24HWFN1-QRC8	63	46	42	39
KTB-30HWFN1-QRC8	65	50	46	41
KTB-36HWFN1-QRC4	65	52	49	42
KTB-36HWFN1-QRC8(A)	62	46	43	40

8. Accessories


	Name	Shape	Quantity
Tubing & Fittings	Soundproof / insulation sheath		2
	Binding tape		1
	Seal sponge		1
Drainpipe Fittings (for cooling & heating)	Drain joint		1
	Seal ring		1
Wired controller & Its Frame	Wired controller		1
Others	Owner' s manual		1
	Installation manual		1
EMS & It's fitting	Magnetic ring (twist the electric wires L and N around it to five circles)		1

9. The Specification of Power


Model		12000 Btu/h	18000-24000Btu/h	30000 Btu/h	36000 Btu/h	36000 Btu/h
INDOOR UNIT POWER	Phase	—————	1-phase	1-phase	1-phase	1-phase
	Frequency and Voltage	—————	220-240V, 50Hz	220-240V, 50Hz	220-240V, 50Hz	220-240V, 50Hz
	POWER WIRING (mm ²)	—————	3×1.0	3×1.0	3×1.0	3×1.0
	CIRCUIT BREAKER/ Fuse (A)	—————	15/10	15/10	15/10	15/10
OUTDOOR UNIT POWER	Phase	1-phase	1-phase	1-phase	1-phase	3-phase
	Frequency and Voltage	220-240V, 50Hz	220-240V, 50Hz	220-240V, 50Hz	220-240V, 50Hz	380-420V, 50Hz
	POWER WIRING (mm ²)	3×1.5	3×2.5	3×2.5	3×4.0	5×2.5
	CIRCUIT BREAKER/ Fuse (A)	20/16	30/20	40/30	40/30	30/20
Indoor/Outdoor Connecting Wiring(Weak Electric Signal) (mm ²)		—————	3×0.5	3×0.5	3×0.5	3×0.5
Indoor/Outdoor Connecting Wiring(Strong Electric Signal) (mm ²)		4×1.0	—————	—————	—————	—————

10. Field Wiring

KTBU-12HWFN1-QRC8

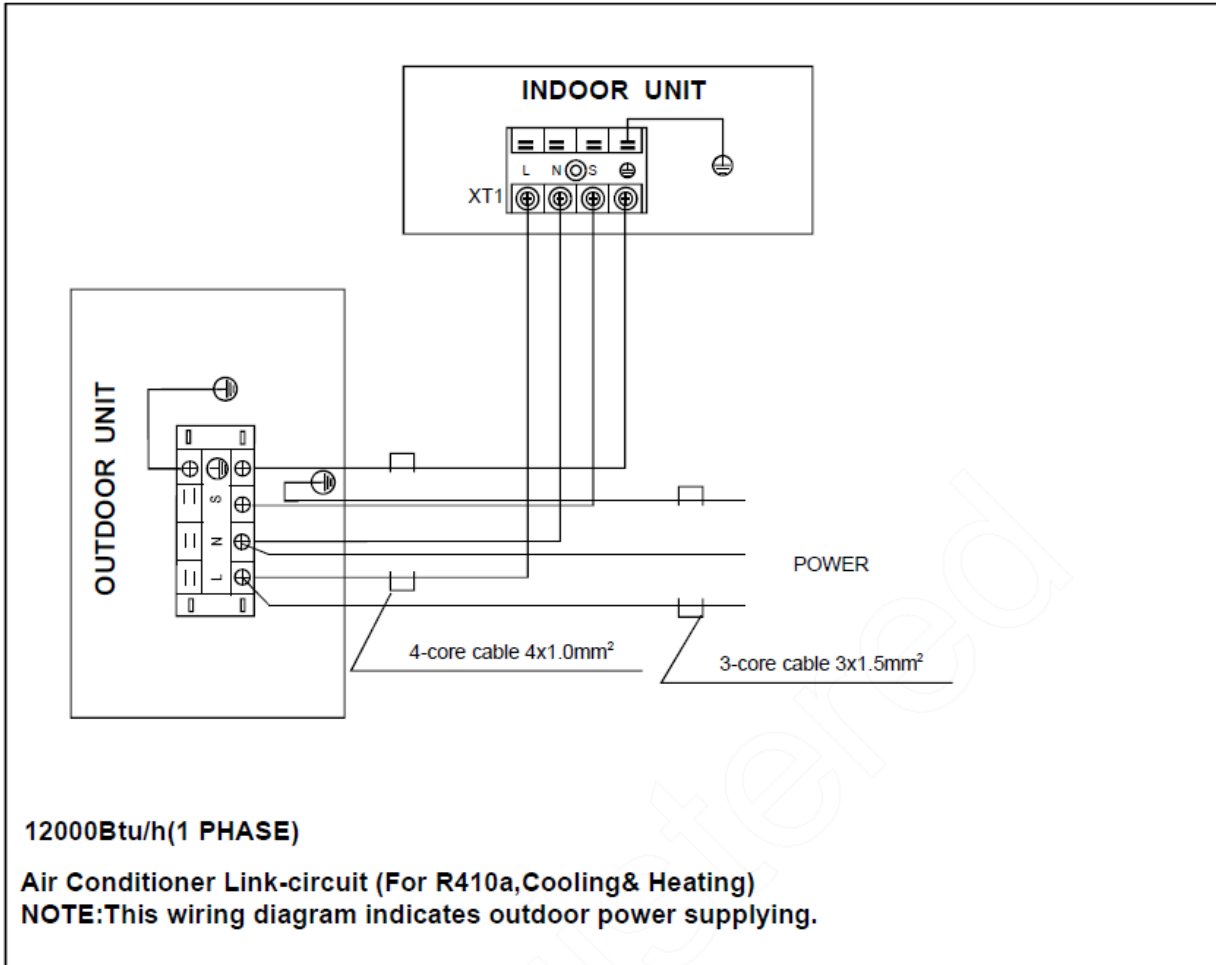

KTB-18HWFN1-QRC4、KTB-18HWFN1-QRC8(A)、KTB-24HWDN1-QRC4、KTB-24HWFN1-QRC8、KTB-30HWFN1-QRC8、KTB-36HWFN1-QRC4、KTB-36HWFN1-QRC8(A)

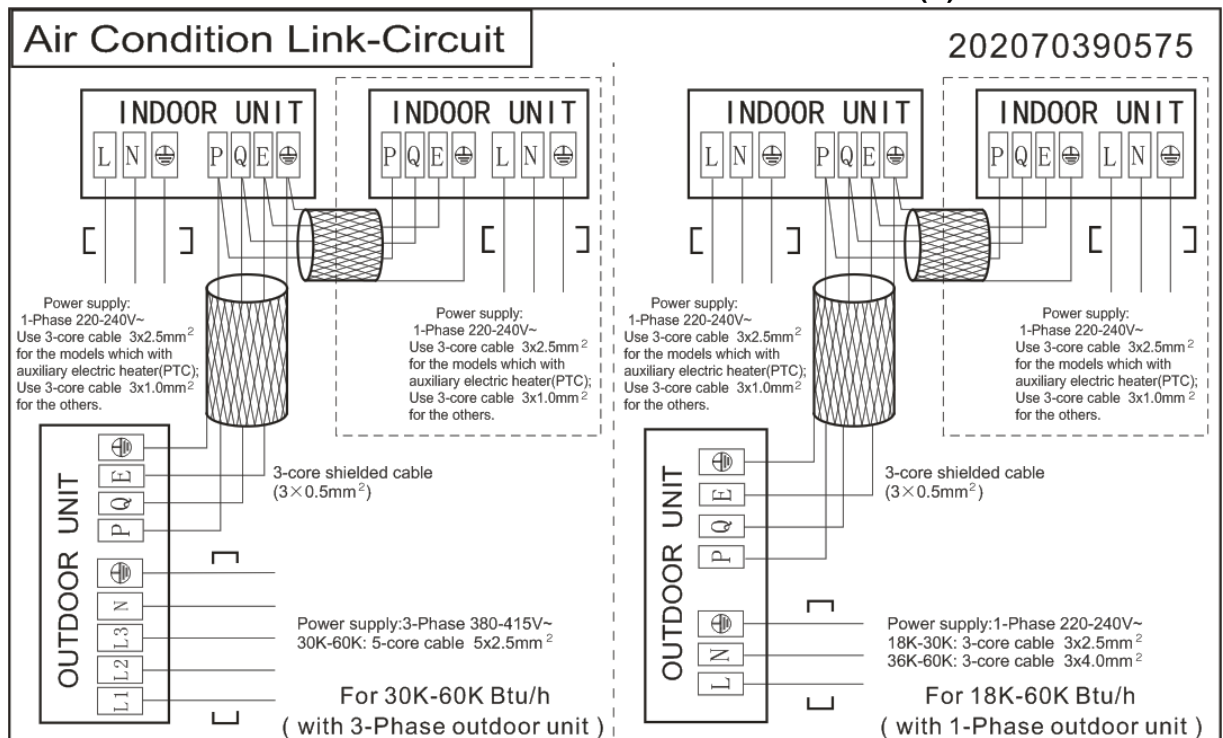

Ceiling & Floor Type

1. Features	36
2. Dimensions.....	37
3. Service Space.....	38
4. Wiring Diagrams	39
5. Electric Characteristics	41
6. Sound Levels.....	41
7. Accessories	42
8. The Specification of Power	42
9. Field Wiring	43

1. Features

- 1.1. New design, more modern and elegant appearance.
- 1.2.




1.2. Convenient installation

- The ceiling type can be easily installed into a corner of the ceiling even if the ceiling is very narrow
- It is especially useful when installation of an air conditioner in the center of the ceiling is impossible due to a structure such as one lighting.

1.3. Two direction auto swing (vertical & horizontal) and wide angle air flow,

- Air flow directional control minimizes the air resistance and produces wilder air flow to vertical direction.
- The range of horizontal air discharge is widened which secures wider air flow distribution to provide more comfortable air circulation no matter where the unit is set up

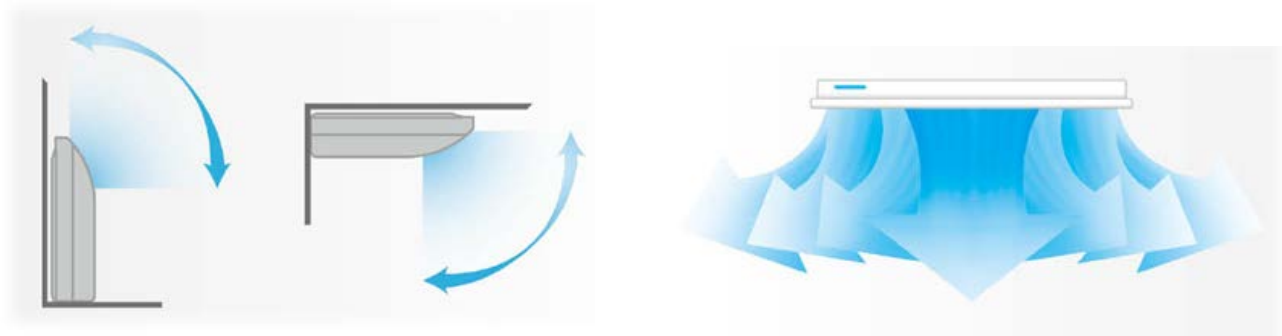

1.4. Three level fan speed, more humanism design, meets different air-supply requirement.


1.5. New foam drain pan with plastic-spraying inner surface



1.6. Easy operation.


1.7. Remote control and optional wired control method.

2. Dimensions

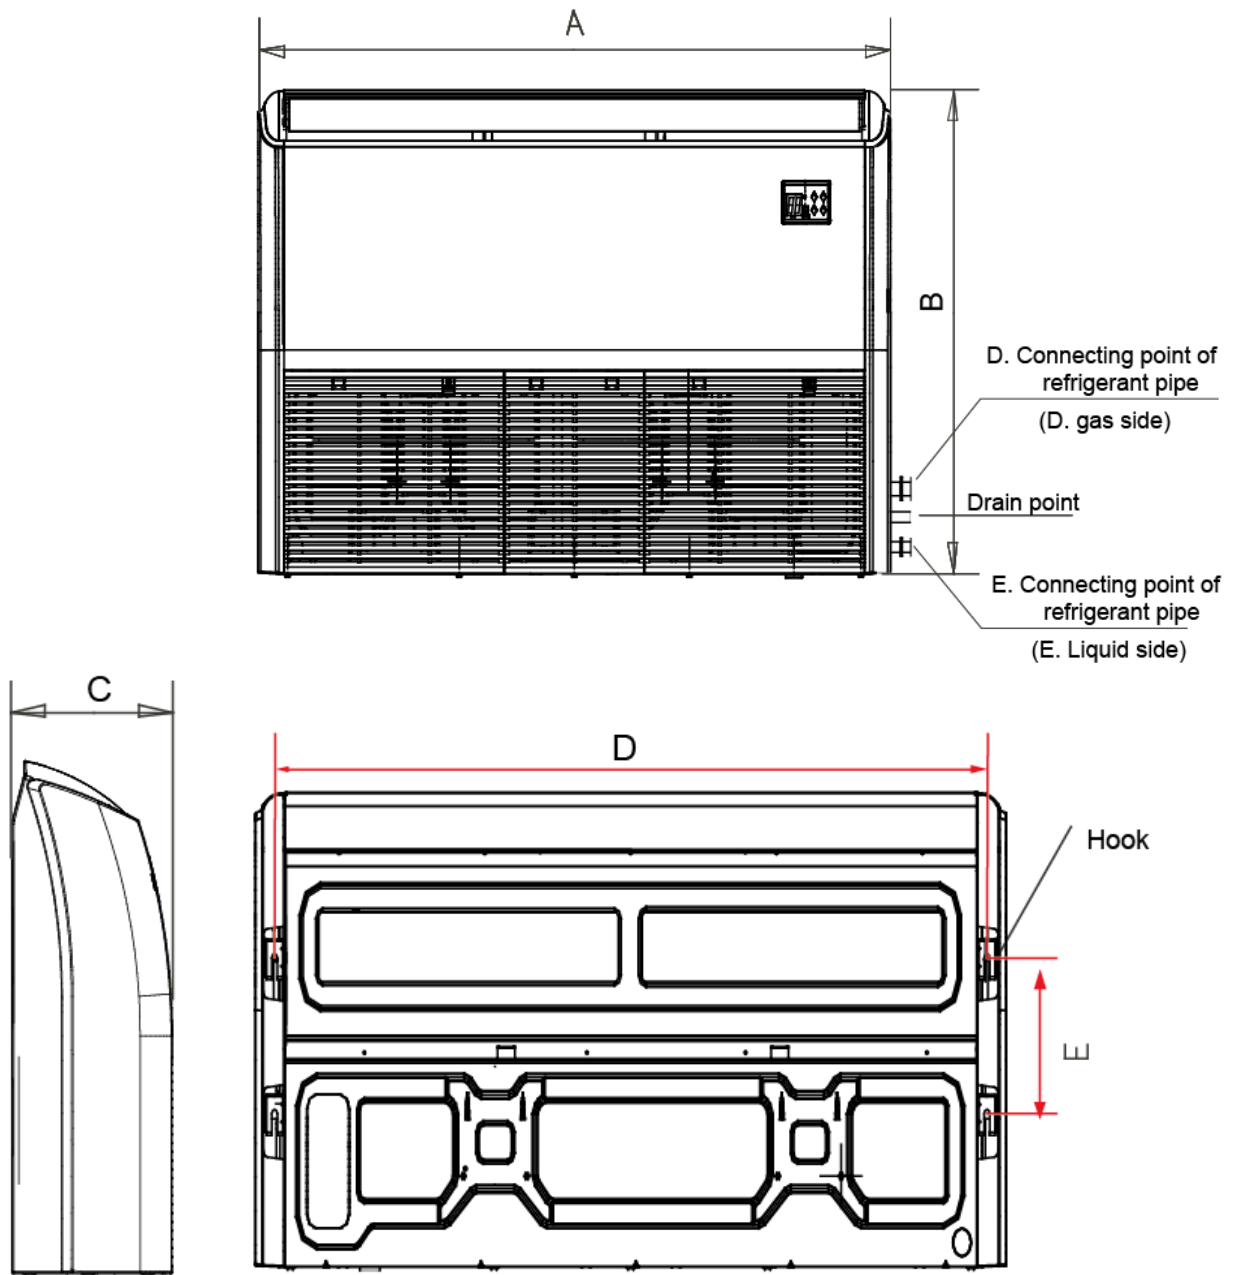


Capacity (Btu/h)	A	B	C	D	E
18K, 24K	1068	675	235	983	220
30K, 36K	1285	675	235	1200	220

3. Service Space

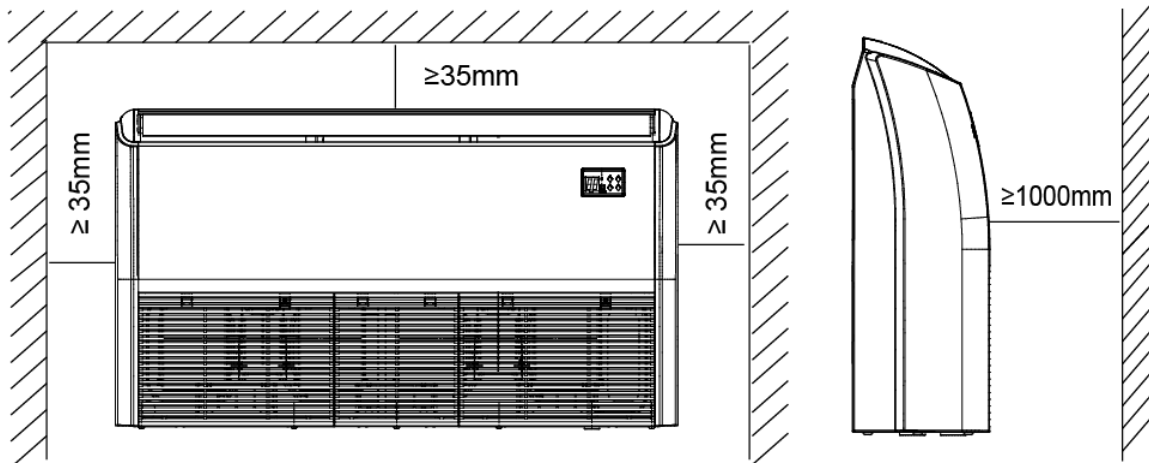


4. Wiring Diagrams


KUE-18HRFN1-QRC8 KUE-24HRFN1-QRC8 KUE-30HRFN1-QRC8 KUE-36HRFN1-QRC4

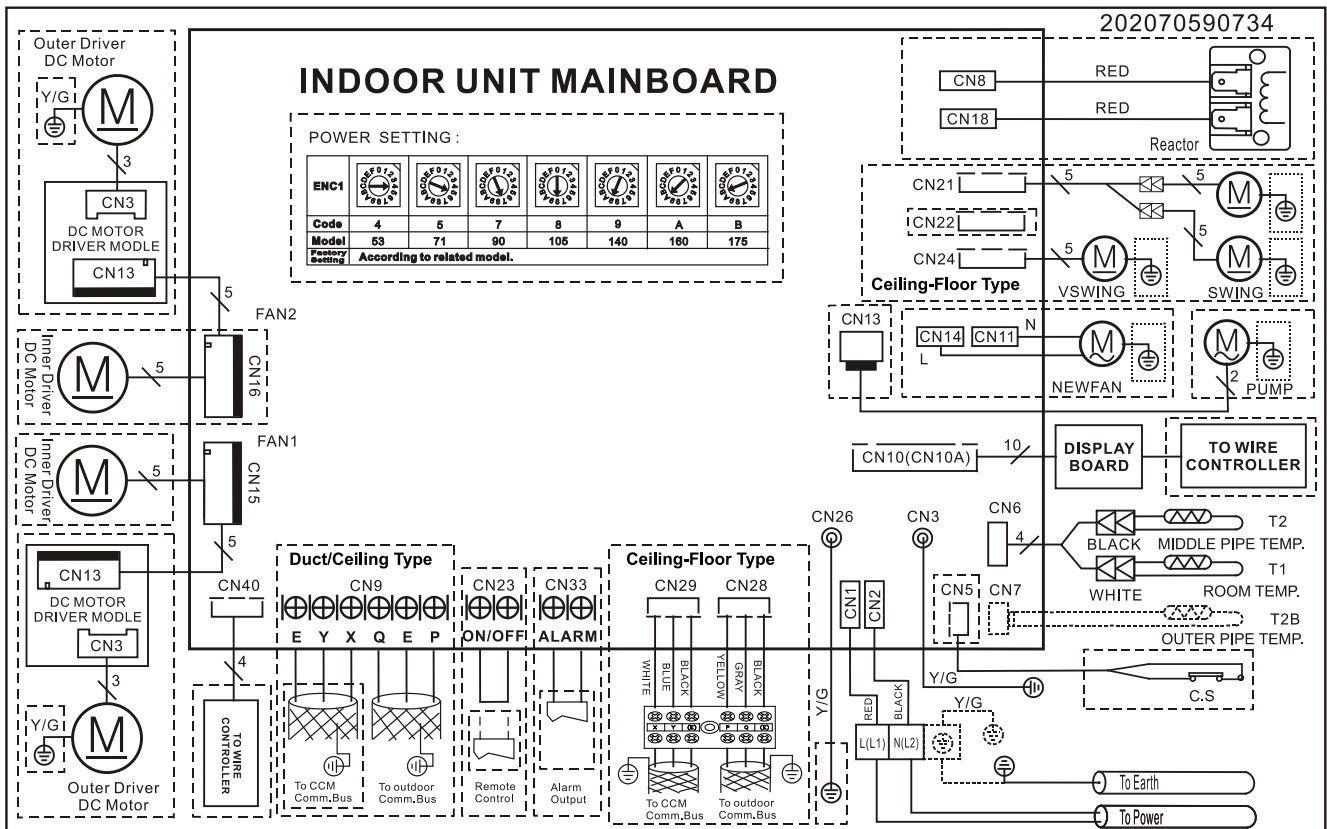

KUE-18HRDN1-QRC4 KUE-24HRDN1-QRC4

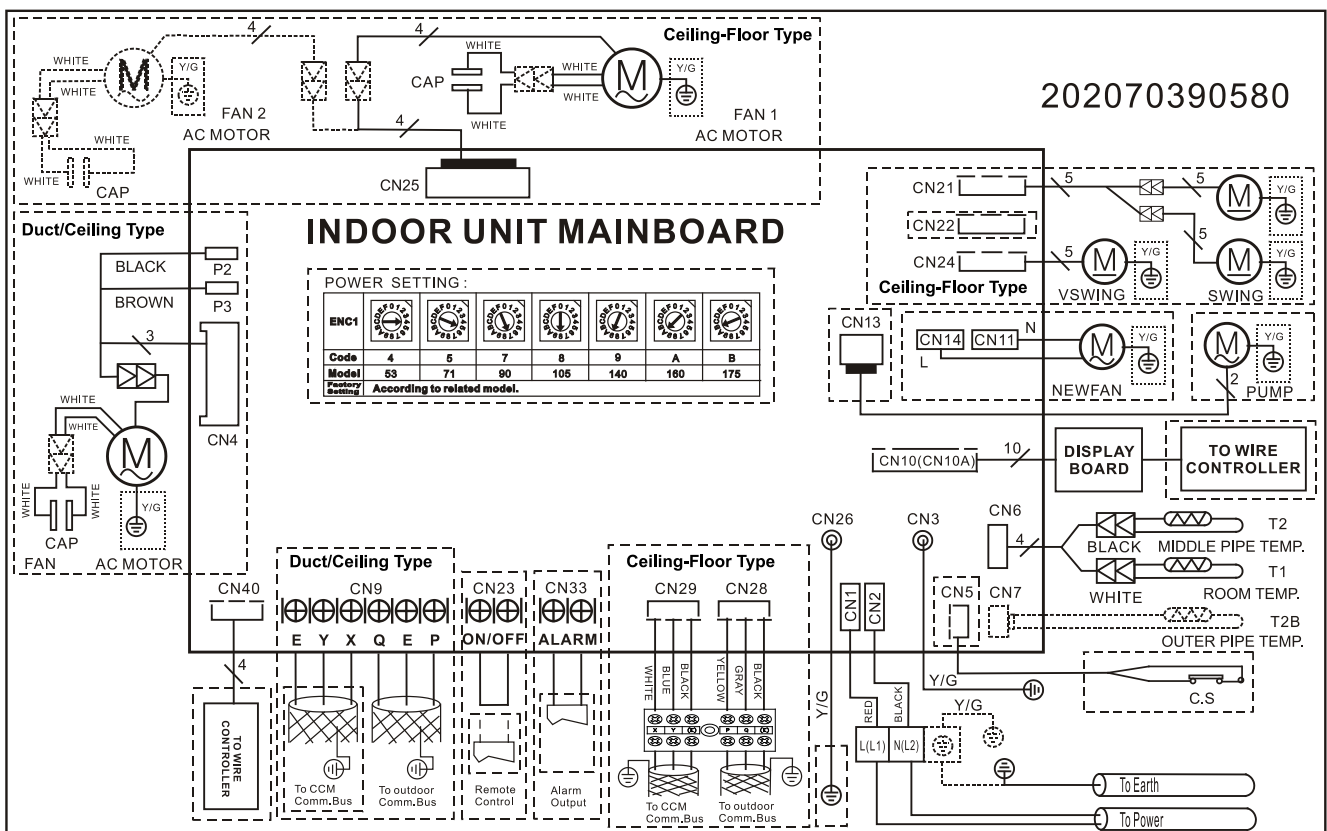

KUE-36HRFN1-QRC8(A)

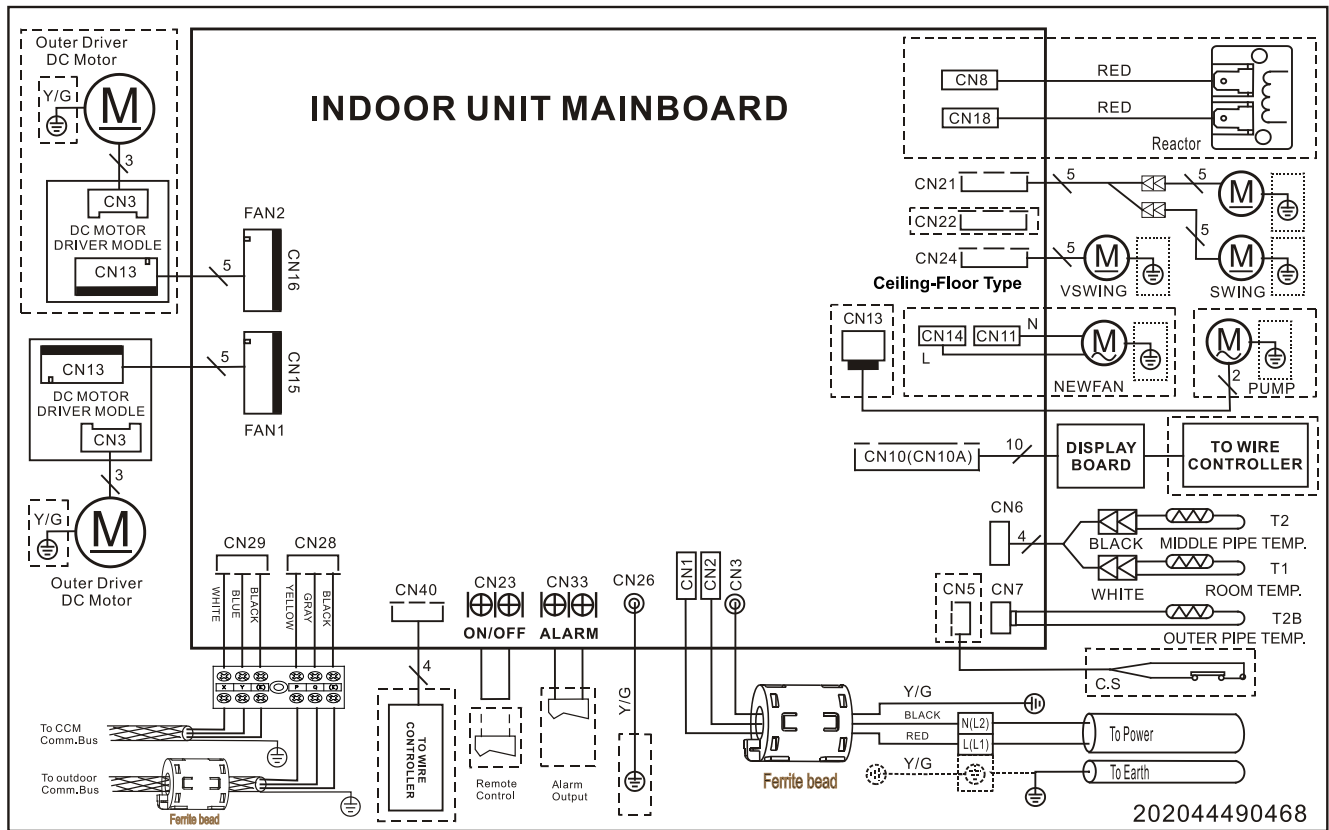

FUNCTION SETTING INDICATION

202070590737

S1+S2	Code	NETAddress	Factory Setting
0-F 00	0~F 00	0~15	✓
0-F 01	0~F 01	16~31	
0-F 10	0~F 10	32~47	
0-F 11	0~F 11	48~63	

ENC1	Code	POWER	Factory Setting
4	4	53	According to related model.
5	5	71	
7	7	90	
8	8	105	
9	9	140	
A	A	160	
B	B	175	

ENC2	Code	high static pressure	Middle static pressure	Factory Setting
0	0	0~50	0~25	✓
1	1	51~80	26~37	
2	2	81~120	38~50	
3	3	121~150	51~100	
4	4	>150	>100	

SW6	TYPE	DUCT TYPE	CEILING AND FLOOR TYPE	FLOOR TYPE	CEILING TYPE	Factory Setting
ON	/	3°C	1°C			✓
ON	/	4°C	4°C			
ON	/	6°C	6°C			
ON	/	According to E Function				

SW2	Mode	Factory Setting
ON	Fan OFF	✓
ON	Fan ON	

SW3	Mode	Factory Setting
ON	ON	✓
ON	OFF	

SW4	Mode	Factory Setting
ON	Single Fan	
ON	Double Fan	✓

SW1	SW2	Mode
ON	ON	Fan motor do not stop.
ON	OFF	According to E Function

TE	TE1	TE2	TE3	TE4	TE5	TE6
TE1	28	30				
TE2	30	32				
TE3	24	28				
TE4	15	24				
TE5	32	35				
TE6	30	32				


5. Electric Characteristics

Model	Indoor Units				Power Supply
	Hz	Voltage	Min.	Max.	MFA
KUE-18HRDN1-QRC4	50	220-240	198	254	10
KUE-18HRFN1-QRC8	50	220-240	198	254	10
KUE-24HRDN1-QRC4	50	220-240	198	254	10
KUE-24HRFN1-QRC8	50	220-240	198	254	10
KUE-30HRFN1-QRC8	50	220-240	198	254	10
KUE-36HRFN1-QRC4	50	220-240	198	254	10
KUE-36HRFN1-QRC8(A)	50	220-240	198	254	10


Note:

MFA: Max. Fuse Amps. (A)

6. Sound Levels

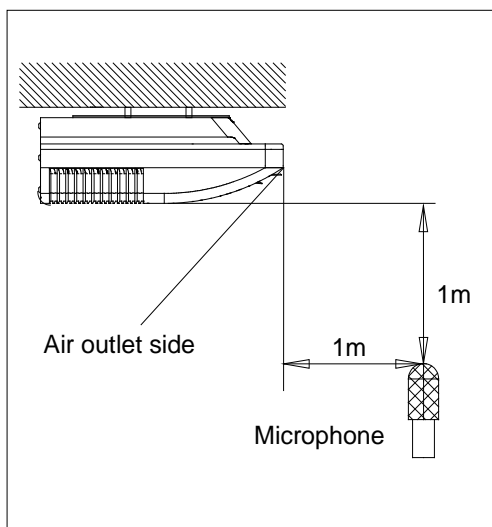

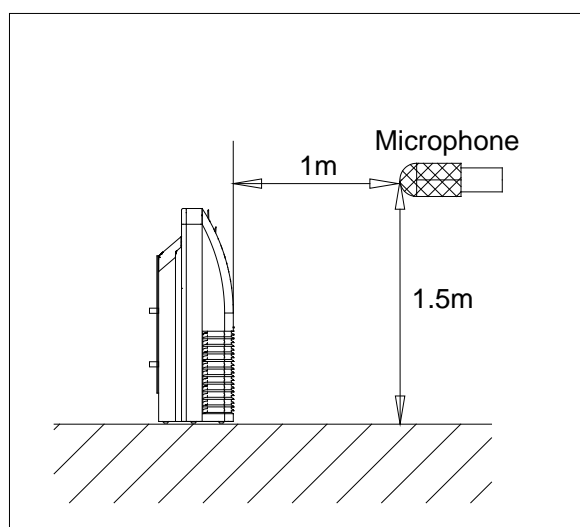






Ceiling



Floor

Model	Sound Power dB (A)	Noise level dB(A)		
		H	M	L
KUE-18HRDN1-QRC4	56	43	41	36
KUE-18HRFN1-QRC8	60	46	43	40
KUE-24HRDN1-QRC4	62	53	49	45
KUE-24HRFN1-QRC8	63	55	53	49
KUE-30HRFN1-QRC8	64	55	50	46
KUE-36HRFN1-QRC4	63	55	50	46
KUE-36HRFN1-QRC8(A)	65	55	50	45


7. Accessories

	Name	Shape	Quantity
Remote controller & Its holder(The product you have might not be provided the following accessories)	1. Remote controller		1
	2. Remote controller holder		1
	3. Mounting screw (ST2.9x10-C-H)		2
	4. Alkaline dry batteries (AM4)		2
Others	5. Owner's manual		1
	6. Installation manual		1
	7. Remote controller manual		1

8. The Specification of Power

Model		18000-24000Btu/h	30000 Btu/h	36000 Btu/h	36000 Btu/h
INDOOR UNIT POWER	Phase	1-phase	1-phase	1-phase	1-phase
	Frequency and Voltage	220-240V, 50Hz	220-240V, 50Hz	220-240V, 50Hz	220-240V, 50Hz
	POWER WIRING (mm ²)	3x1.0	3x1.0	3x1.0	3x1.0
	CIRCUIT BREAKER / Fuse (A)	15/10	15/10	15/10	15/10
OUTDOOR UNIT POWER	Phase	1-phase	1-phase	1-phase	3-phase
	Frequency and Voltage	220-240V, 50Hz	220-240V, 50Hz	220-240V, 50Hz	380-420V, 50Hz
	POWER WIRING (mm ²)	3x2.5	3x2.5	3x4.0	5x2.5
	CIRCUIT BREAKER / Fuse (A)	30/20	40/30	40/30	30/20
Indoor/Outdoor Connecting Wiring (Weak Electric Signal) (mm ²)		3x0.5	3x0.5	3x0.5	3x0.5
Indoor/Outdoor Connecting Wiring (Strong Electric Signal) (mm ²)		—————	—————	—————	—————

9. Field Wiring

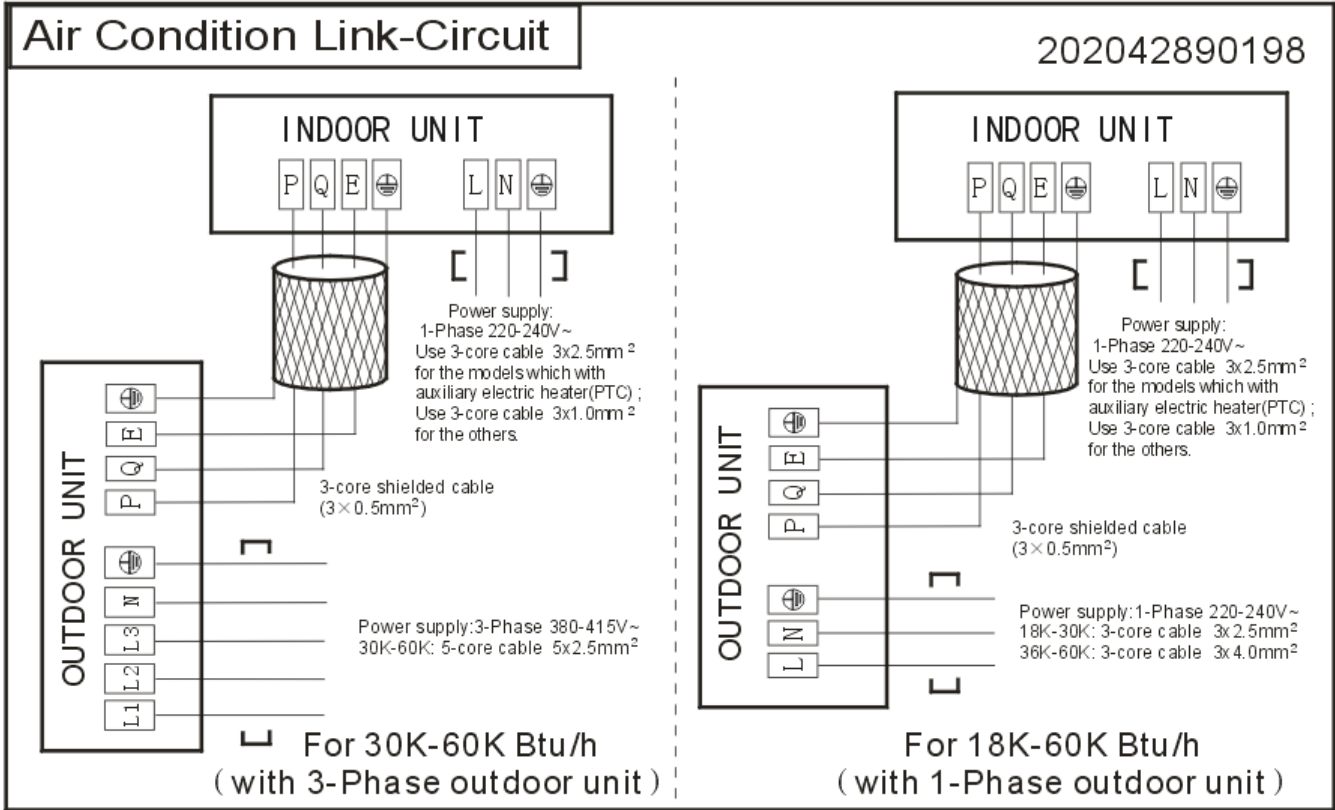

New Four-way Cassette Type (Compact)

1. Features	45
2. Dimensions	46
3. Service Space	47
4. Wiring Diagrams.....	48
5. Air Velocity and Temperature Distributions(Reference Data).....	49
6. Electric Characteristics	50
7. Sound Levels	50
8. Accessories	51
9. The Specification of Power.....	51
10. Field Wiring.....	52

1. Features

1.1 New panel

- 360°surrounding air outlet design, affords comfortable feeling



1.2 Compact design

- The body size is 570×260×570mm, it's just smaller than the ceiling board, so it's very easy for installation and will not damage the decoration. The panel size is 647×50×647mm.
- The hooks are designed in the four corners of the body, which can save installation space.




1.3 Electric control box built-in design

- The E-box is simply and safely built inside the indoor unit. It's convenient for installation and maintenance. Can check the control part easily, you only need to open the air return grille.




1.4 Air passage function



- Reserves the space for air outlet from the side of indoor unit; It's availed to connect air duct from the two sides to the nearby small rooms.

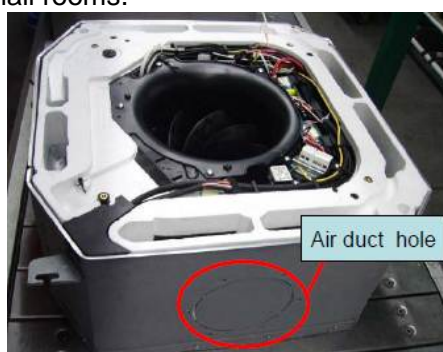


2. Dimensions

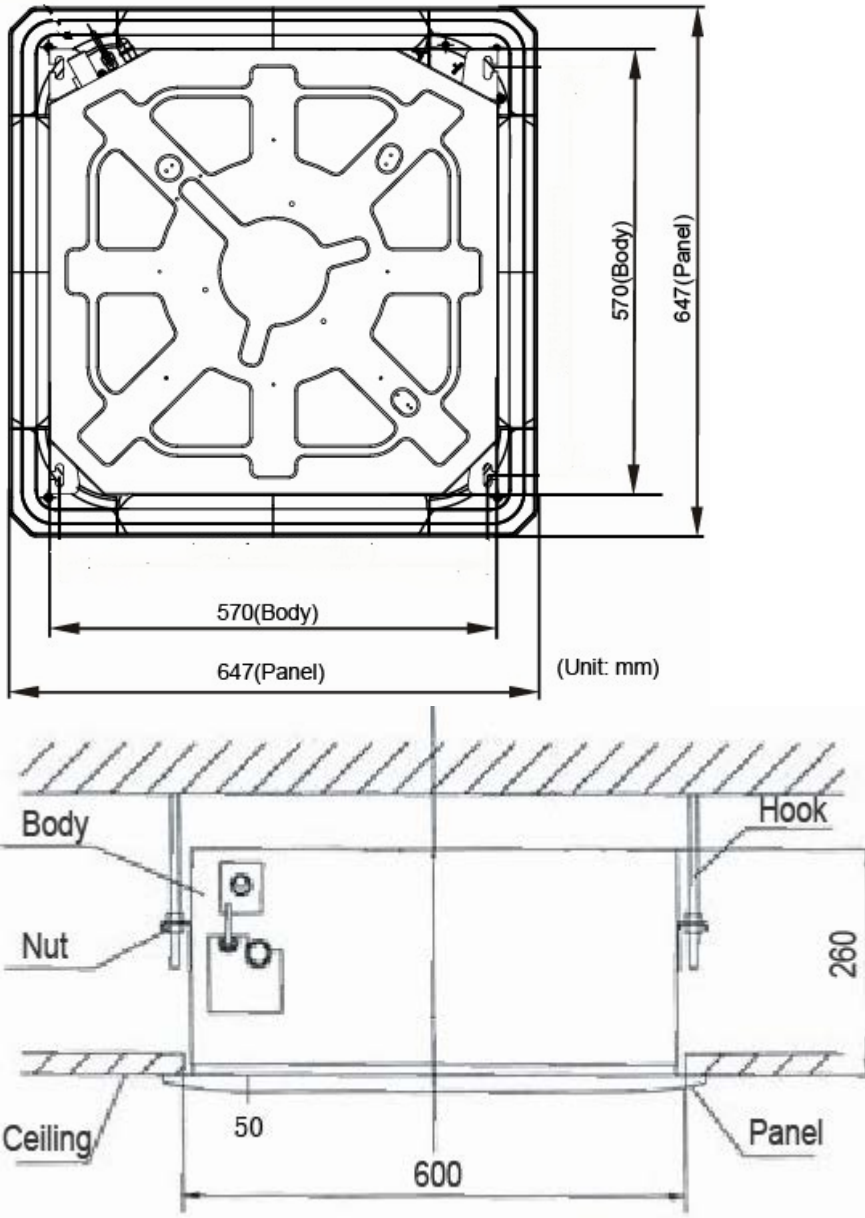


3. Service Space

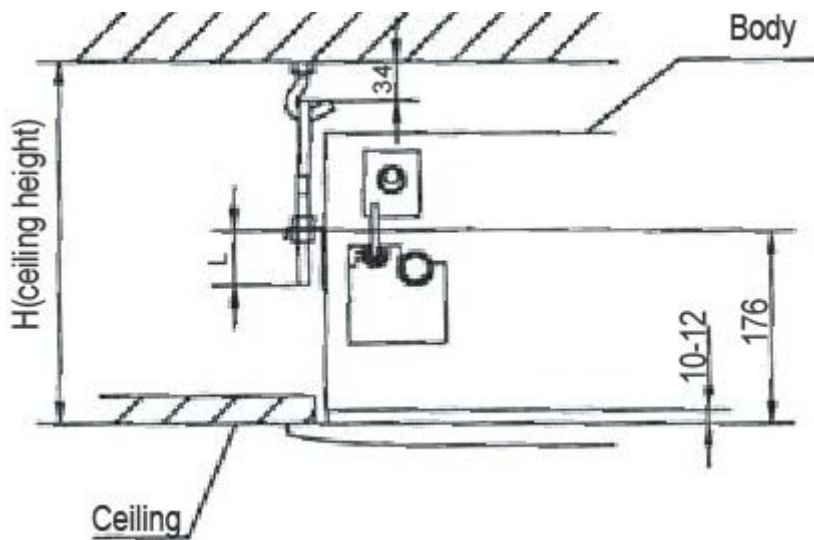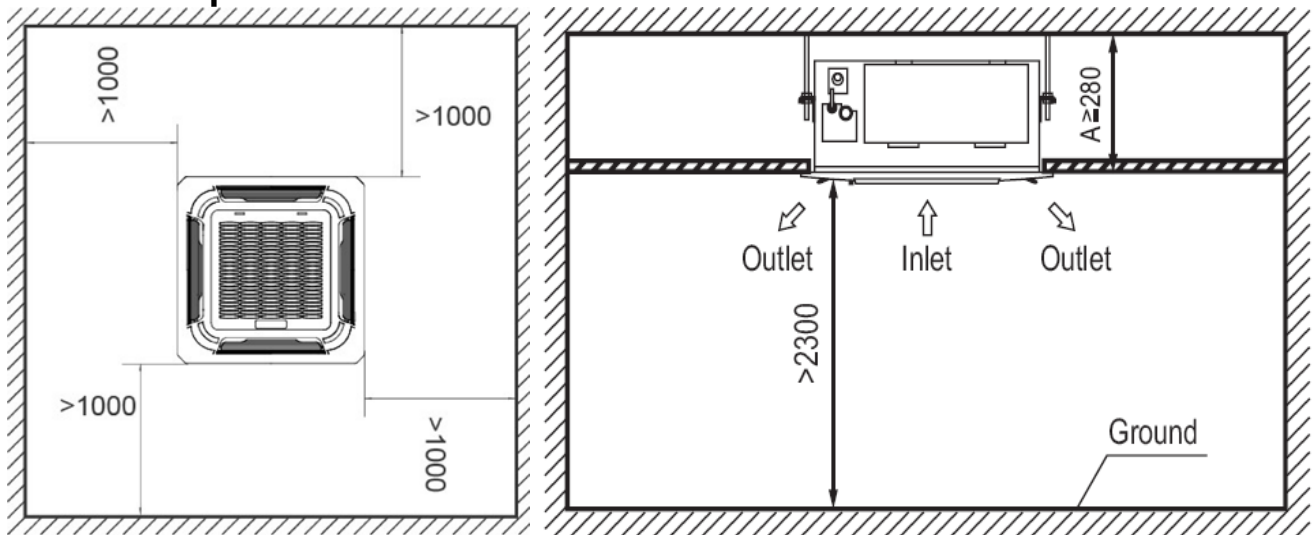

4. Wiring Diagrams KCA2U-12HRFN1-QRC8

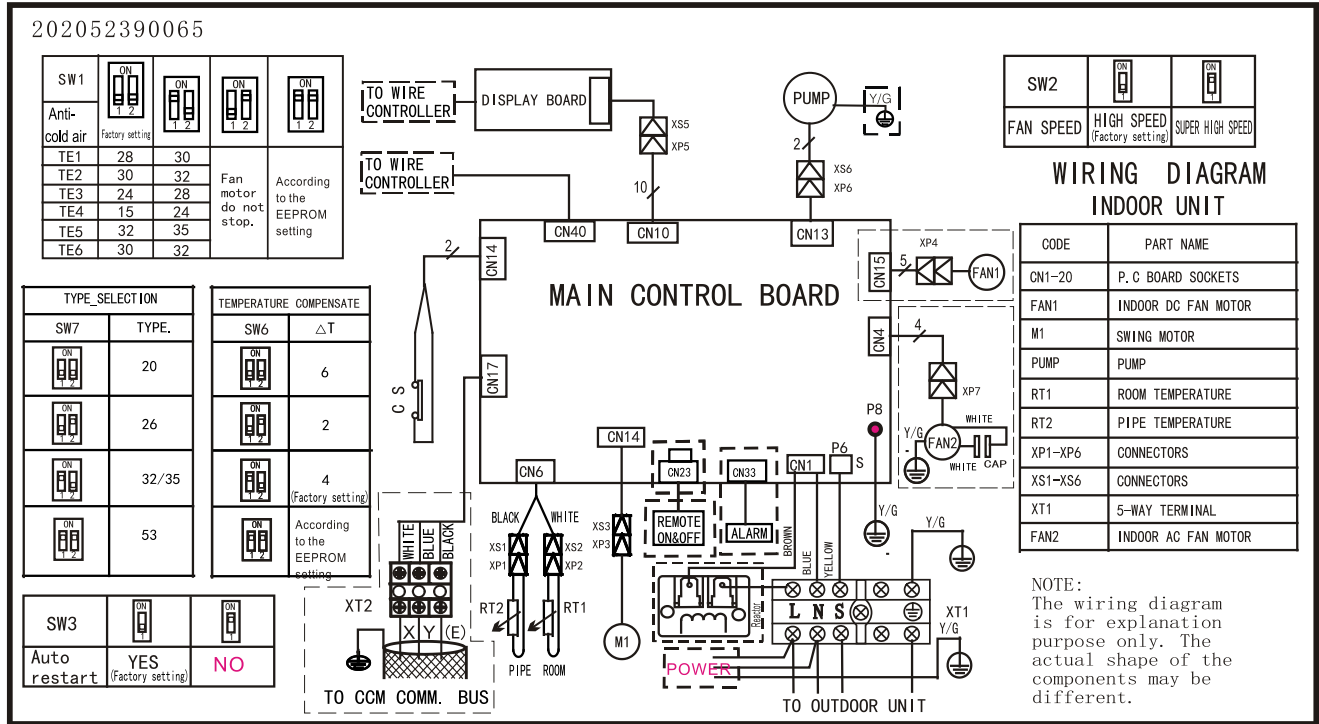


KCA2-18HRFN1-QRC8

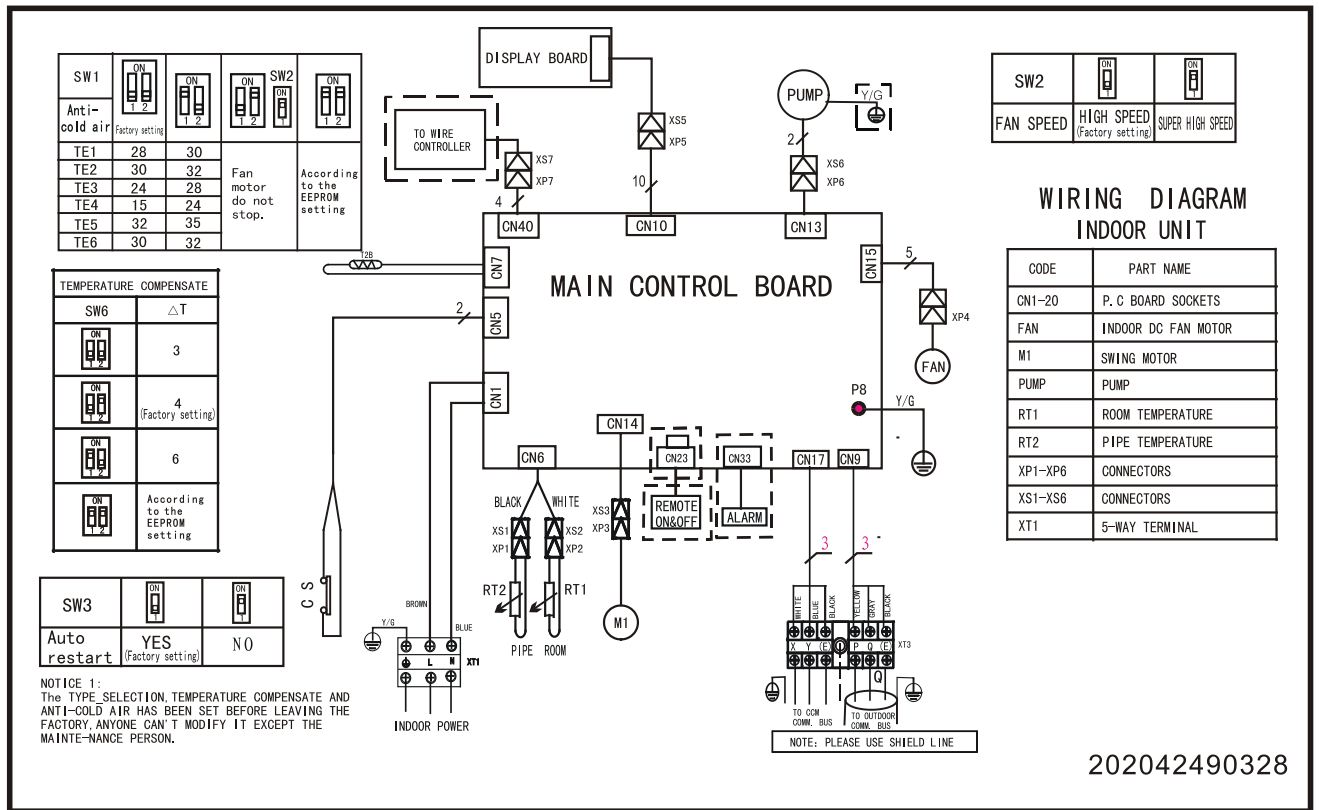


202042490328

5. Air Velocity and Temperature Distributions(Reference Data)

Airflow velocity

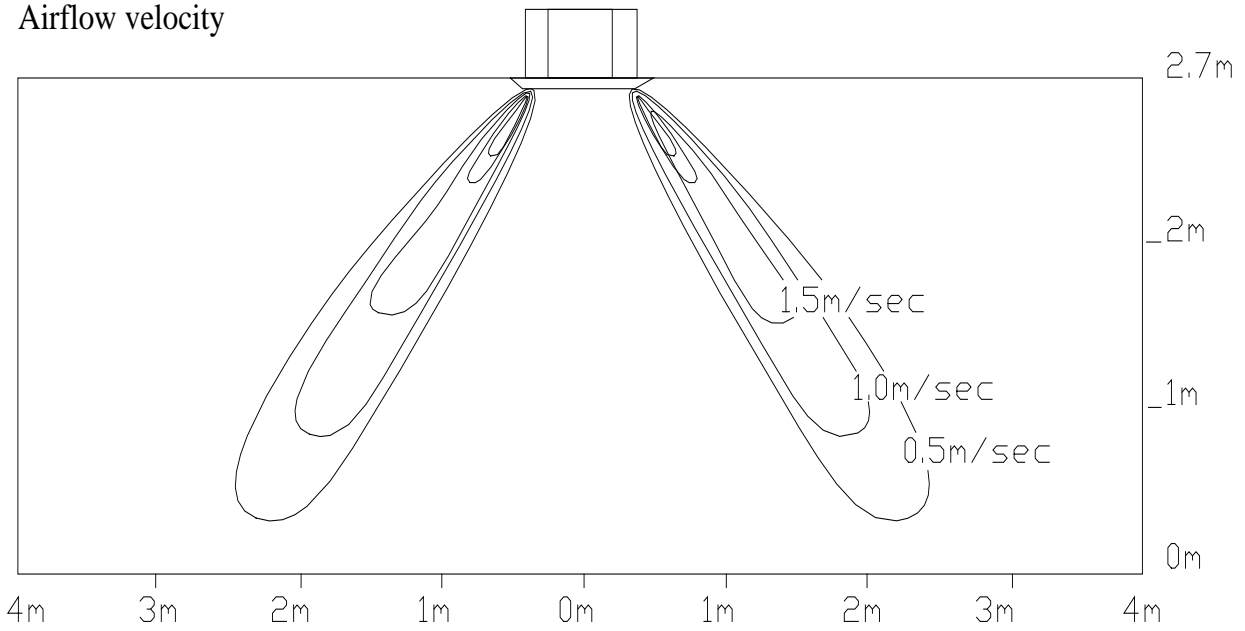

Temperature

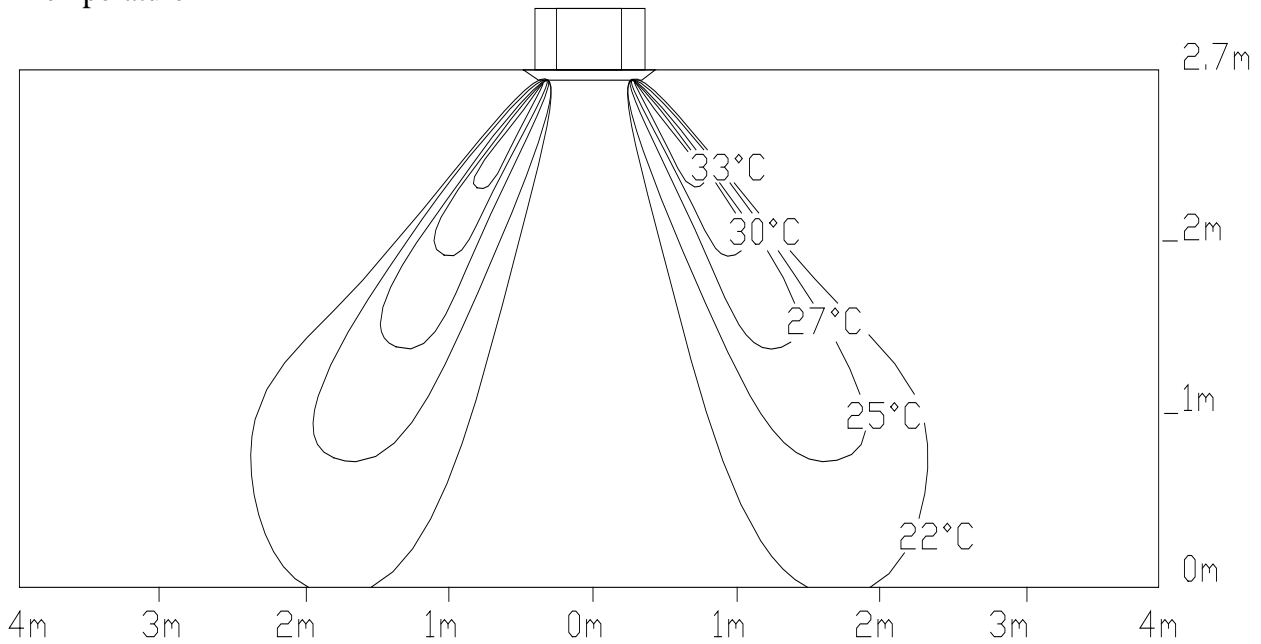


6. Electric Characteristics

Model	Indoor Units				Power Supply
	Hz	Voltage	Min.	Max.	MFA
KCA2U-12HRFN1-QRC8	50	220-240	198	254	20
KCA2-18HRFN1-QRC8	50	220-240	198	254	20

Notes:






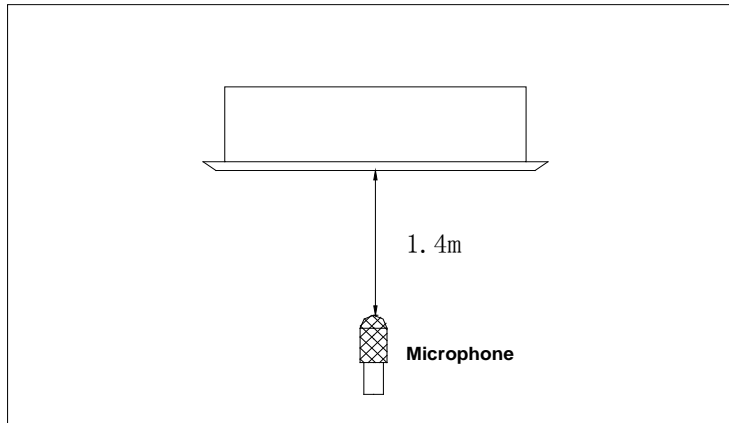










MFA: Max. Fuse Amps. (A)

7. Sound Levels



Model	Noise Power dB(A)	Noise level dB(A)		
		H	M	L
KCA2U-12HRFN1-QRC8	54	47	45	41
KCA2-18HRFN1-QRC8	59	47	45	40

8. Accessories


	Name	Shape	Quantity
Installation Fittings	Installation paper board		1
Tubing & Fittings	Soundproof / insulation sheath		1
Drainpipe Fittings	Out-let pipe sheath		1
	Out-let pipe clasp		1
	Drain joint		1
	Seal ring		1
Remote controller & Its Frame (The product you have might not be provided the following accessories)	Remote controller & Its Frame		1
	Remote controller holder		1
	Mounting screw(ST2.9x10-C-H)		2
	Remote controller manual		1
	Alkaline dry batteries (AM4)		2
Others	Owner's manual		1
	Installation manual		1
Installation accessory (The product you have might not be provided the following accessories)	Expansible hook		4
	Installation hook		4
	Orifice		1

9. The Specification of Power


MODEL		12000 Btu/h	18000 Btu/h
Power	Phase	1-phase	1-phase
	Frequency and Voltage	220-240V, 50Hz	220-240V, 50Hz
Circuit Breaker/ Fuse (A)		25/20	25/20
Indoor Unit Power Wiring (mm ²)		—————	3x1.0
Indoor/Outdoor Connecting Wiring (mm ²)	Ground Wiring	2.5	2.5
	Outdoor Unit Power Wiring	3x2.5	3x2.5
	Strong Electric Signal	4x1.0	—————
	Weak Electric Signal	—————	3x0.5

10. Field Wiring

KCA2U-12HRFN1-QRC8

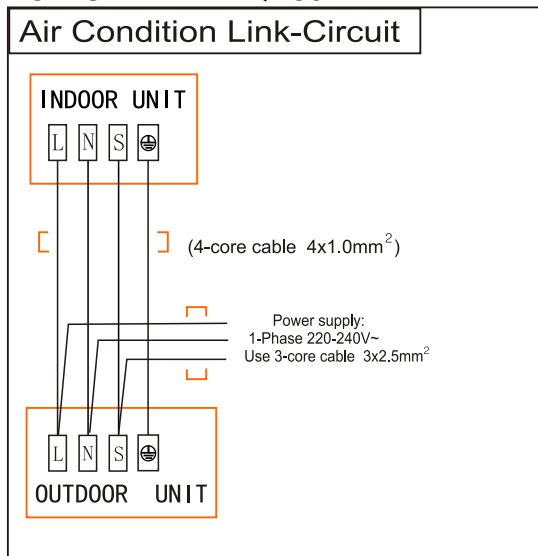

KCA2-18HRFN1-QRC8

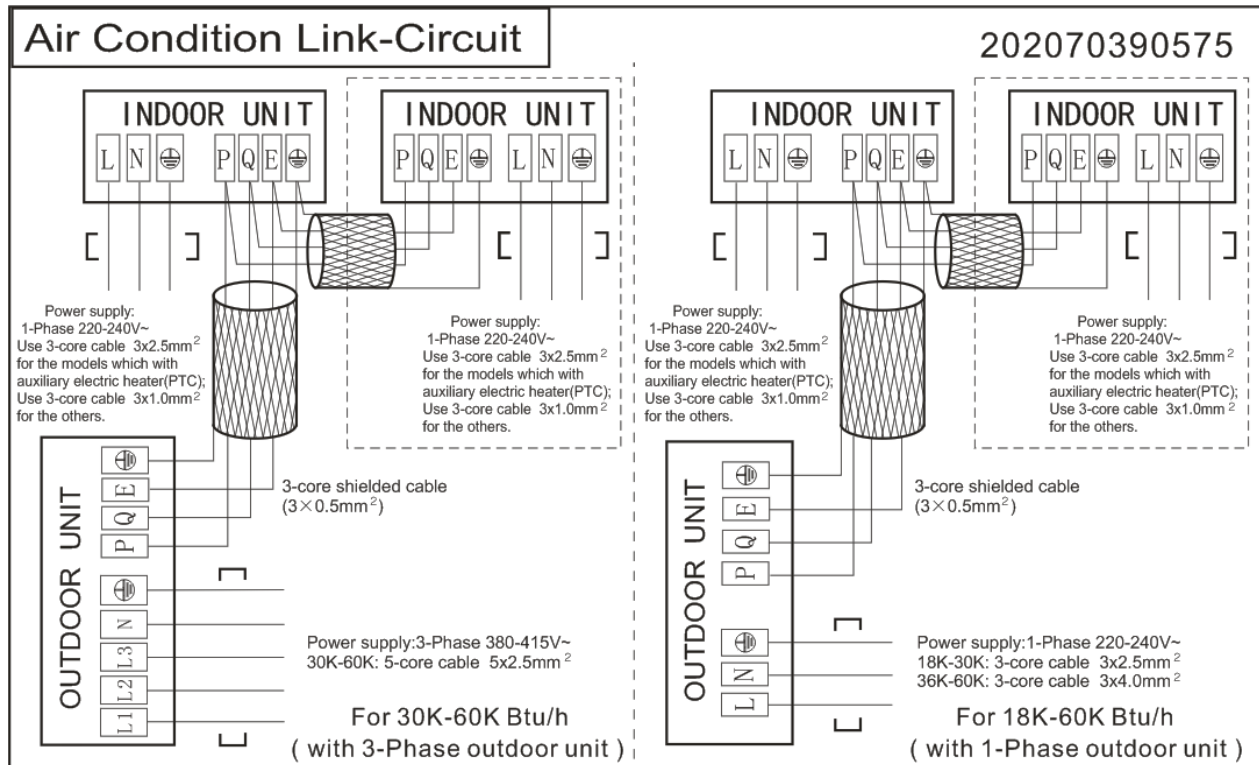

Console Type

1. Features	55
2. Dimensions	57
3. Service Space	58
4. Wiring Diagrams.....	59
5. Air Velocity and Temperature Distributions(Reference Data).....	60
6. Electric Characteristics	61
7. Sound Levels	62
8. Accessories	63
9. The Specification of Power.....	63
10. Field Wiring.....	64

1. Features

1.1. Modern and elegant appearance


- The simple and stylish designs can nicely harmonies with your living space.



1.2. Four panels optional



1.3. Two air-outlet ways Cooling mode

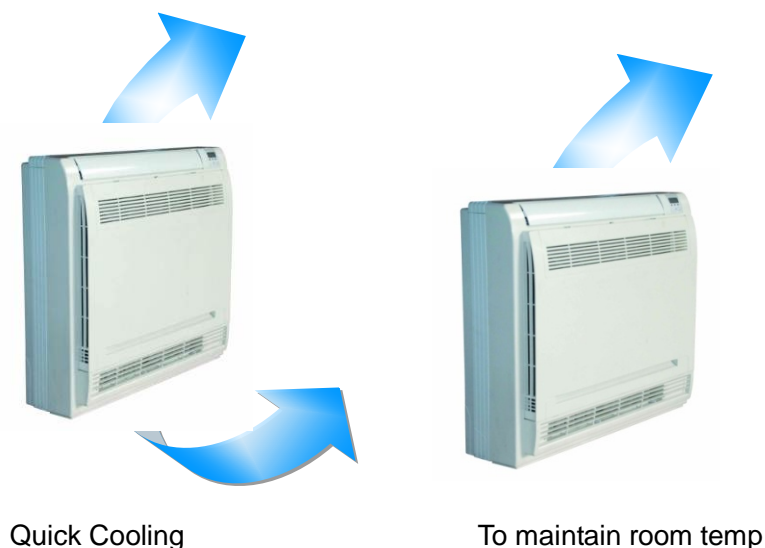


- Air outlet from top and bottom to make quick cooling -----When the A/C is just switched on, or room temp. is still high, cold air will be blown out from top and bottom air outlet to cool down the room quickly
- Air outlet from top to maintain room temp. ----When the room has been cooled down, or the A/C has been opened over 1 hour, cold air only from the top outlet to keep constant room temp

Heating mode

- Anti-cold air -----When the AC is just turn on, temperature of evaporator is very low, in this case, in order to prevent cold air direct blowing, only the upper louver is opened in a high position, the lower louver closed.




1.4. Four air inlets

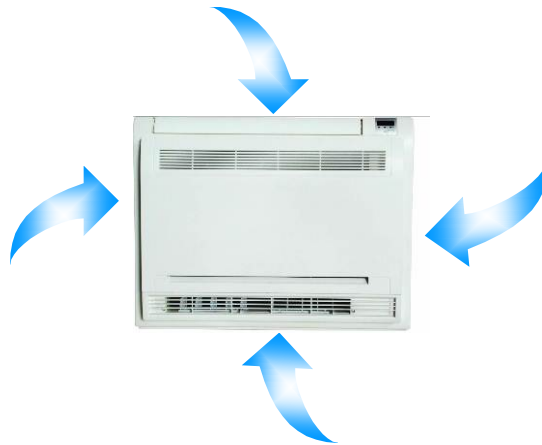


1.5. Low noise

- DC indoor fan motor, which has five speeds.
- Low noise and energy saving.

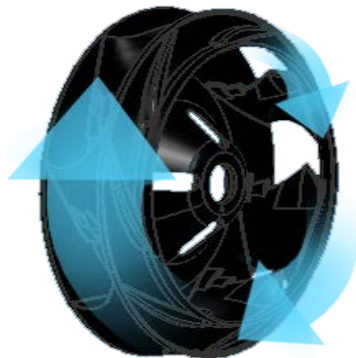

- Advanced centrifugal fan technology makes a fast airflow and reduces the indoor noise lower to 28dB.

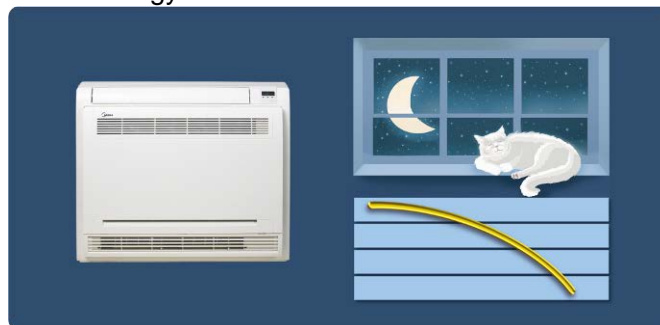


1.6. Golden fin is optional.



1.7. Active carbon filter is standard

2. Dimensions

KFAU-12HRFN1-QRC8, KFA-16HRFN1-QRC8

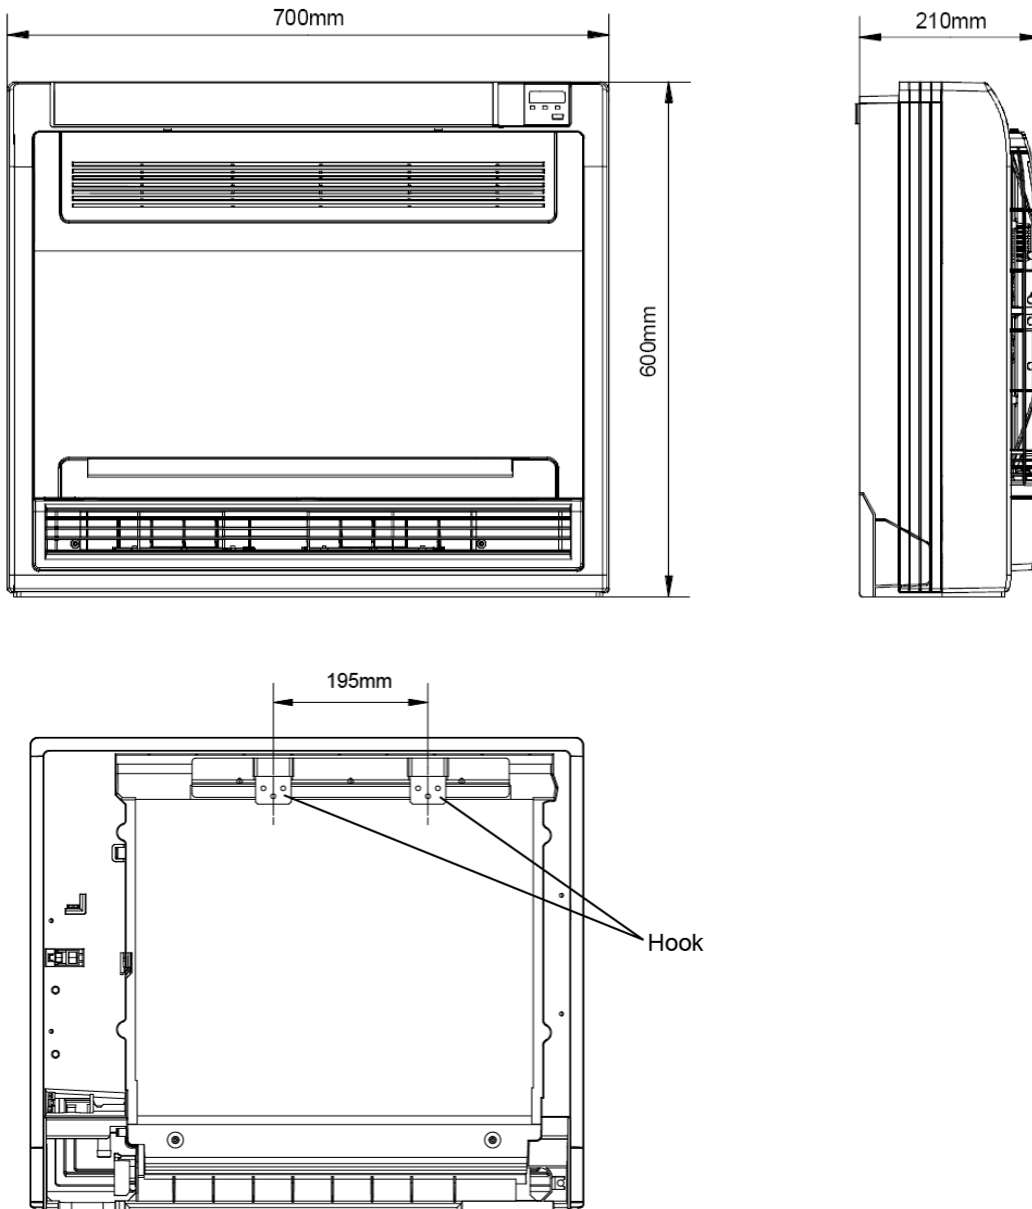


3. Service Space

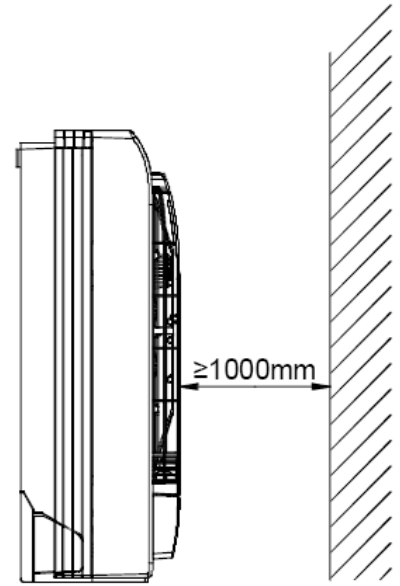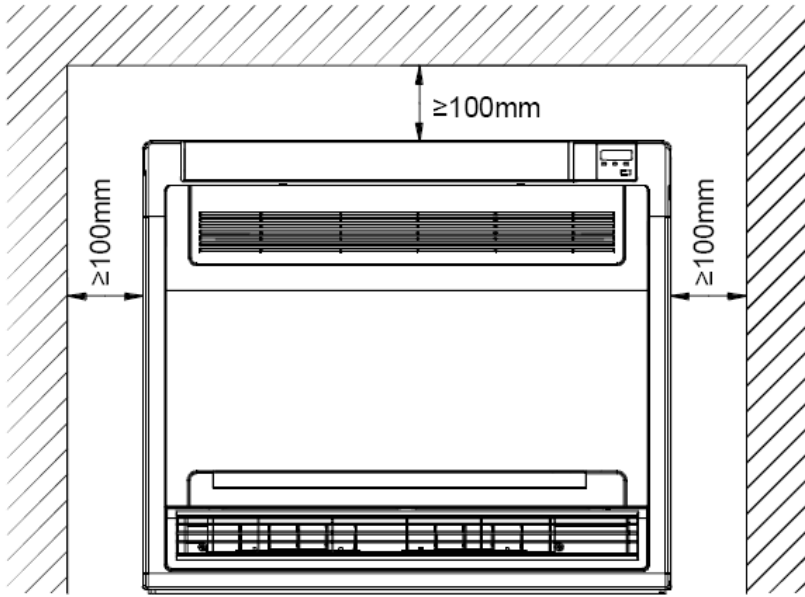


4. Wiring Diagrams

KFAU-12HRFN1-QRC8

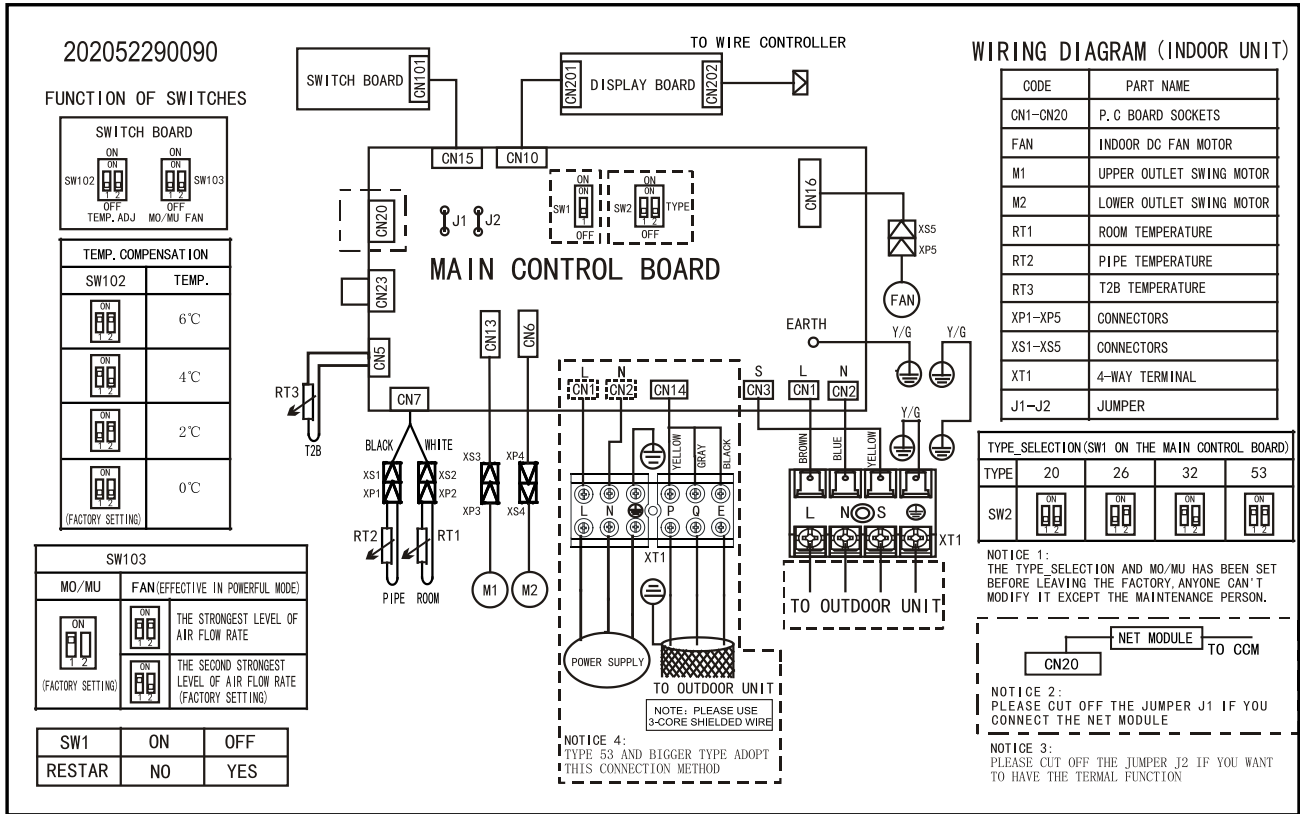


KFA-16HRFN1-QRC8

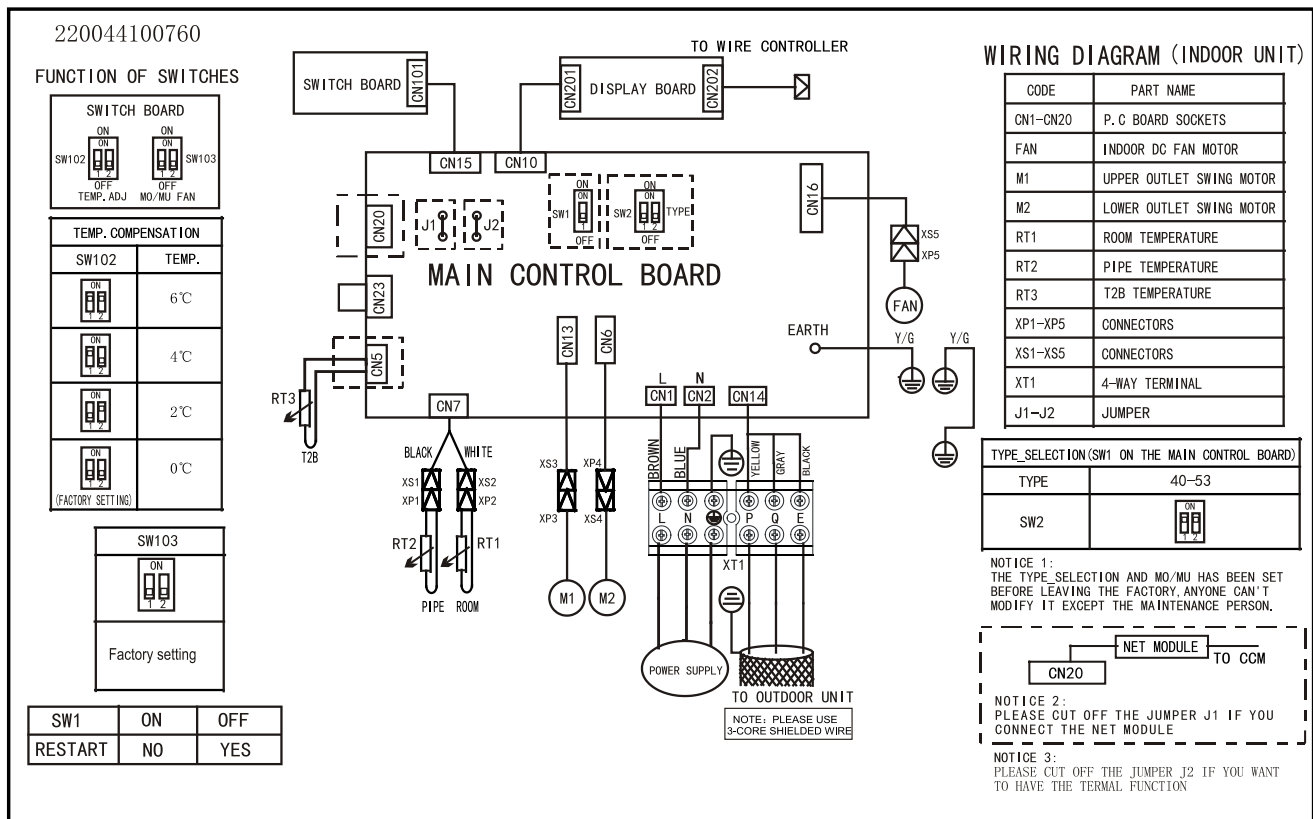


5. Air Velocity and Temperature Distributions(Reference Data)

Discharge angle 60

Airflow velocity

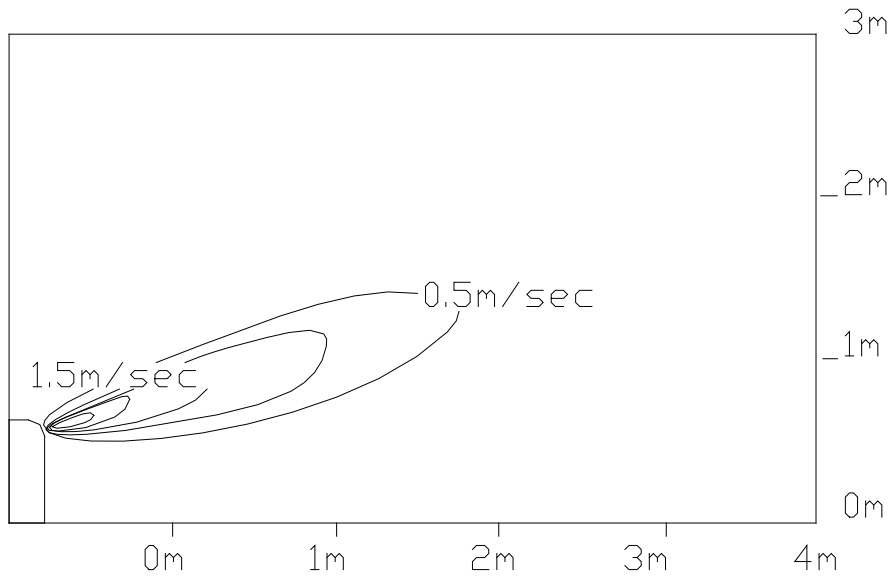


Temperature

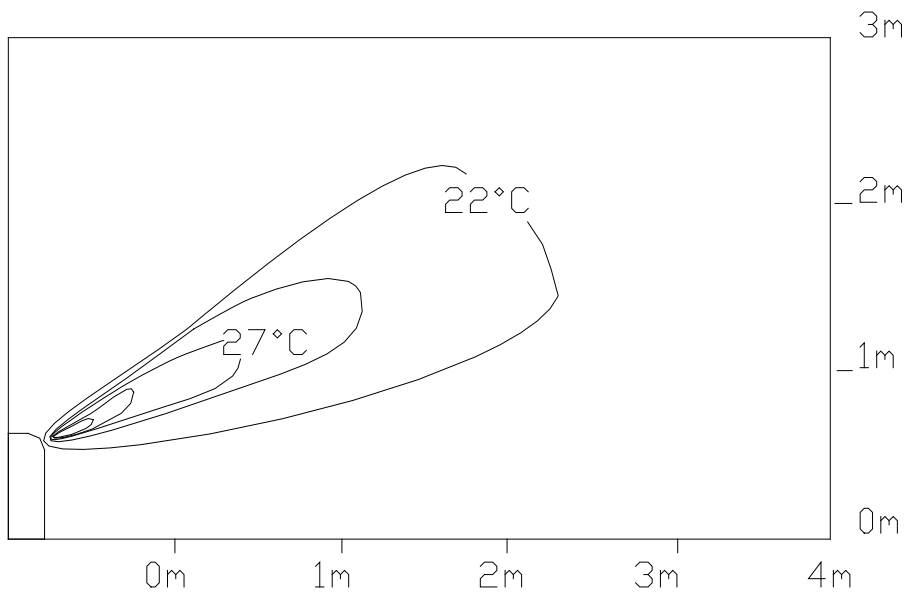

6. Electric Characteristics



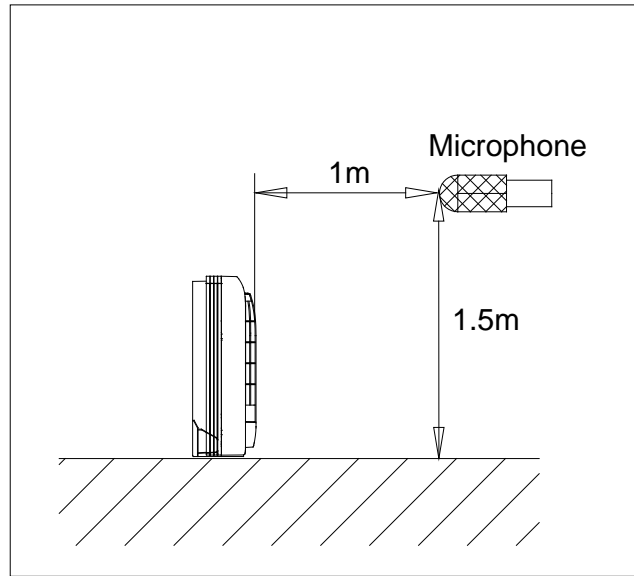


Model	Indoor Units				Power Supply
	Hz	Voltage	Min.	Max.	MFA
KFAU-12HRFN1-QRC8	50	220-240	198	254	16
KFA-16HRFN1-QRC8	50	220-240	198	254	16

7. Sound Levels



Model	Noise Power dB(A)	Noise level dB(A)			
		Higher	H	M	L
KFAU-12HRFN1-QRC8	57	47	44	40	37
KFA-16HRFN1-QRC8	59	48	47	44	40

8. Accessories


	Name	Shape	Quantity
Installation fittings	Hook		2
Remote controller & Its Frame	Remote controller		1
	Frame		1
	Mounting screw(ST2.9×10-C-H)		2
	Alkaline dry batteries (AM4)		2
Others	Installation manual	/	1
	Owner's manual	/	1

9. The Specification of Power


MODEL		12000 Btu/h	18000 Btu/h
Power	Phase	1-phase	1-phase
	Frequency and Voltage	220-240V, 50Hz	220-240V, 50Hz
Circuit Breaker/ Fuse (A)		20/16	20/16
Indoor Unit Power Wiring (mm ²)		—————	3x1.0
Indoor/Outdoor Connecting Wiring (mm ²)	Ground Wiring	1.5	2.5
	Outdoor Unit Power Wiring	3x1.5	3x2.5
	Strong Electric Signal	4x1.0	—————
	Weak Electric Signal	—————	3x0.5

10. Field Wiring

KFAU-12HRFN1-QRC8

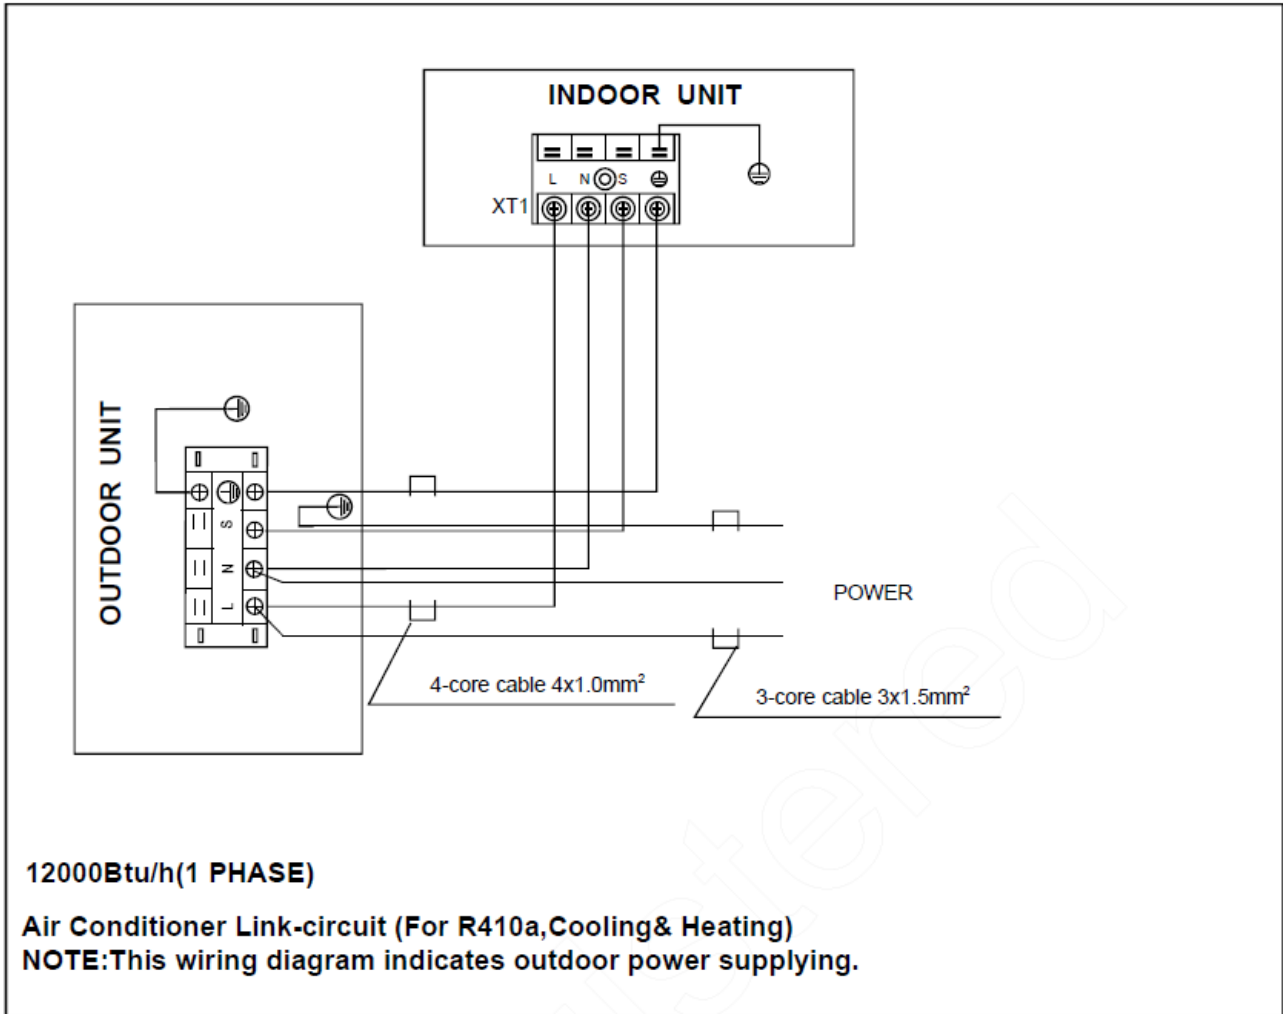

KFA-16HRFN1-QRC8

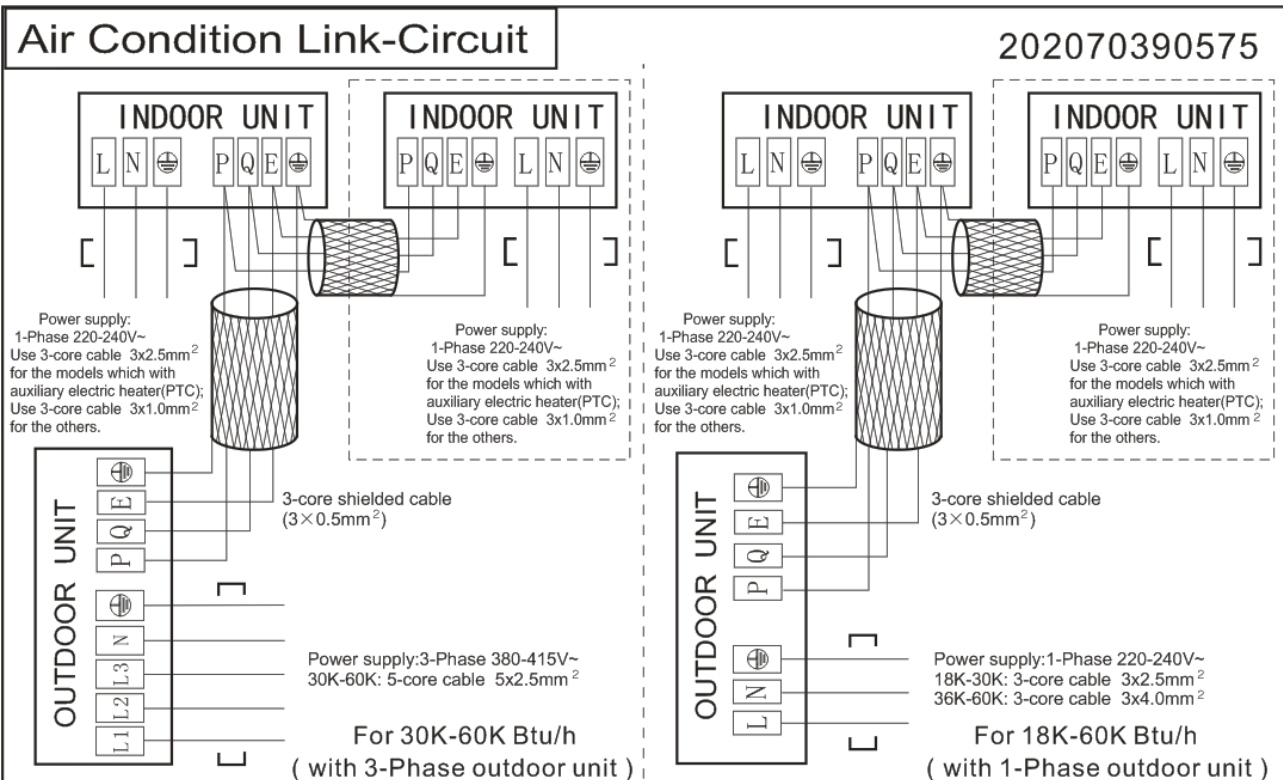


Part 3


Outdoor Units

1. Dimensions	66
2. Service Space	68
3. Piping Diagrams	69
4. Wiring Diagrams	70
5. Electric Characteristics	74
6. Operation Limits	75
7. Sound Levels	76

1. Dimensions

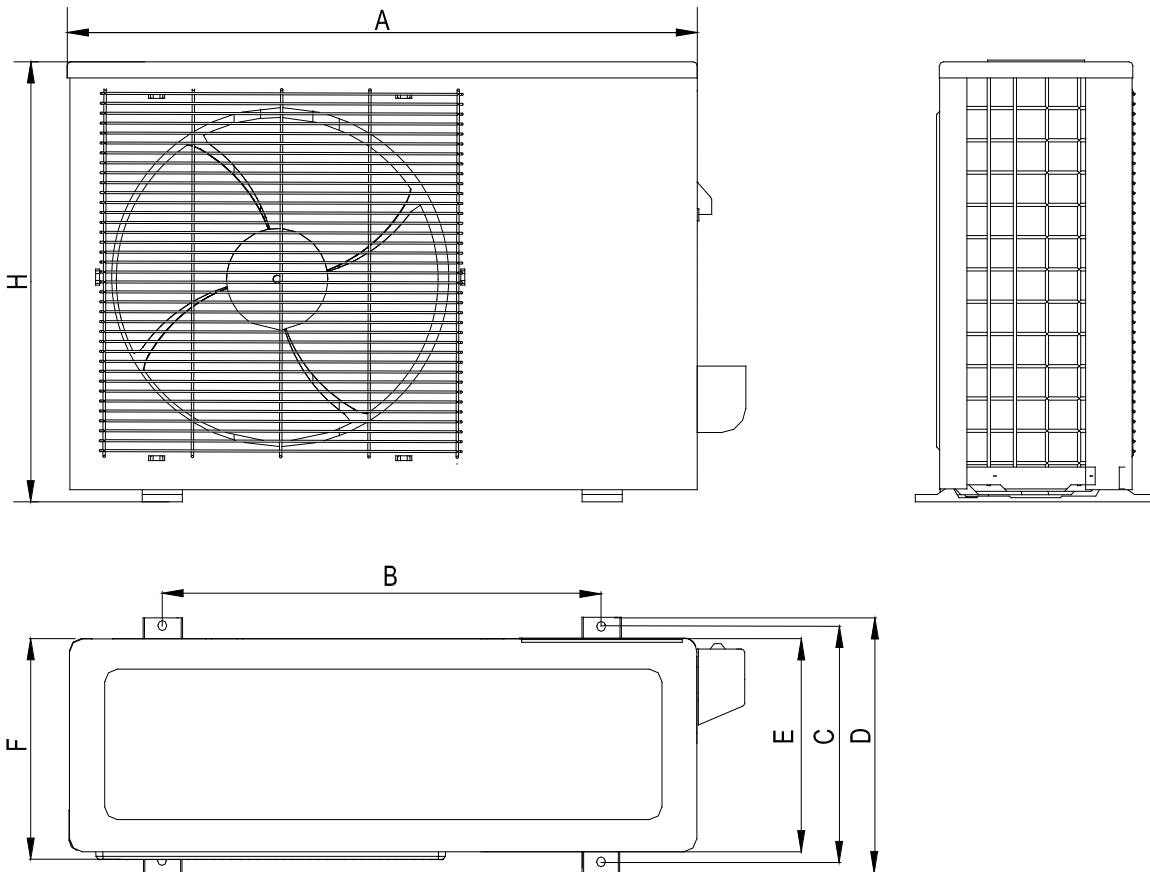


Model	Unit: mm						
	A	B	C	D	E	F	H
KOU-12HFN1-QRC8	760	530	290	315	270	285	590
KOU-18HFN1-QRC4	845	560	335	360	312	320	700
KOU-18HFN1-QRC8	845	560	335	360	312	320	700
KOU-24HFN1-QRC4	900	590	333	355	302	315	860
KOU-24HFN1-QRC8	900	590	333	355	302	315	860
KOU-30HFN1-QRC8	900	590	333	355	302	315	860
KOU-36HFN1-QRC4	990	624	366	396	340	345	965
KOU-36HFN1-RRC4	990	624	366	396	340	345	965
KOU-36HFN1-RRC8(520)	990	624	366	396	340	345	965
KOU-36HFN1-QRC8(520)	990	624	366	396	340	345	965

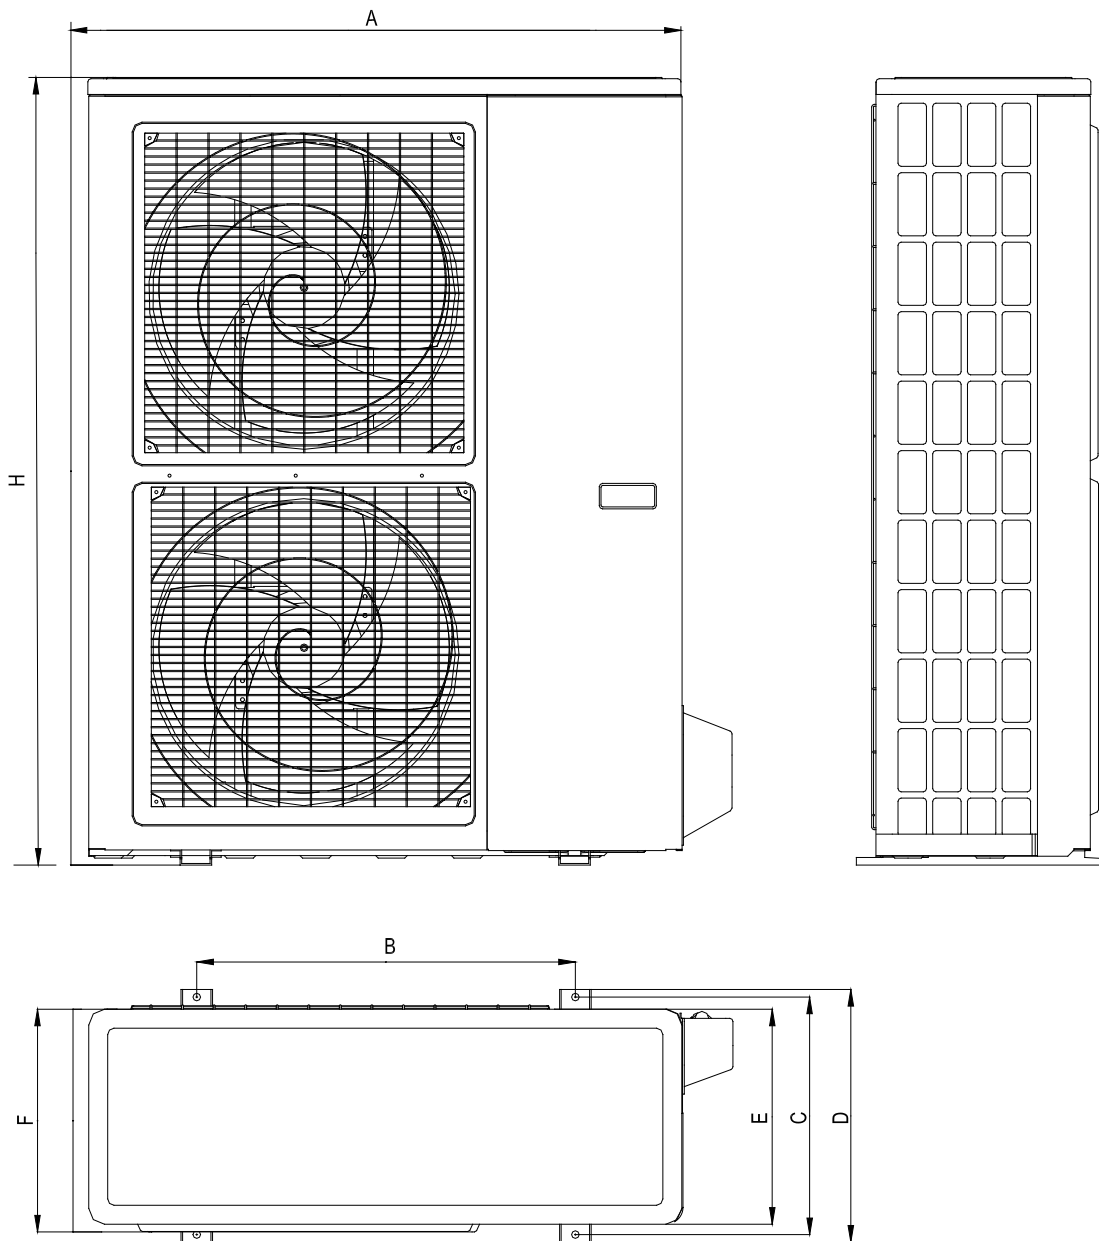


Model	Unit: mm						
	A	B	C	D	E	F	H
KOU-36HFN1-QRC8(5A0)	938	633.5	404	448	370	392	1369
KOU-36HFN1-RRC8(5A0)	938	633.5	404	448	370	392	1369

2. Service Space

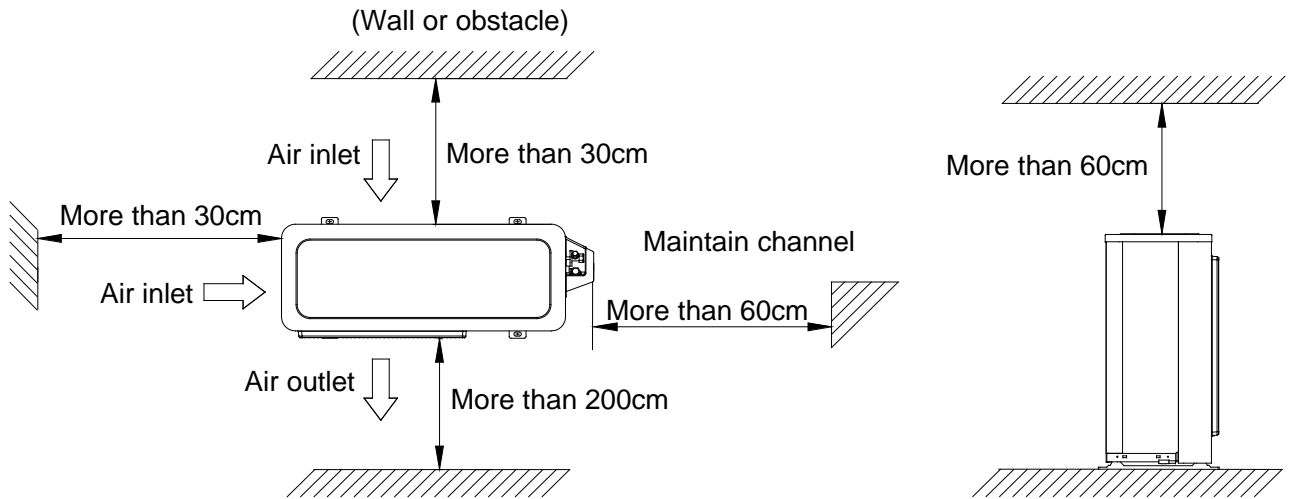


3. Piping Diagrams

KOU-12HFN1-QRC8 KOU-18HFN1-QRC4 KOU-18HFN1-QRC8 KOU-24HFN1-QRC4
 KOU-24HFN1-QRC8 KOU-30HFN1-QRC8

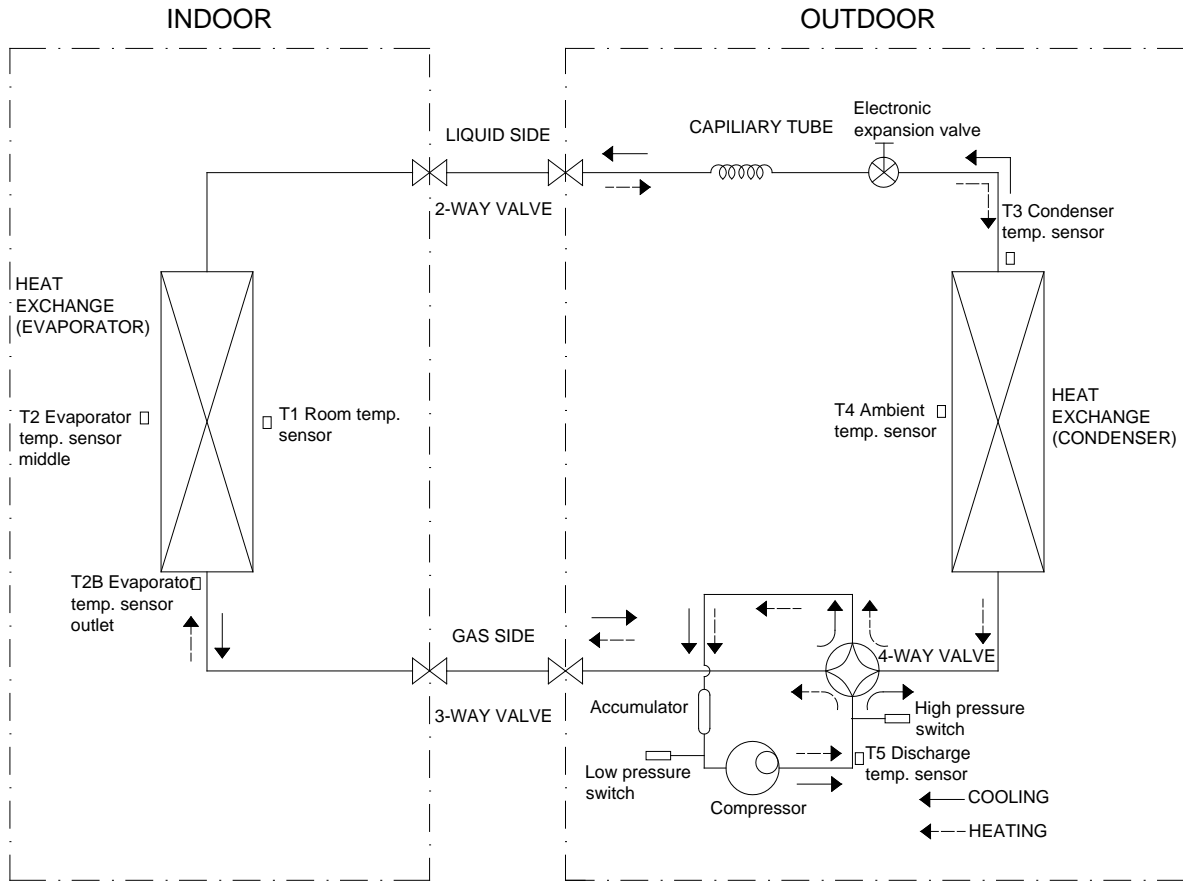


KOU-36HFN1-QRC4 KOU-36HFN1-RRC4 KOU-36HFN1-QRC8 KOU-36HFN1-RRC8

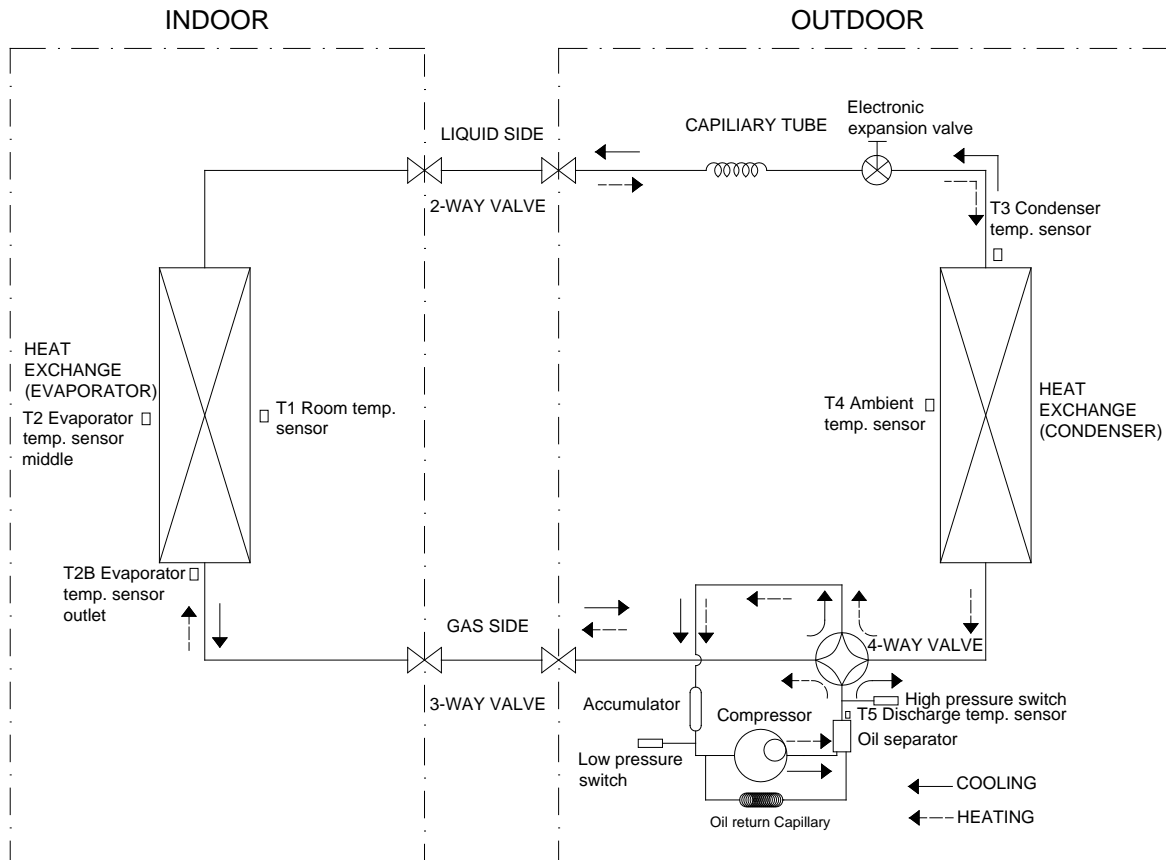


4. Wiring Diagrams


KOU-12HFN1-QRC8

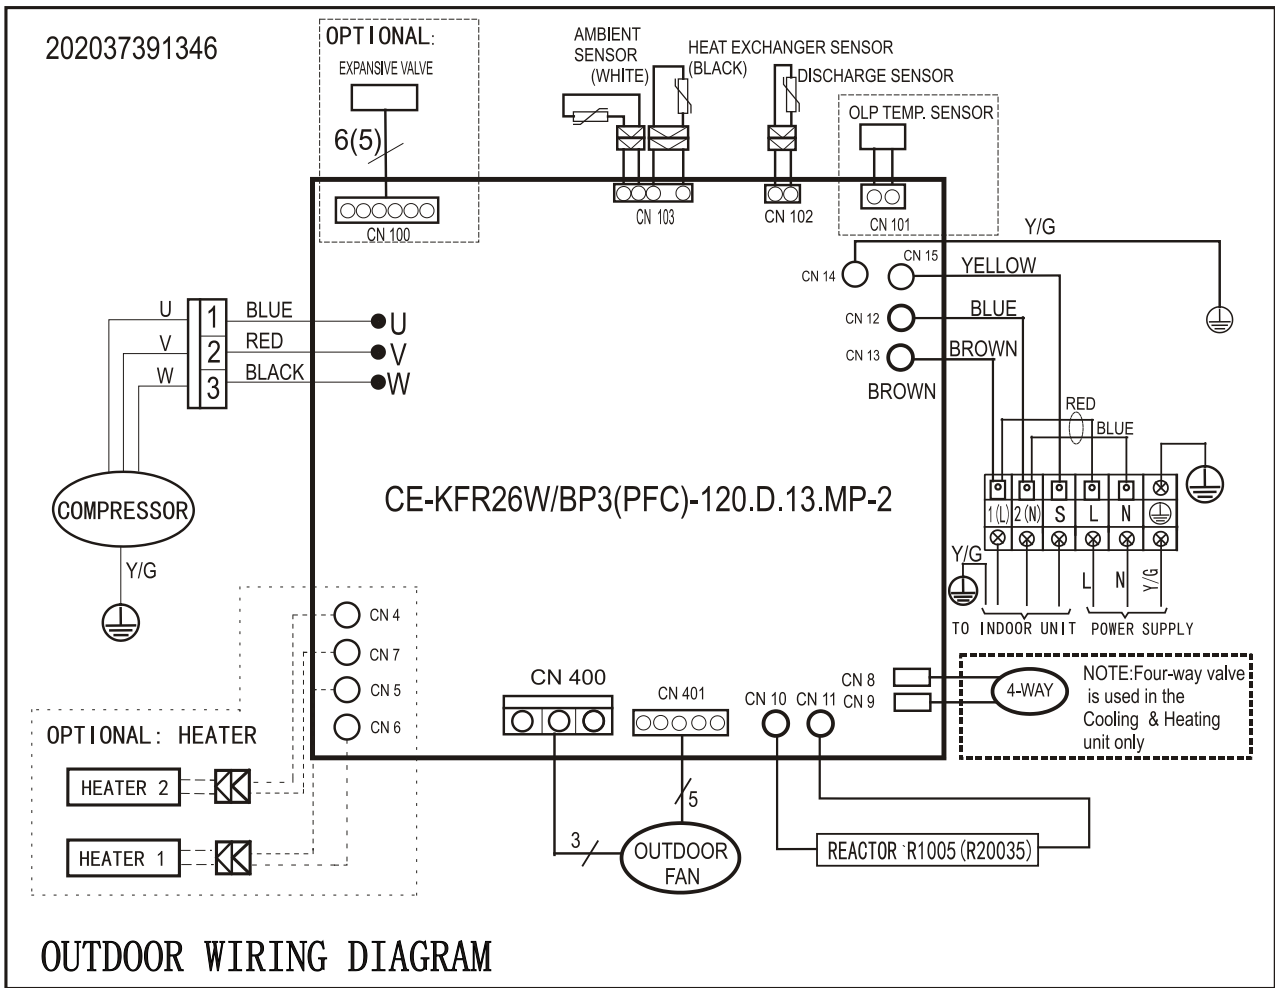


KOU-18HFN1-QRC4 MOU-18HFN1-QRC8 KOU-24HFN1-QRC4 KOU-24HFN1-QRC8 KOU-30HFN1-QRC8

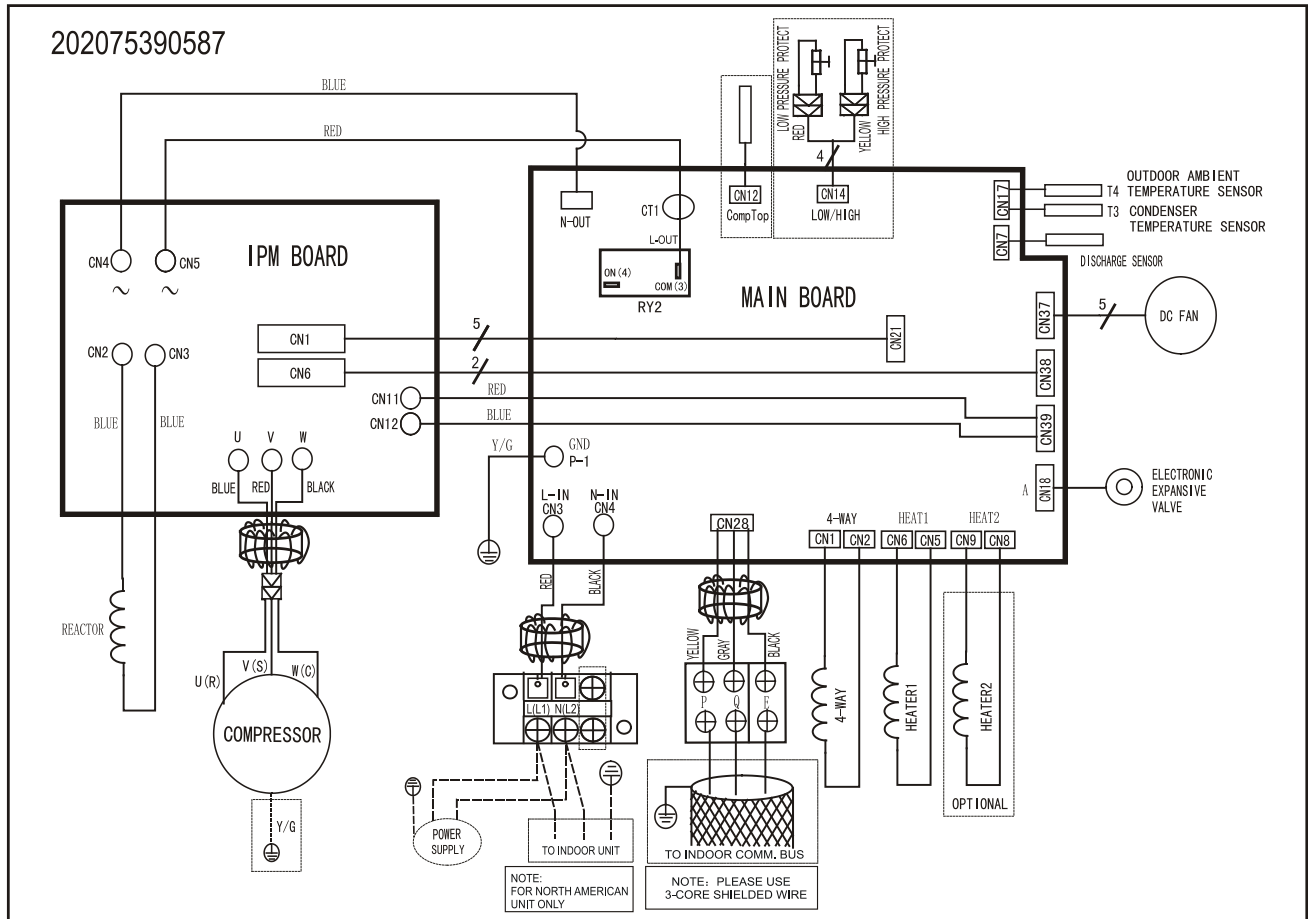


KOU-36HFN1-QRC4 KOU-36HFN1-QRC8(520)

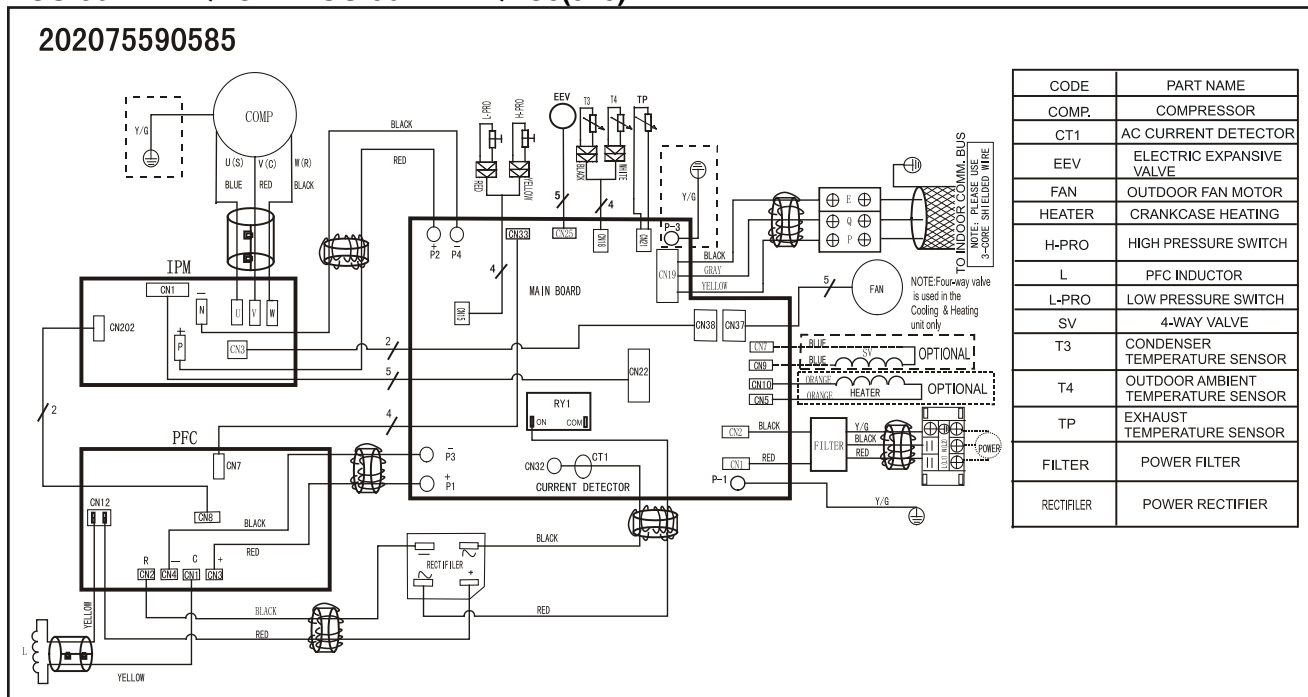


KOU-36HFN1-RRC4 KOU-36HFN1-RRC8(520)

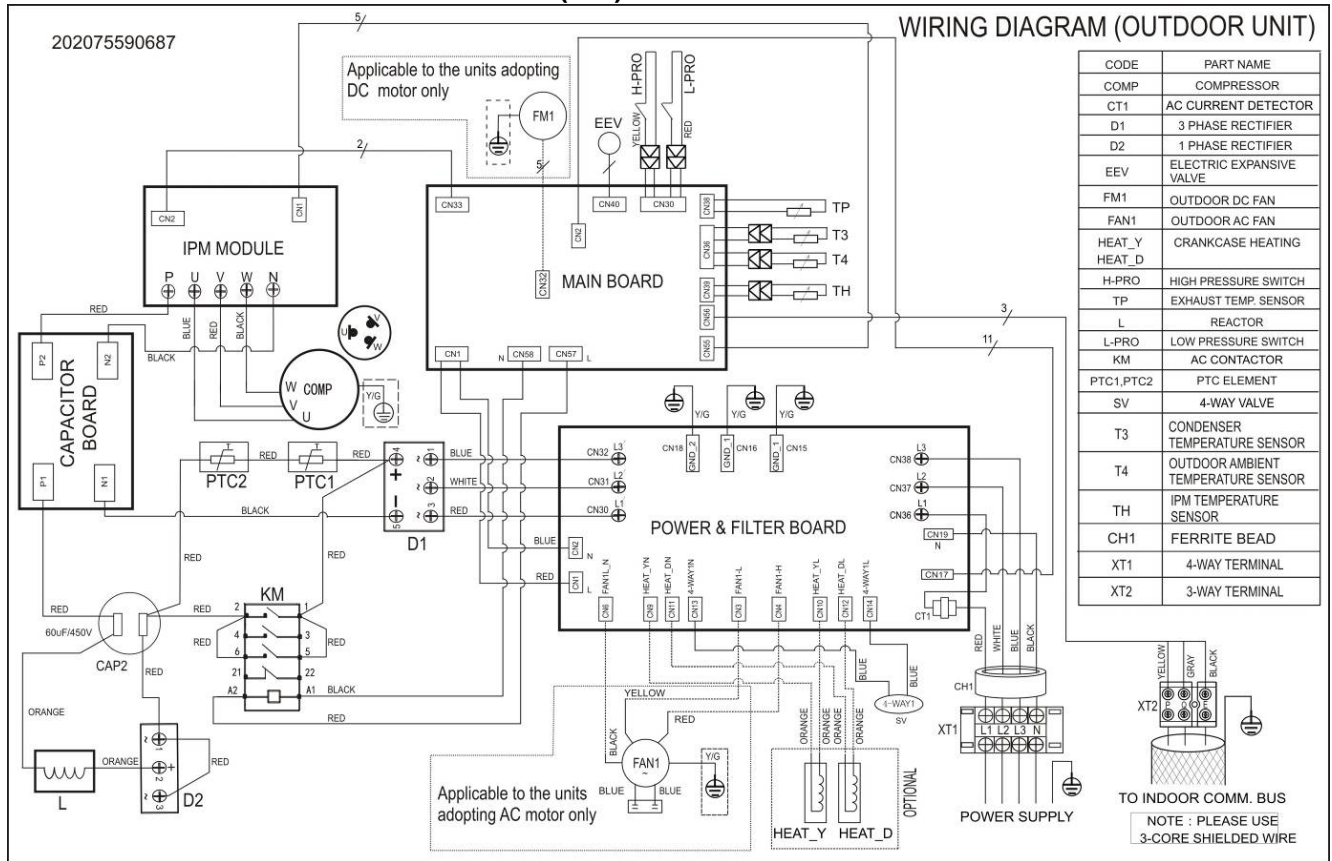

KOU-36HFN1-QRC8(5A0)

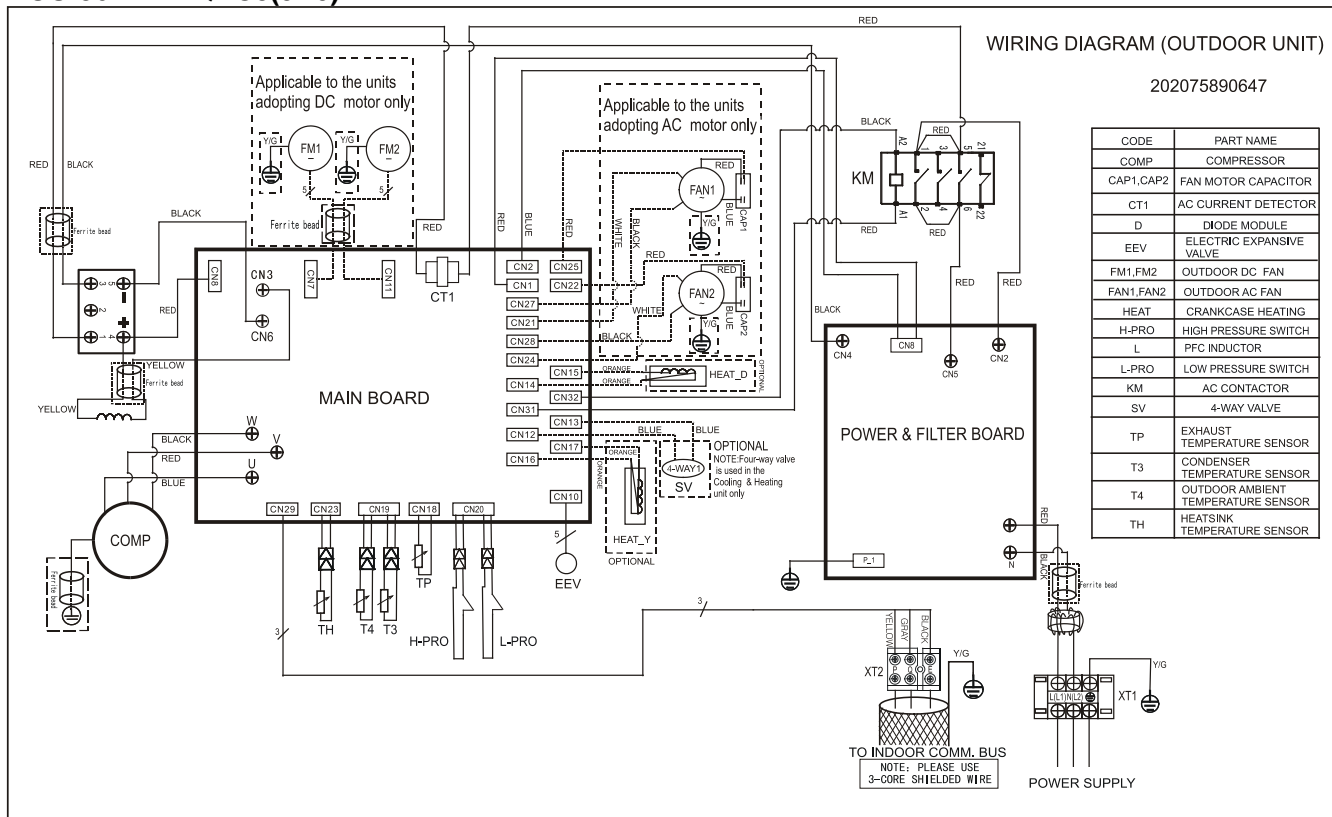

KOU-36HFN1-RRC8(5A0)

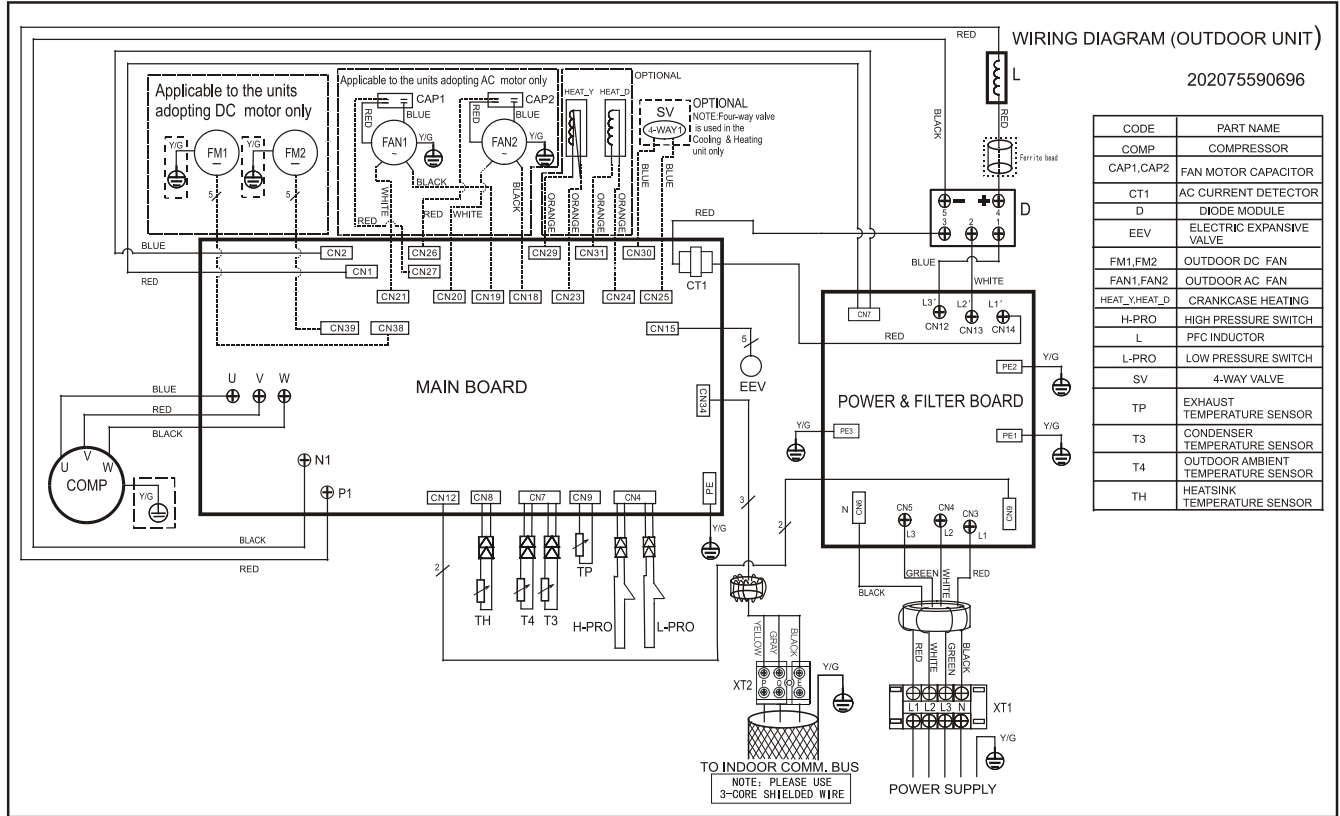

5. Electric Characteristics

Model	Outdoor Unit			
	Hz	Voltage	Min.	Max.
KOU-12HFN1-QRC8	50	220-240V	198V	254V
KOU-18HFN1-QRC4	50	220-240V	198V	254V
KOU-18HFN1-QRC8	50	220-240V	198V	254V
KOU-24HFN1-QRC4	50	220-240V	198V	254V
KOU-24HFN1-QRC8	50	220-240V	198V	254V
KOU-30HFN1-QRC8	50	220-240V	198V	254V
KOU-36HFN1-QRC4	50	220-240V	198V	254V
KOU-36HFN1-RRC4	50	380-415V	342V	440V
KOU-36HFN1-QRC8	50	220-240V	198V	254V
KOU-36HFN1-RRC8	50	380-415V	342V	440V


6. Operation Limits

Mode \ Temperature	Cooling operation	Heating operation
Room temperature	$\geq 17^{\circ}\text{C}$	$\leq 30^{\circ}\text{C}$
Outdoor temperature	$-15^{\circ}\text{C} \sim 50^{\circ}\text{C}$	$-15^{\circ}\text{C} \sim 24^{\circ}\text{C}$

CAUTION:

1. If the air conditioner is used beyond the above conditions, certain safety protection features may come into operation and cause the unit to operate abnormally.
2. The room relative humidity should be less than 80%. If the air conditioner operates beyond this figure, the surface of the air conditioner may attract condensation. Please set the vertical air flow louver to its maximum angle (vertically to the floor), and set HIGH fan mode.
3. The optimum performance will be achieved during this operating temperature zone.

7. Sound Levels

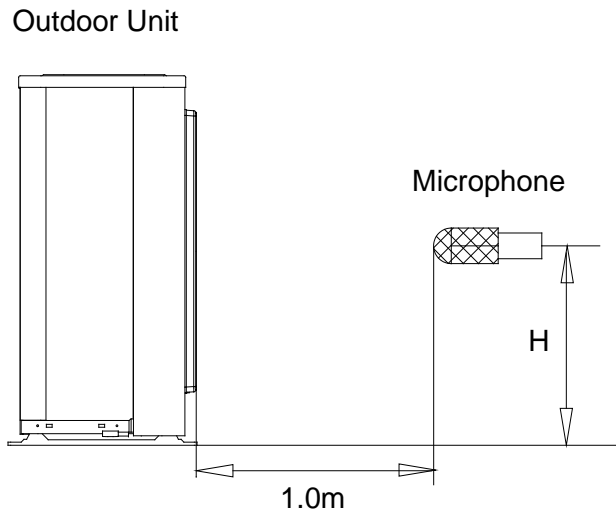

Note: H= 0.5 × height of outdoor unit


Model	Noise Power dB(A)	Noise level dB(A)
KOU-12HFN1-QRC8	61	58
KOU-18HFN1-QRC4	65	61
KOU-18HFN1-QRC8	65	60
KOU-24HFN1-QRC4	67	64
KOU-24HFN1-QRC8	69	60
KOU-30HFN1-QRC8	70	61
KOU-36HFN1-QRC4	69	65
KOU-36HFN1-RRC4	70	65
KOU-36HFN1-QRC8(5A0)	69	64
KOU-36HFN1-QRC8(520)	70	64
KOU-36HFN1-RRC8(5A0)	67	63
KOU-36HFN1-RRC8(520)	70	63

Part 4

Installation

1. Installation Procedure	78
2. Location selection	79
3. Indoor unit installation	80
4. Outdoor unit installation (Side Discharge Unit).....	94
5. Refrigerant pipe installation.....	95
6. Drainage pipe installation	99
7. Vacuum Drying and Leakage Checking	103
8. Additional refrigerant charge.....	104
9. Engineering of insulation.....	105
10. Engineering of electrical wiring.....	107
11. Test operation	108

1. Installation Procedure

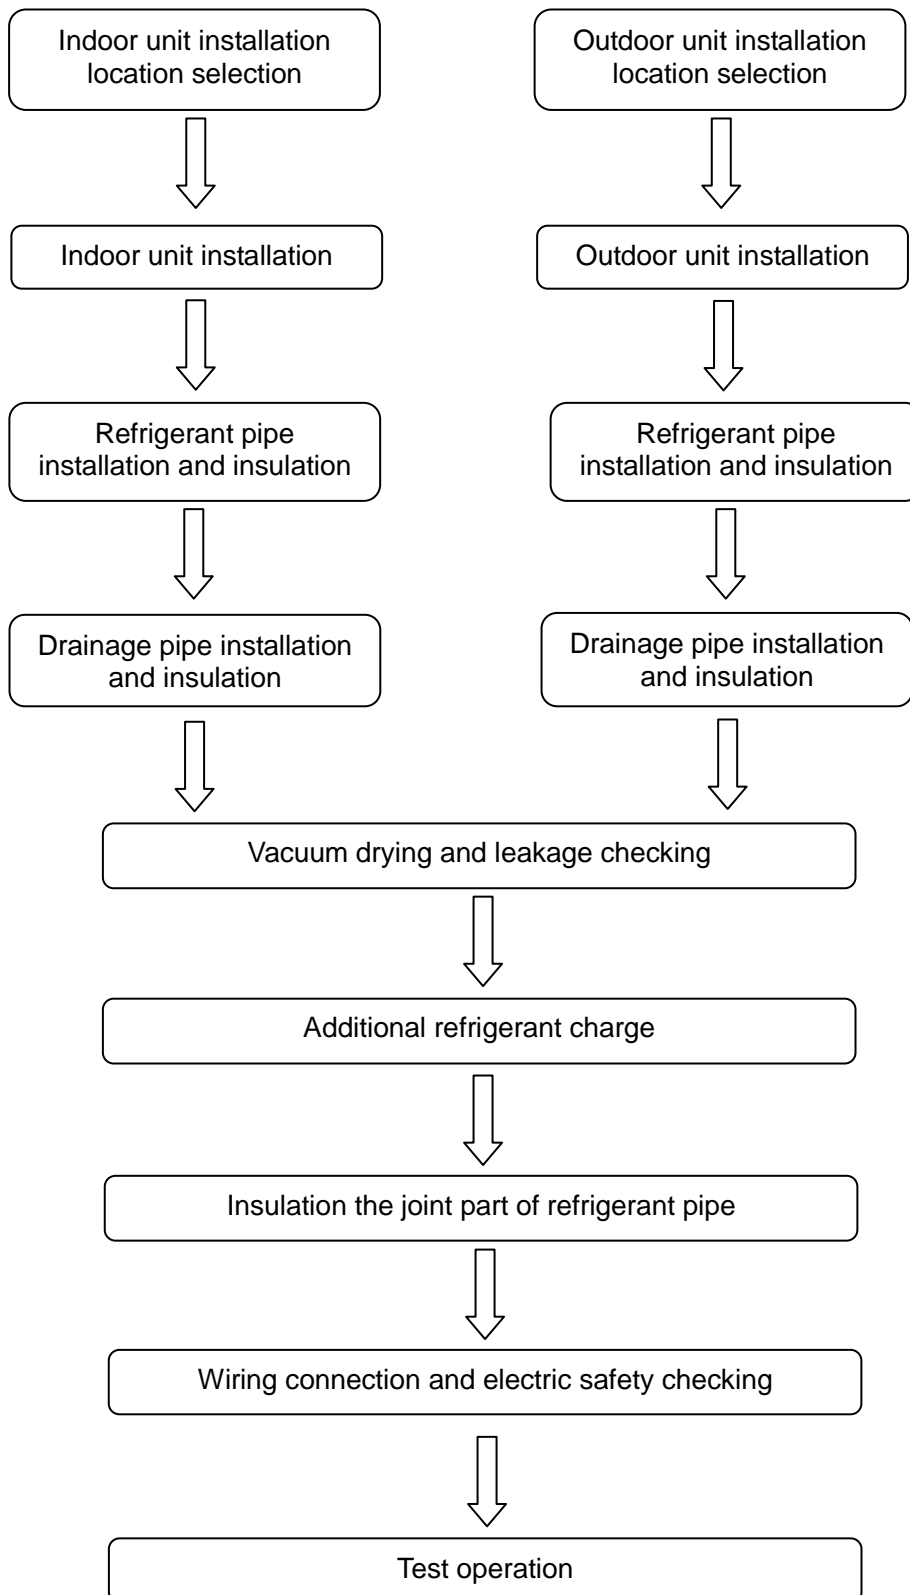


2. Location selection

2.1 Indoor unit location selection

- The place shall easily support the indoor unit's weight.
- The place can ensure the indoor unit installation and inspection.
- The place can ensure the indoor unit horizontally installed.
- The place shall allow easy water drainage.
- The place shall easily connect with the outdoor unit.
- The place where air circulation in the room should be good.
- There should not be any heat source or steam near the unit.
- There should not be any oil gas near the unit
- There should not be any corrosive gas near the unit
- There should not be any salty air near the unit
- There should not be strong electromagnetic wave near the unit
- There should not be inflammable materials or gas near the unit
- There should not be strong voltage vibration.

2.2 Outdoor unit location selection


- The place shall easily support the outdoor unit's weight.
- Locate the outdoor unit as close to indoor unit as possible
- The piping length and height drop can not exceed the allowable value.
- The place where the noise, vibration and outlet air do not disturb the neighbors.
- There is enough room for installation and maintenance.
- The air outlet and the air inlet are not impeded, and not face the strong wind.
- It is easy to install the connecting pipes and cables.
- There is no danger of fire due to leakage of inflammable gas.
- It should be a dry and well ventilation place
- The support should be flat and horizontal
- Do not install the outdoor unit in a dirty or severely polluted place, so as to avoid blockage of the heat exchanger in the outdoor unit.
- If is built over the unit to prevent direct sunlight, rain exposure, direct strong wind, snow and other scraps accumulation, make sure that heat radiation from the condenser is not restricted.

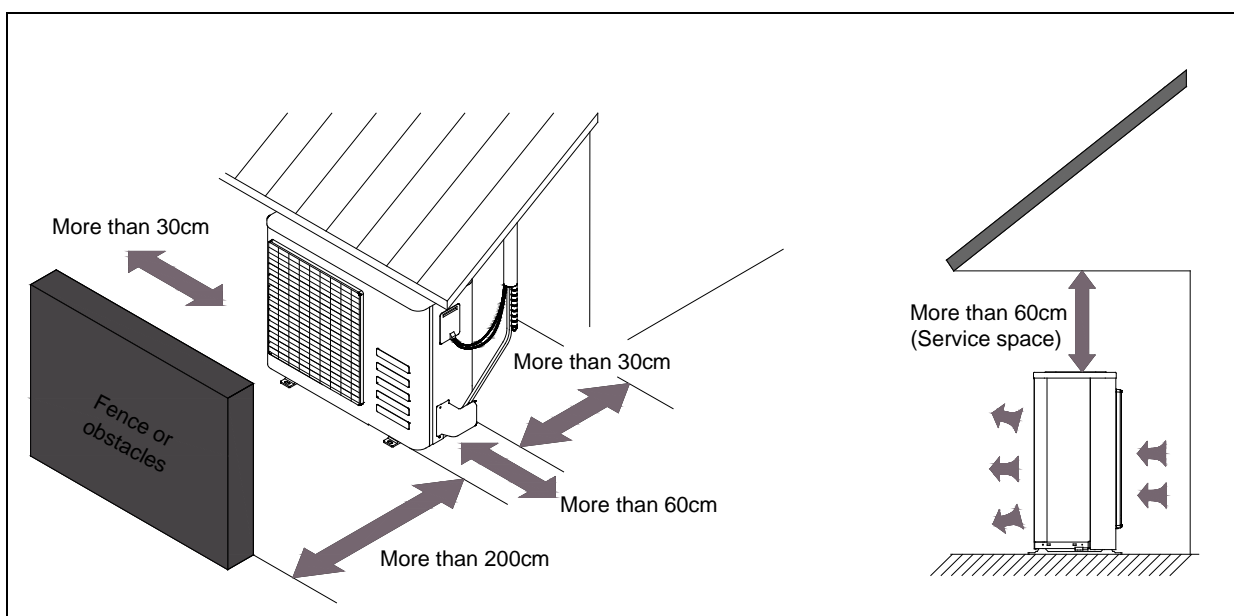

3. Indoor unit installation


3.1 Super slim cassette indoor unit installation

3.1.1 Service space for indoor unit

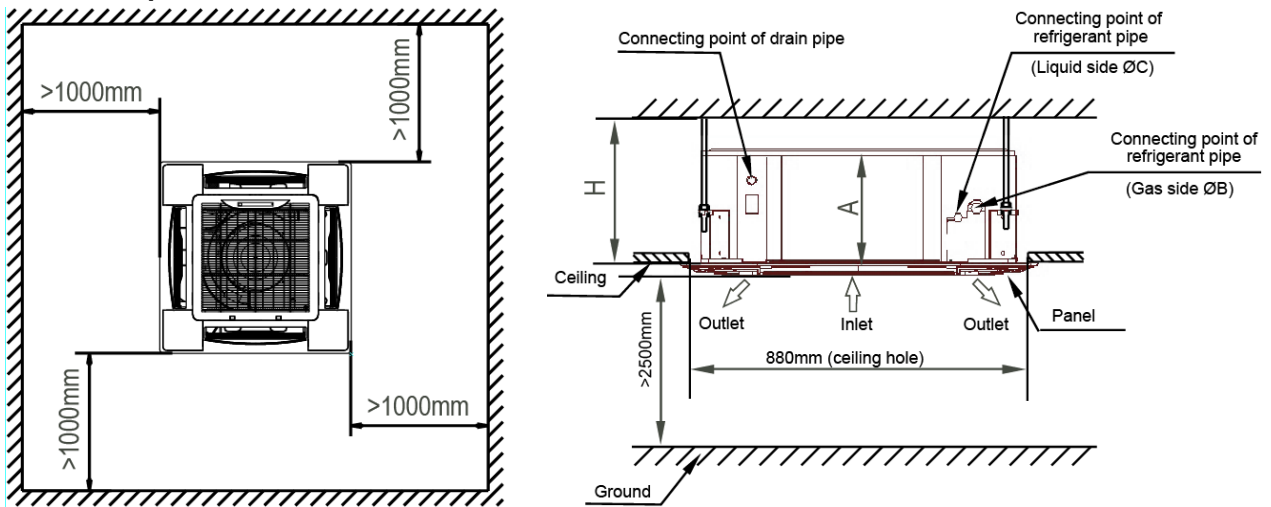

Model	A	H		Remark
18-30	205	>235	R410A and R22	Cooling / Cooling & Heating
36	245	>275	R410A and R22	Cooling / Cooling & Heating

3.1.2 Bolt pitch

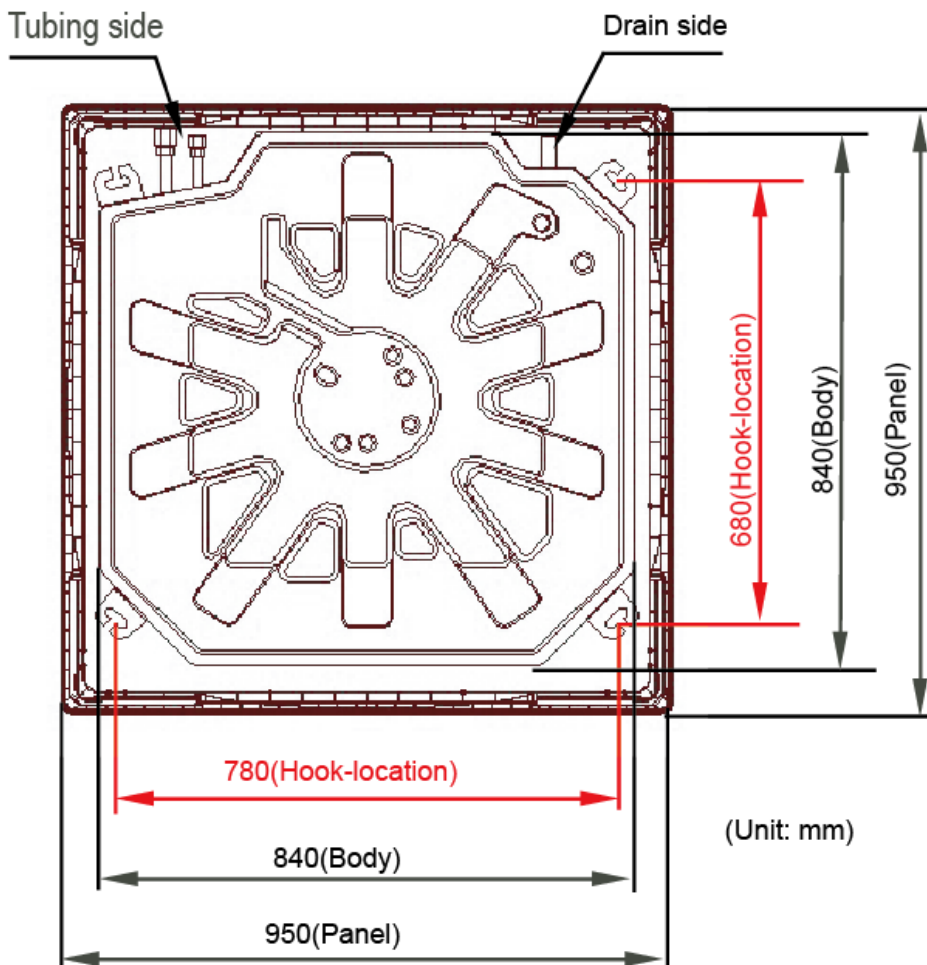

3.1.3 Install the pendant bolt

Select the position of installation hooks according to the hook holes positions showed in upper picture.

Drill four holes of $\text{Ø}12\text{mm}$, 45~50mm deep at the selected positions on the ceiling. Then embed the expansible hooks (fittings).




3.1.4 Install the main body


Make the 4 suspender through the 4 hanger of the main body to suspend it. Adjust the hexangular nuts on the four installation hooks evenly, to ensure the balance of the body. Use a leveling instrument to make sure the levelness of the main body is within $\pm 1^\circ$.



Adjust the position to ensure the gaps between the body and the four sides of ceiling are even. The body's lower part should sink into the ceiling for 10~12 mm. In general, L is half of the screw length of the installation hook.

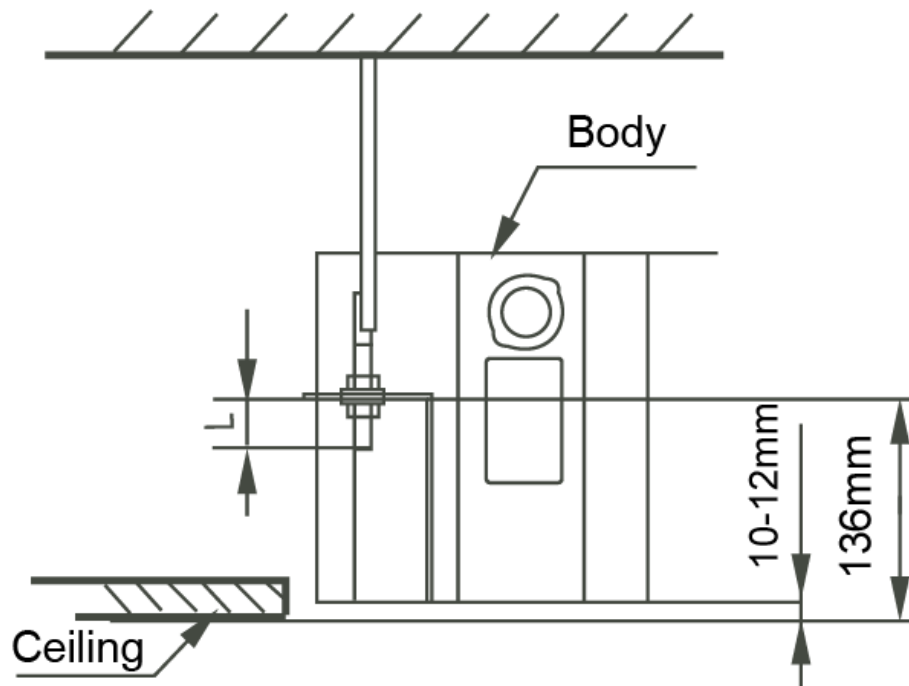


Locate the air conditioner firmly by wrenching the nuts after having adjusted the body's position well.

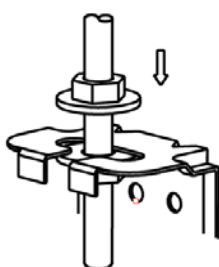


3.1.5 Install the panel


Remove the grille

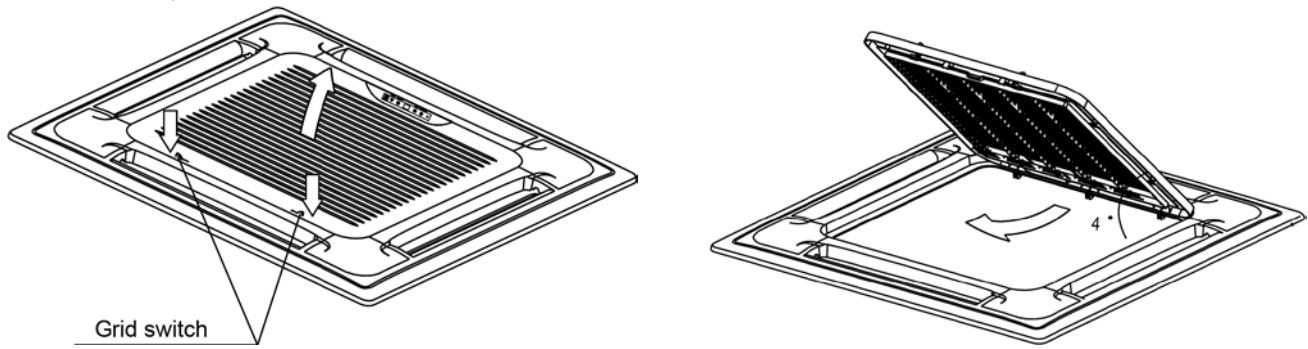



Remove the 4 corner covers.

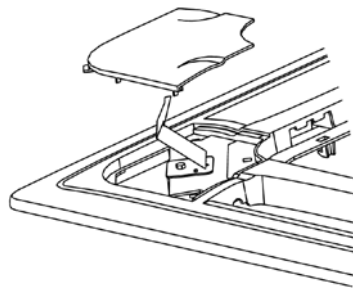

Hang the panel to the hooks on the mainbody. If the panel is with auto-lift grille, please watch the ropes lifing the grille, DO NOT make the ropes enwinded or blocked.

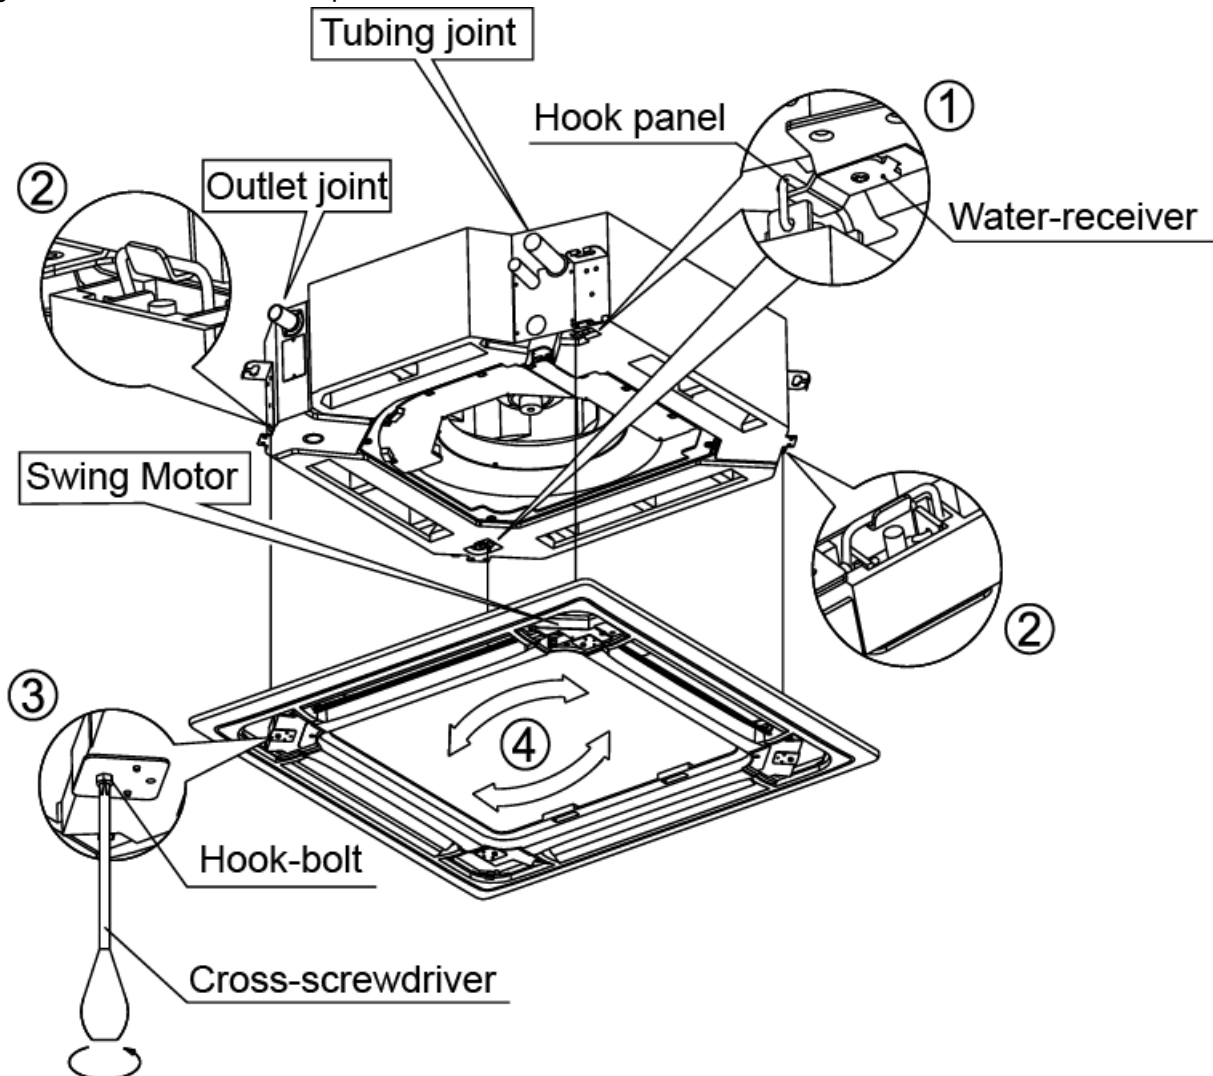


Tighten the screws under the panel hooks till the panel closely stick on the ceiling to avoid condensate water.

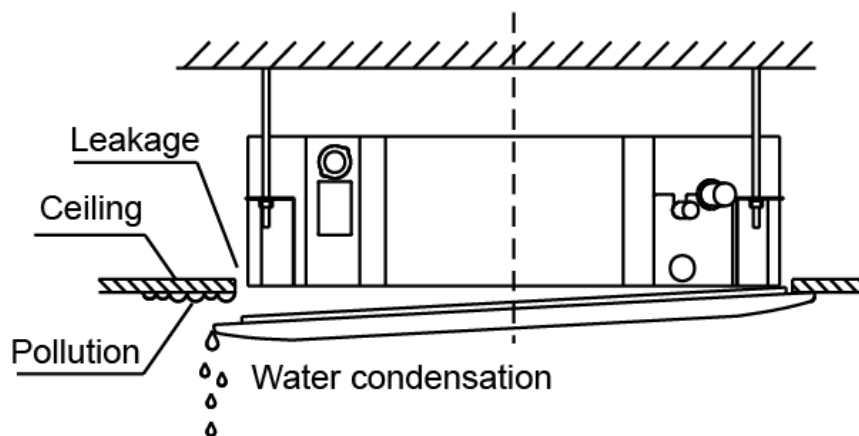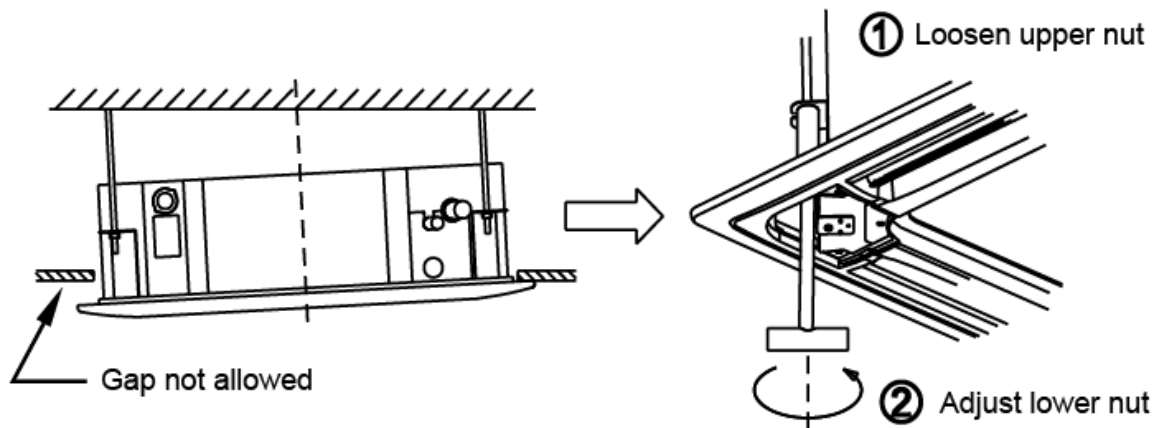

Hang the air-in grill to the panel, then connect the lead terminator of the swing motor and that of the control box with corresponding terminators on the body respectively.


Install the 4 corner covers back.

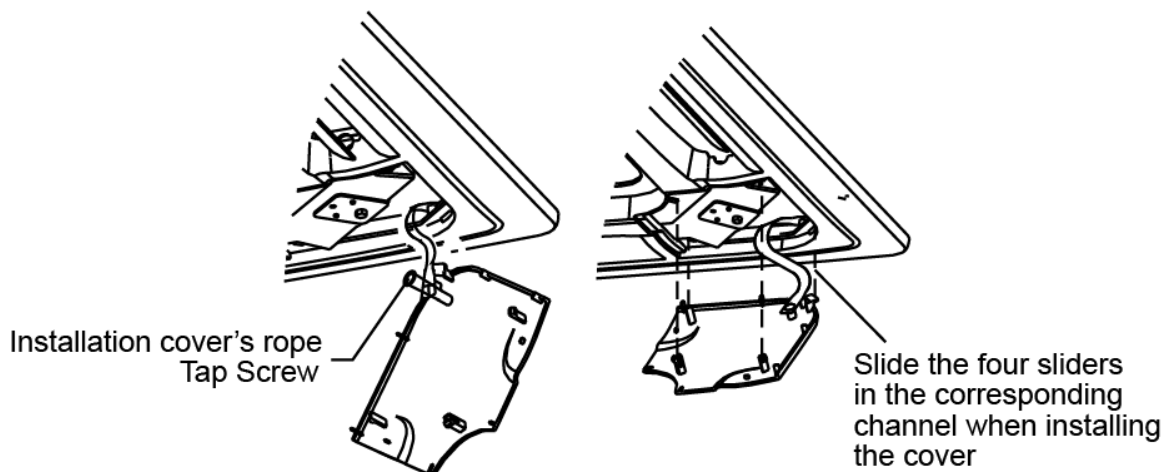


Note: The panel shall be installed after the wiring connected.

3.2 A5 duct indoor unit installation

3.2.1 Service space for indoor unit

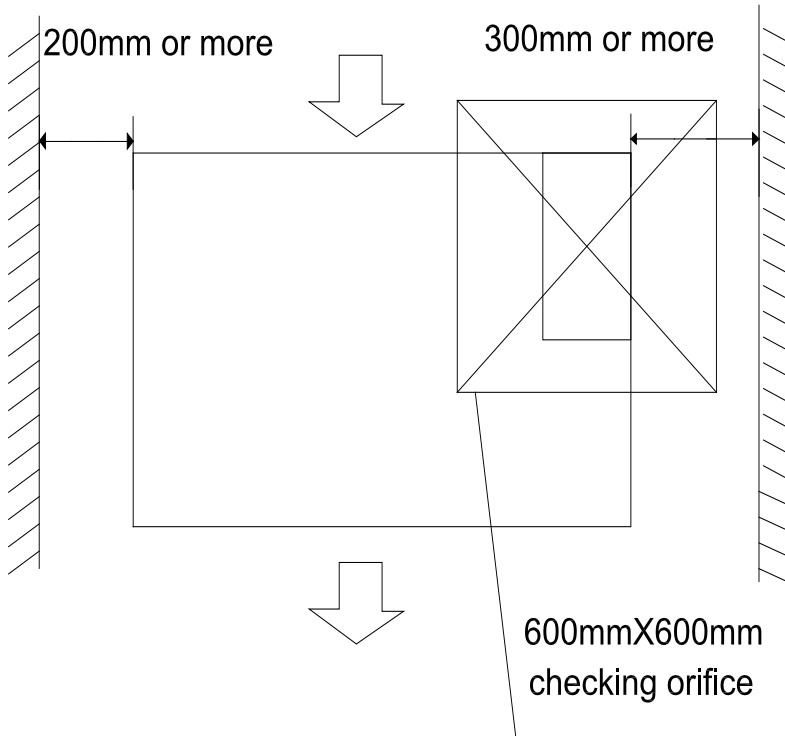

3.2.2 Bolt pitch

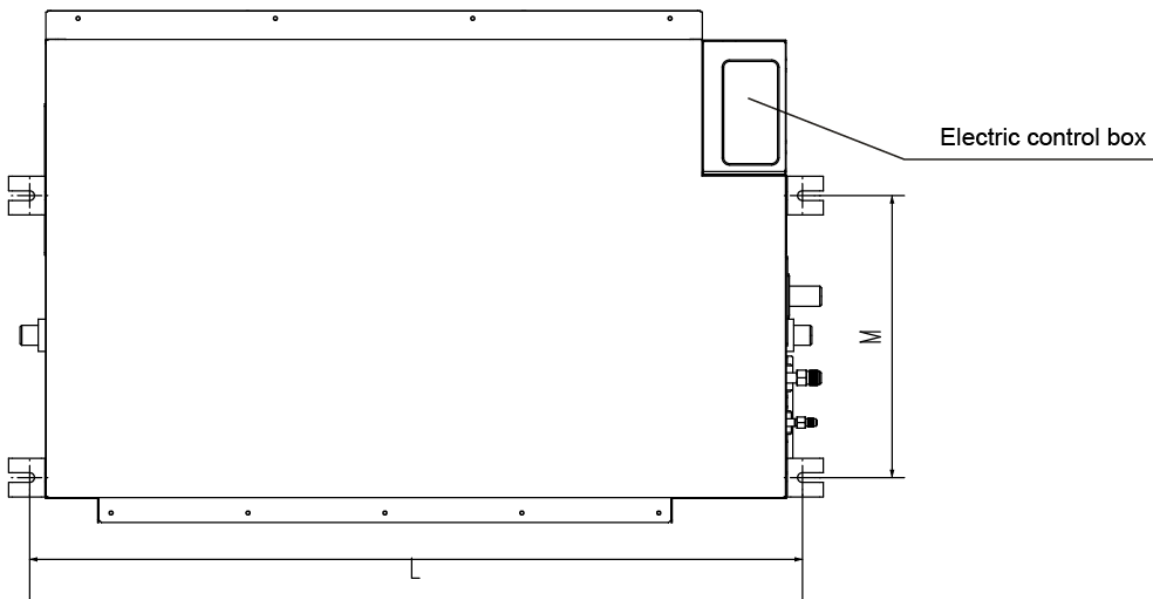

Capacity(KBtu)	Size of outline dimension mounted plug	
	L	M
12	740	350
18/24	960	350
30/36	1180	490


3.2.3 Install the pendant bolt

Select the position of installation hooks according to the hook holes positions showed in upper picture. Drill four holes of $\text{Ø}12\text{mm}$, 45~50mm deep at the selected positions on the ceiling. Then embed the expansible hooks (fittings).




3.2.4 Install the main body

Make the 4 suspender through the 4 hanger of the main body to suspend it. Adjust the hexangular nuts on the four installation hooks evenly, to ensure the balance of the body. Use a leveling instrument to make sure the levelness of the main body is within $\pm 1^\circ$.

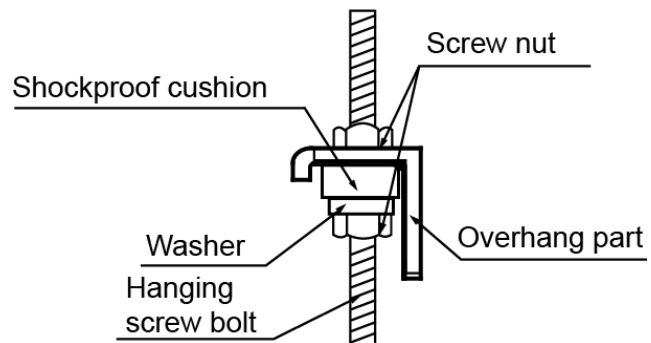


3.2.5 Install the air filter

Insert the air filter through the filter slot and fix it with 2 screws.

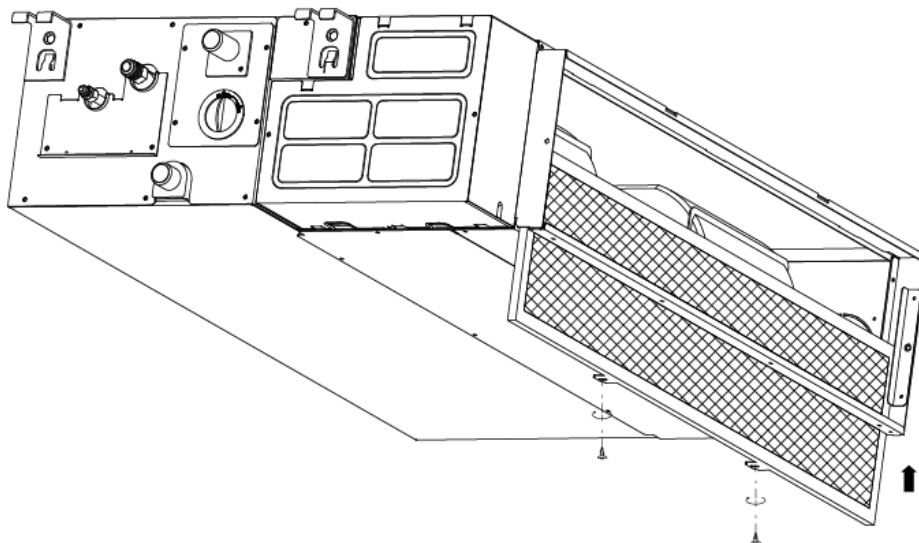


3.2.6 Install the air duct

Please design the air duct as below recommended picture

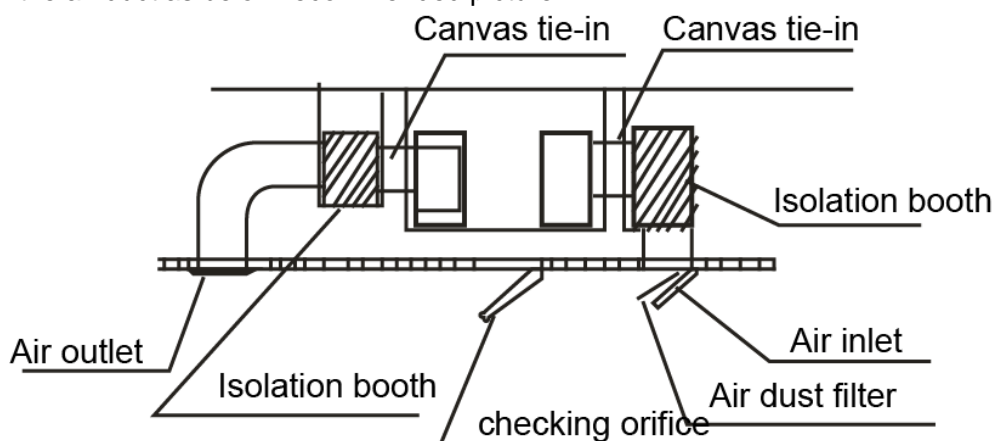


3.2.7 Change the air inlet direction


- ① Take off ventilation panel and flange, cut off the staples at side rail.

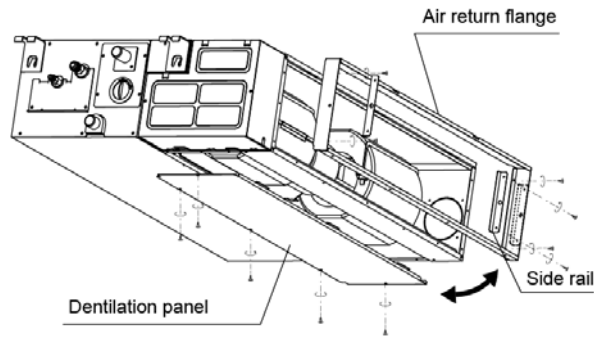


- ② Stick the attached seal sponge as per the indicating place in the following fig, and then change the mounting positions of air return panel and air return flange .

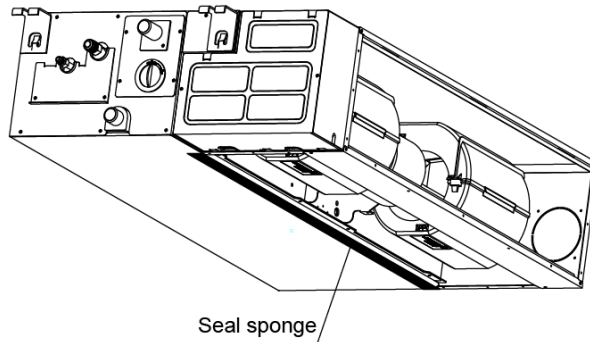

- ③ When install the filter mesh, please plug it into flange inclined from air return opening, and then push up.

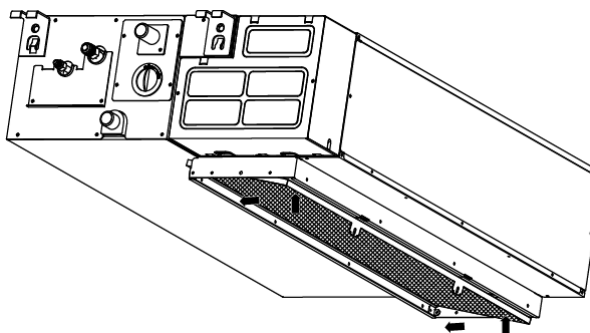


- ④ The installation has finish, upon filter mesh which fixing blocks have been insert to the flange positional holes.

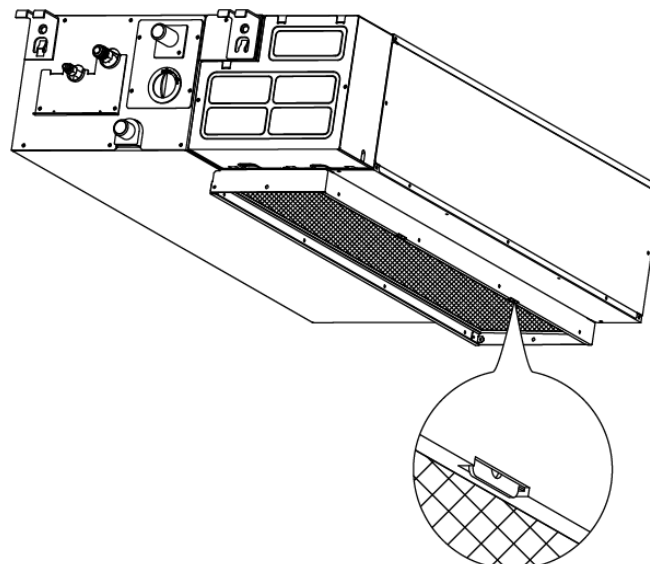


3.3 Ceiling & floor indoor unit installation

3.3.1 Service space for indoor unit

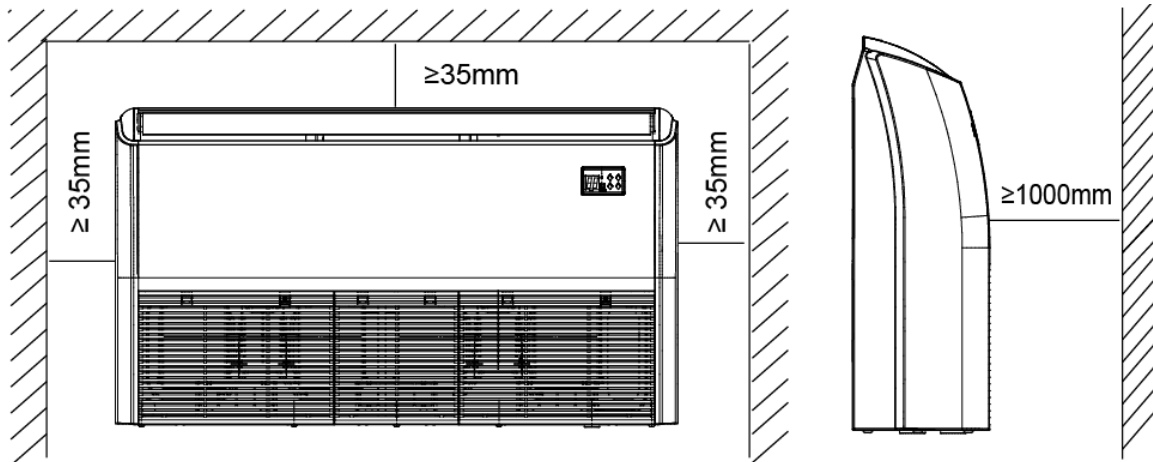


3.3.2 Bolt pitch

① Ceiling installation

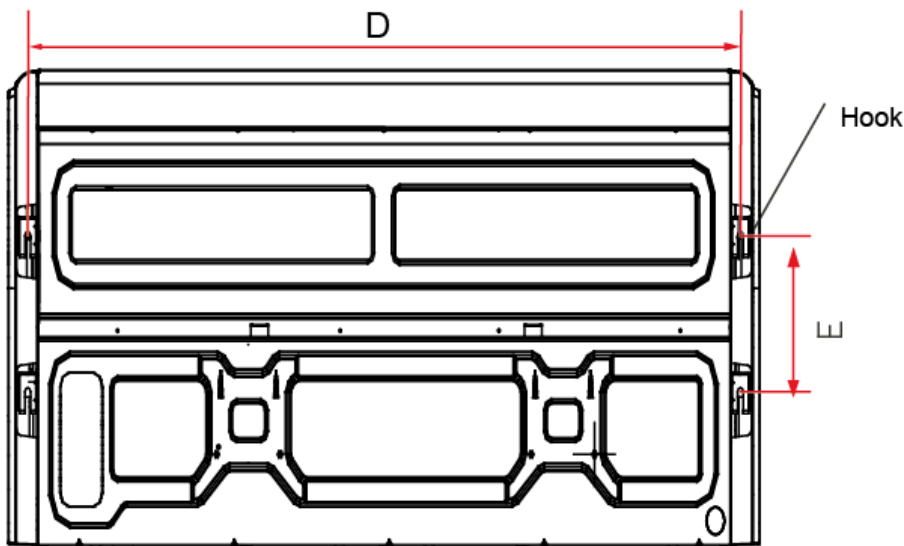

Capacity (Btu/h)	D	E
18K, 24K	983	220
36K	1200	220

② Wall-mounted installation

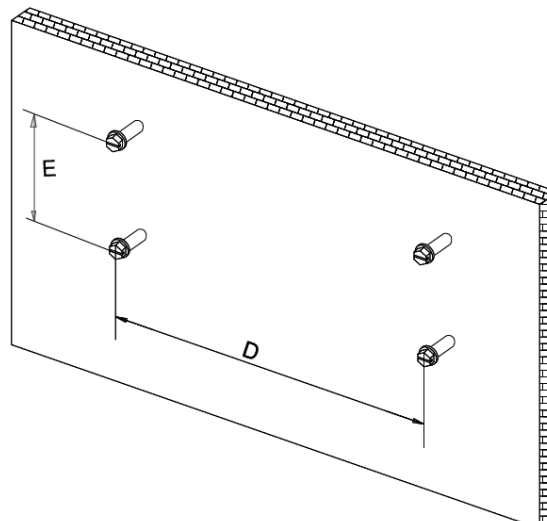

3.3.3 Install the pendant bolt


① Ceiling installation

Select the position of installation hooks according to the hook holes positions showed in upper picture. Drill four holes of $\varnothing 12\text{mm}$, 45~50mm deep at the selected positions on the ceiling. Then embed the expansible hooks (fittings).



② Wall-mounted installation


Install the tapping screws onto the wall. (Refer to picture below)

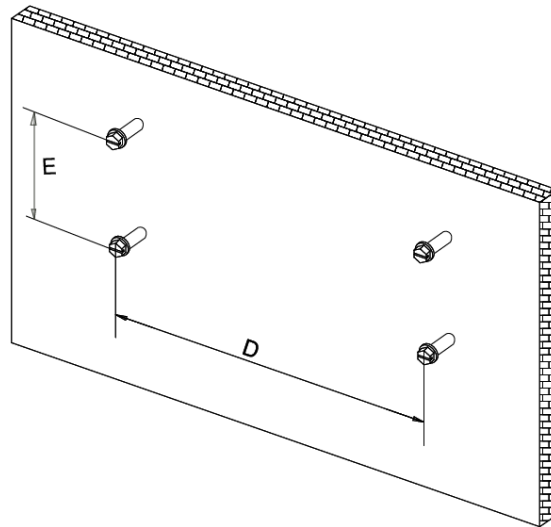


3.3.4 Install the main body

① Ceiling installation (The only installation method for the unit with drain pump)



Remove the side board and the grille.

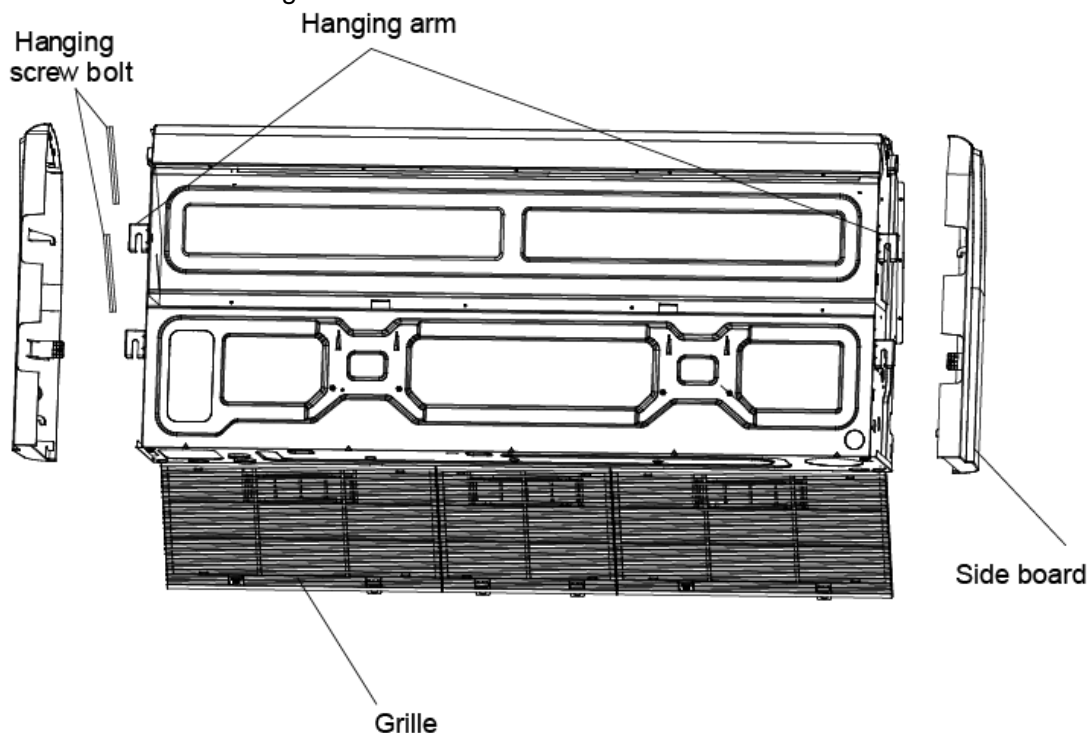

Locate the hanging arm on the hanging screw bolt. Prepare the mounting bolts on the unit.

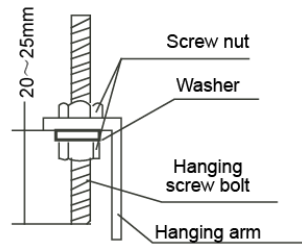


Put the side panels and grilles back.

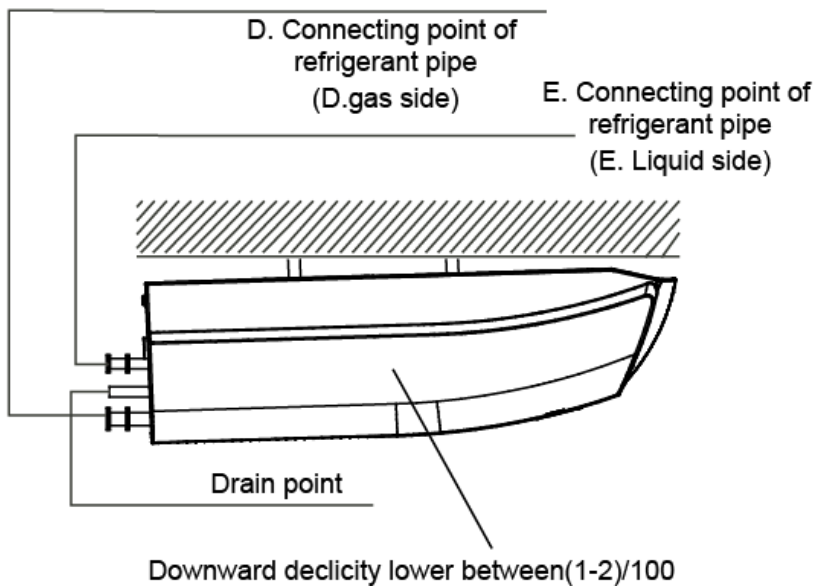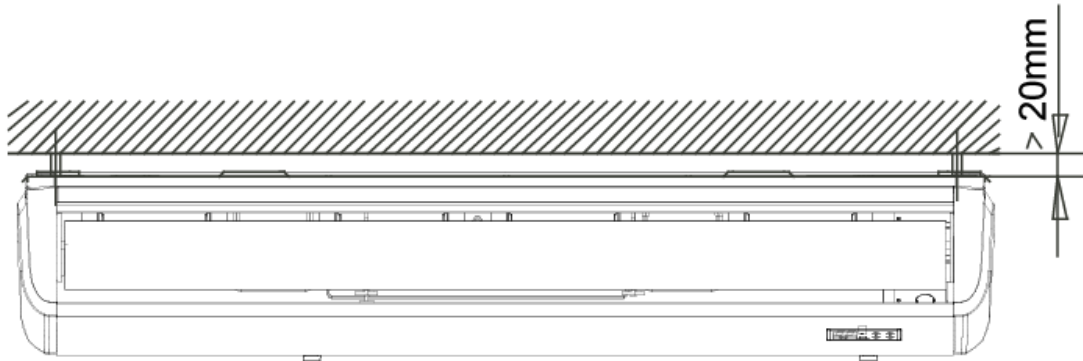


② Wall-mounted installation

Hang the indoor unit by insert the tapping screws into the hanging arms on the main unit. (The bottom of body can touch with floor or suspended, but the body must install vertically.)

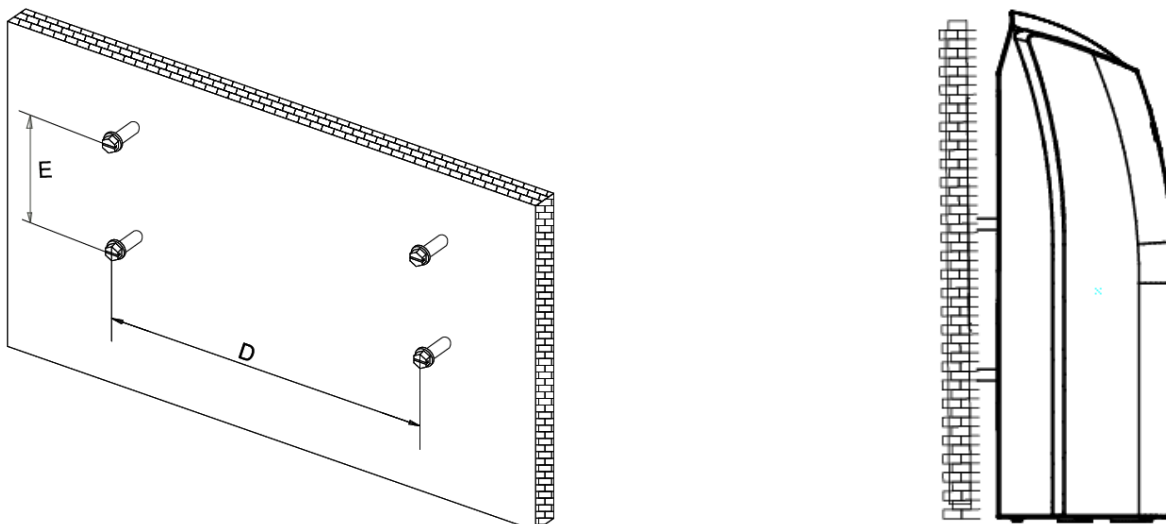


3.4 Compact cassette indoor unit installation

3.4.1 Service space for indoor unit

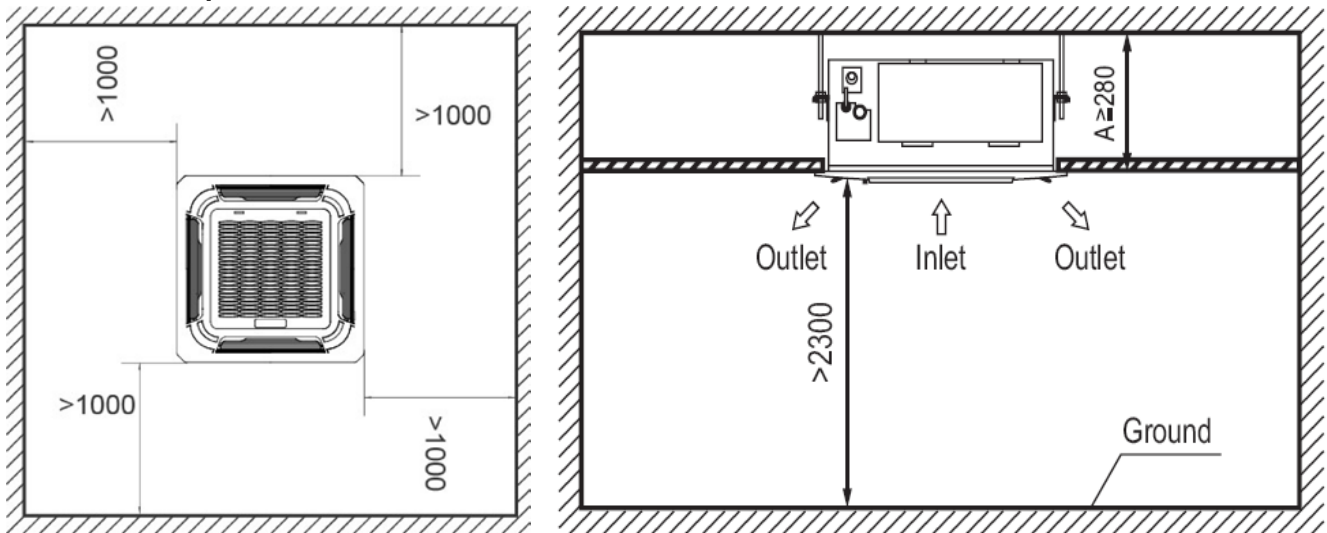

3.4.2 Bolt pitch

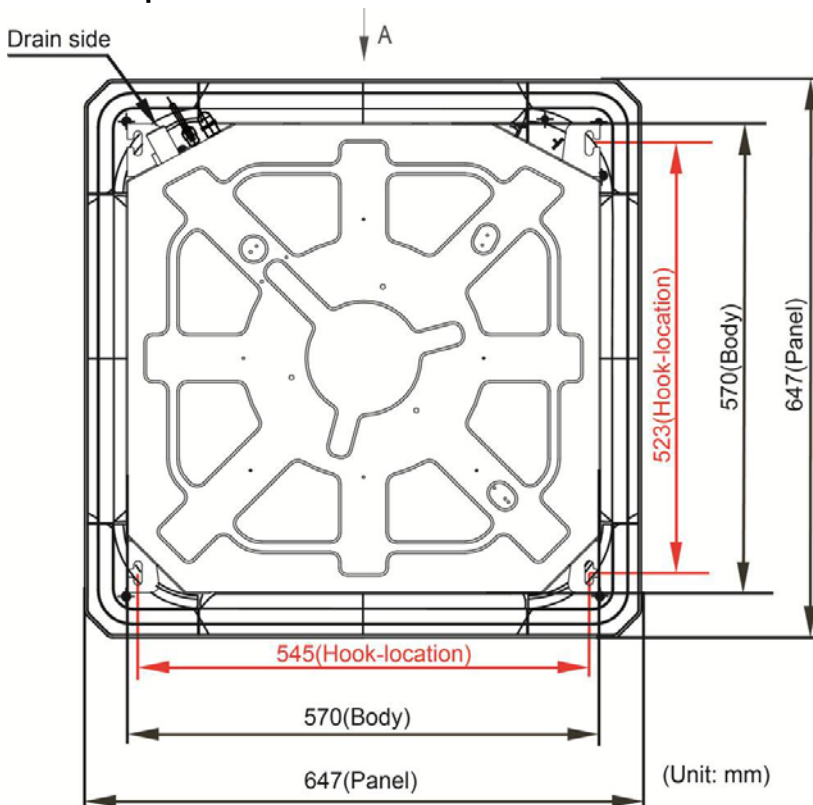

3.4.3 Install the pendant bolt

Select the position of installation hooks according to the hook holes positions showed in upper picture. Drill four holes of $\varnothing 12\text{mm}$, 45~50mm deep at the selected positions on the ceiling. Then embed the expansible hooks (fittings).




Face the concave side of the installation hooks toward the expansible hooks. Determine the length of the installation hooks from the height of ceiling, then cut off the unnecessary part.


If the ceiling is extremely high, please determine the length of the installation hook depending on the real situation.

3.4.4 Install the main body

Make the 4 suspender through the 4 hanger of the main body to suspend it. Adjust the hexangular nuts on the four installation hooks evenly, to ensure the balance of the body. Use a leveling instrument to make sure the levelness of the main body is within $\pm 1^\circ$.

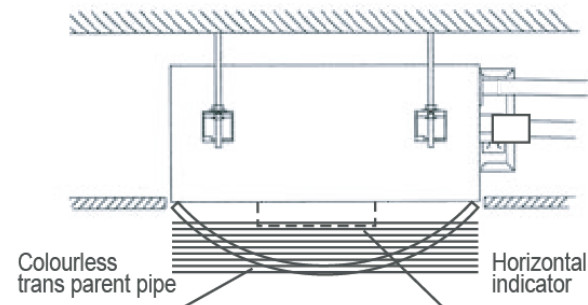

Adjust the position to ensure the gaps between the body and the four sides of ceiling are even. The body's lower part should sink into the ceiling for 10~12 mm. In general, L is half of the screw length of the installation hook.

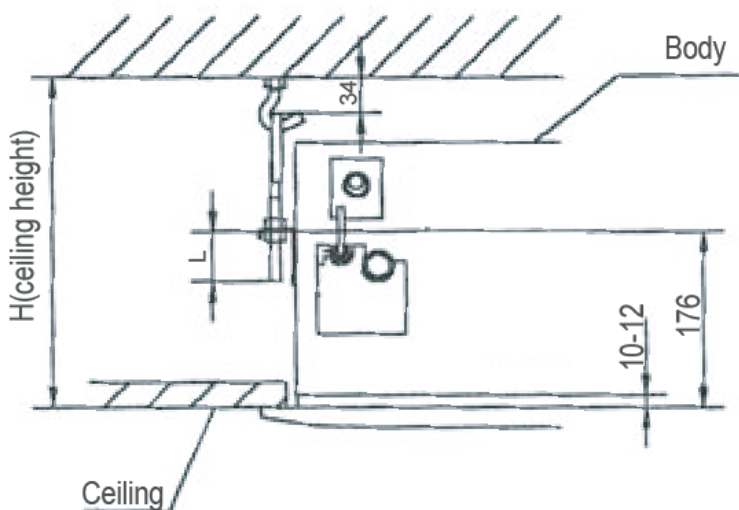


Locate the air conditioner firmly by wrenching the nuts after having adjusted the body's position well.




3.4.5 Install the panel


Remove the grille

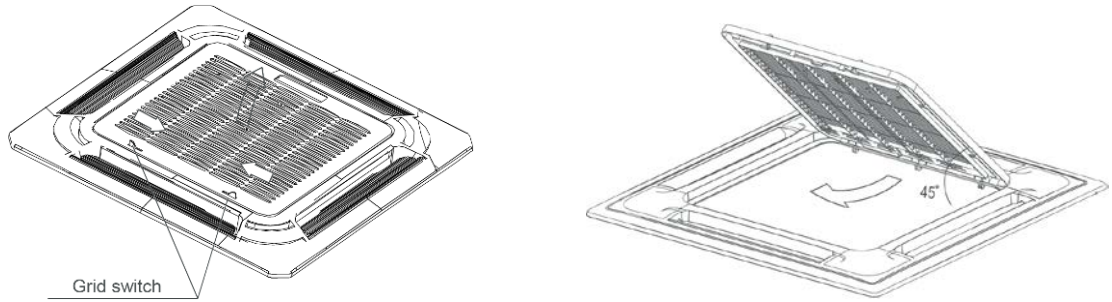

Hang the panel to the hooks on the mainbody.

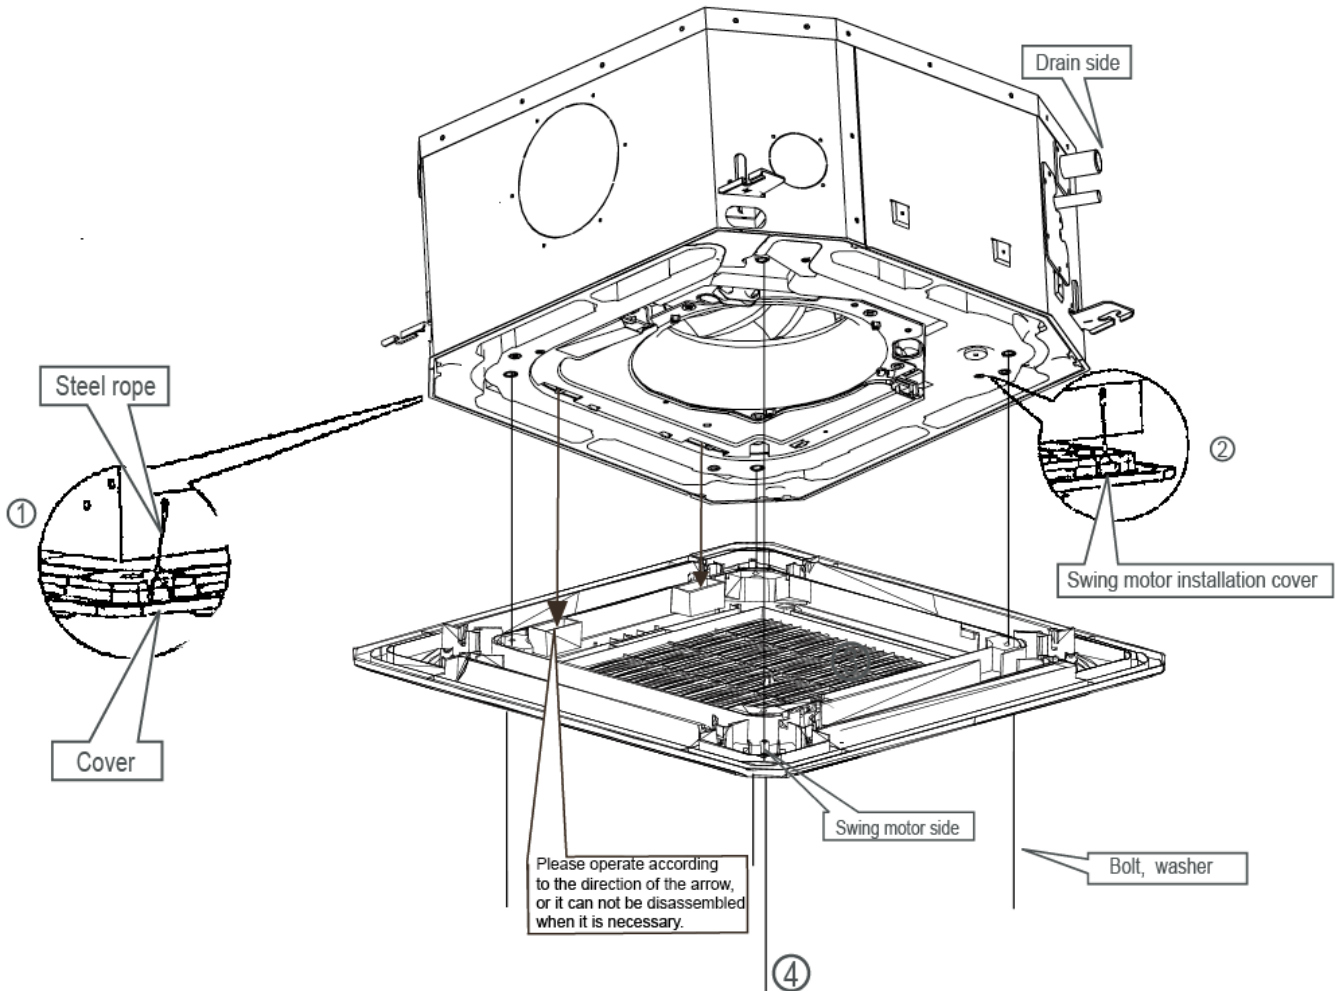

Tighten the screws under the panel hooks till the panel closely stick on the ceiling to avoid condensate water.

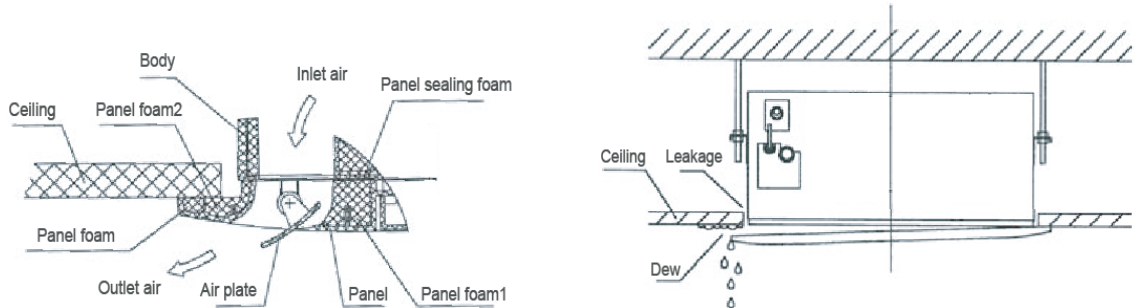


Hang the air-in grill to the panel, then connect the lead terminator of the swing motor and that of the control box with corresponding terminators on the body respectively.

Note: The panel shall be installed after the wiring connected.


3.5 Console indoor unit installation

3.5.1 Service space for indoor unit

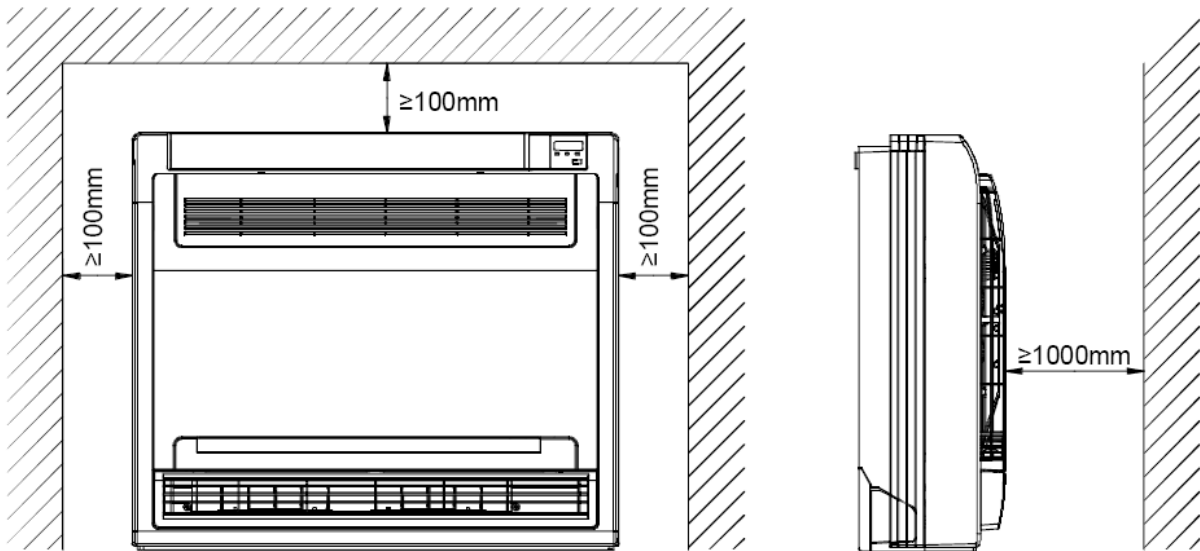


3.5.2 Install the main body

- Fix the hook with tapping screw onto the wall

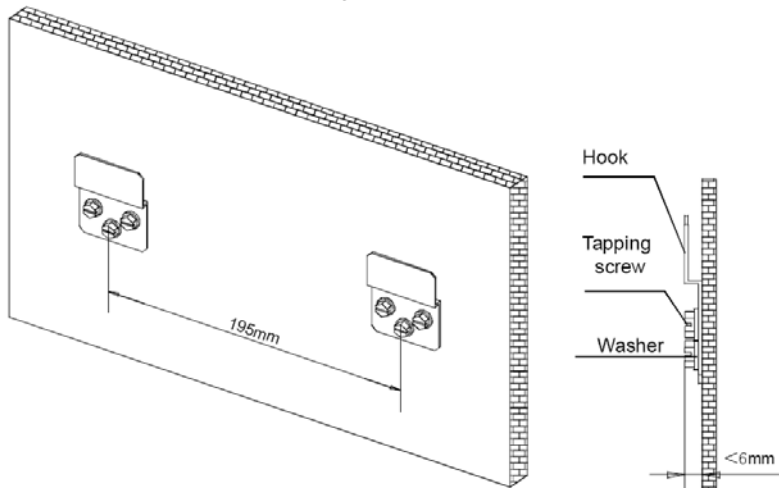


- Hang the indoor unit on the hook.
(The bottom of body can touch with floor or suspended, but the body must install vertically.)

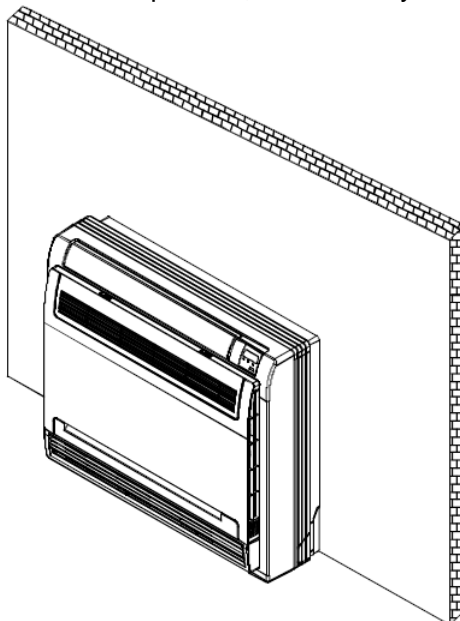


4. Outdoor unit installation (Side Discharge Unit)

4.1 Service space for outdoor unit

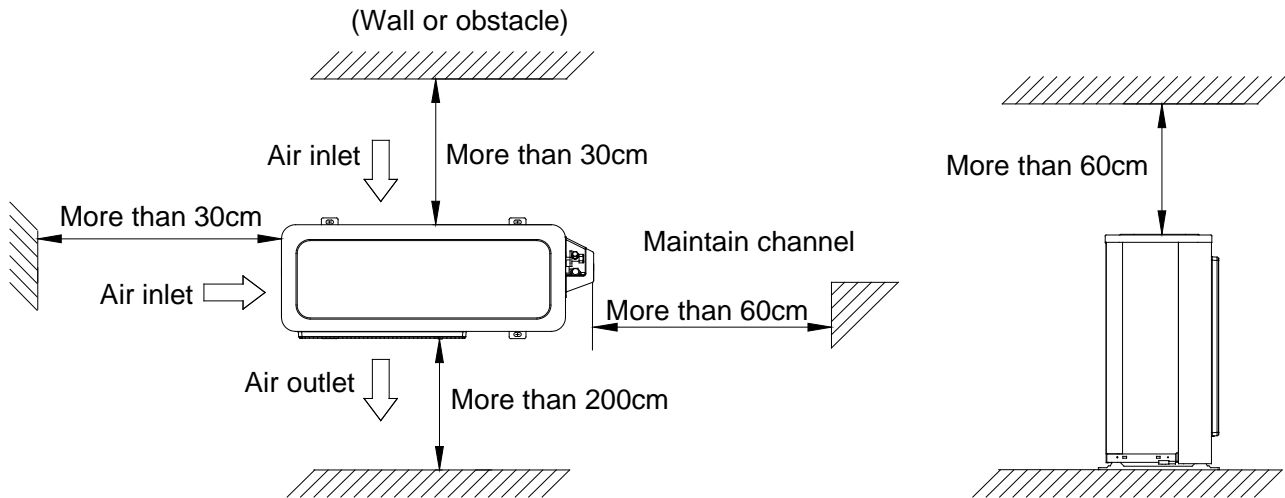

4.2 Bolt pitch

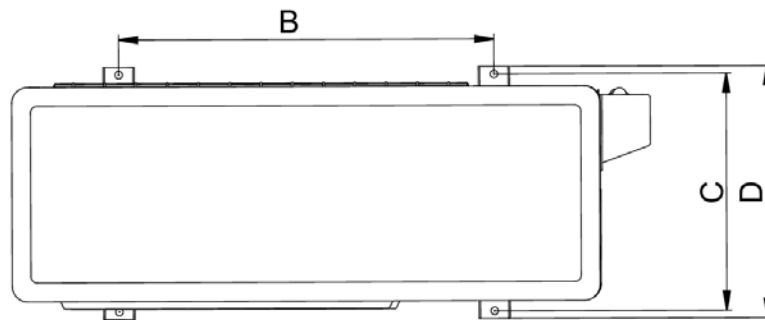

Model	B	C	D
KOU-12HFN1-QRC8	530	290	315
KOU-18HFN1-QRC4	560	335	360
KOU-18HFN1-QRC8			
KOU-24HFN1-QRC4	590	333	355
KOU-24HFN1-QRC8			
KOU-30HFN1-QRC8			
KOU-36HFN1-QRC4	624	366	396
KOU-36HFN1-RRC4			
KOU-36HFN1-QRC8(520)			
KOU-36HFN1-RRC8(520)			
KOU-36HFN1-QRC8(5A0)	633.5	404	448
KOU-36HFN1-RRC8(5A0)			

4.3 Install the Unit


Since the gravity center of the unit is not at its physical center, so please be careful when lifting it with a sling. Never hold the inlet of the outdoor unit to prevent it from deforming.

Do not touch the fan with hands or other objects.

Do not lean it more than 45°, and do not lay it sidelong.

Make concrete foundation according to the specifications of the outdoor units.

Fasten the feet of this unit with bolts firmly to prevent it from collapsing in case of earthquake or strong wind.

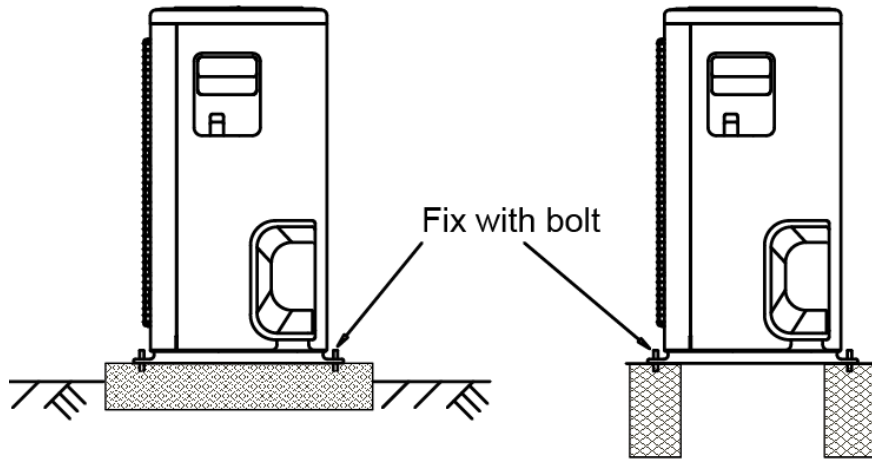

5. Refrigerant pipe installation

5.1 Maximum pipe length and height drop

Considering the allowable pipe length and height drop to decide the installation position. Make sure the distance and height drop between indoor and outdoor unit not exceeded the data in the following table.

Model	Max. Length	Max. Elevation
12,000Btu/h	25m	10m
18,000Btu/h	30m	20m
24,000Btu/h~30,000Btu/h	50m	25m
36,000Btu/h ~60,000Btu/h	65m	30m

5.2 The procedure of connecting pipes


5.2.1 Choose the pipe size according to the specification table.

5.2.2 Confirm the cross way of the pipes.

5.2.3 Measure the necessary pipe length.

5.2.4 Cut the selected pipe with pipe cutter

- Make the section flat and smooth.

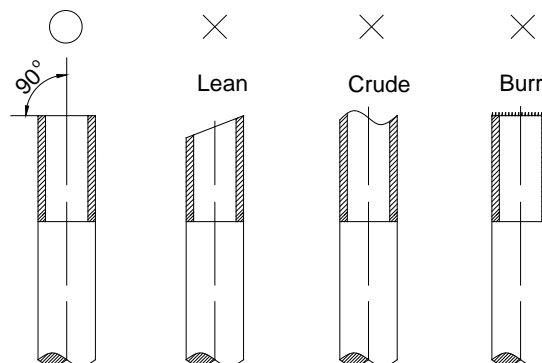


5.2.5 Insulate the copper pipe

- Before test operation, the joint parts should not be heat insulated.

5.2.6 Flare the pipe

- Insert a flare nut into the pipe before flaring the pipe
- According to the following table to flare the pipe

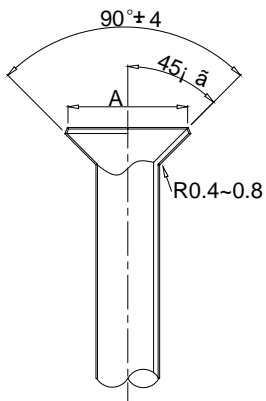Pipe diameter	Flare dimension A (mm)		Flare shape
	Min	Max	
1/4" (6.35)	8.3	8.7	
3/8" (9.52)	12.0	12.4	
1/2" (12.7)	15.4	15.8	
5/8" (15.9)	18.6	19.1	
3/4" (19)	22.9	23.3	

➤ After flared the pipe, the opening part must be seal by end cover or adhesive tape to avoid duct or exogenous impurity come into the pipe.

5.2.7 Drill holes if the pipes need to pass the wall.

5.2.8 According to the field condition to bend the pipes so that it can pass the wall smoothly.

5.2.9 Bind and wrap the wire together with the insulated pipe if necessary.

5.2.10 Set the wall conduit


5.2.11 Set the supporter for the pipe.

5.2.12 Locate the pipe and fix it by supporter

- For horizontal refrigerant pipe, the distance between supporters should not be exceed 1m.
- For vertical refrigerant pipe, the distance between supporters should not be exceed 1.5m.

5.2.13 Connect the pipe to indoor unit and outdoor unit by using two spanners.


➤ Be sure to use two spanners and proper torque to fasten the nut, too large torque will damage the bellmouthing, and too small torque may cause leakage. Refer the following table for different pipe connection.

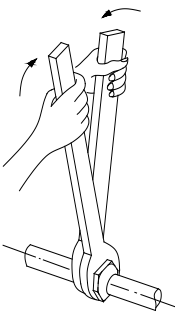Pipe Diameter	Torque		Sketch map
	(kgf.cm)	(N.cm)	
1/4" (6.35)	144~176	1420~1720	
3/8" (9.52)	333~407	3270~3990	
1/2" (12.7)	504~616	4950~6030	
5/8" (15.9)	630~770	6180~7540	
3/4" (19)	990~1210	9270~11860	

5.3 For Units with Twins Function

5.3.1 Length and drop height permitted of the refrigerant piping

Note: Reduced length of the branching tube is the 0.5m of the equivalent length of the pipe.

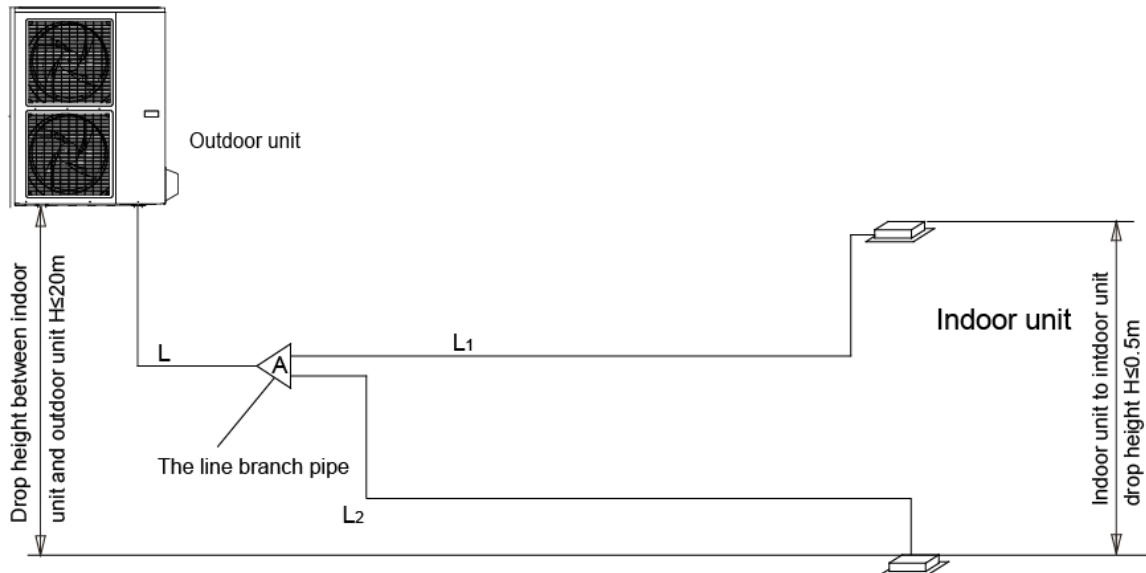

Note: All used branch pipe must be produced by Midea, otherwise it causes malfunction. The indoor units should be installed equivalently at the both side of the U type branch pipe.

		Permitted Value		Piping
Pipe Length	Total pipe length (Actual)	18K+18K	30m	L+L1+L2
		24K+24K	50m	
		30K+30K	50m	
	Max. branch pipe length		15m	L1, L2
	Max. branch pipe length difference		10m	L1-L2
Drop Height	Max. height difference between indoor unit and outdoor unit		20m	H1
	Max. height difference between indoor units		0.5m	H2


5.3.2 Size of joint pipes for indoor unit (R410a)

Capacity of indoor unit (A)	Size of main pipe(mm)		
	Gas side	Liquid side	Available branching pipe
18K	Φ12.7	Φ6.35	CE-FQZHN-01C
24K	Φ15.9	Φ9.5	CE-FQZHN-01C
30K	Φ15.9	Φ9.5	CE-FQZHN-01C

5.3.3 Size of joint pipes for outdoor unit (R410a)

Model	the size of main pipe(mm)		
	Gas side	Liquid side	The 1st branching pipe
36K	Φ15.9	Φ9.5	CE-FQZHN-01C
48K	Φ15.9	Φ9.5	CE-FQZHN-01C
60K	Φ15.9	Φ9.5	CE-FQZHN-01C

5.3.4 The branching pipe must be installed horizontally, error angle of it should not large than 10°. Otherwise, malfunction will be caused.

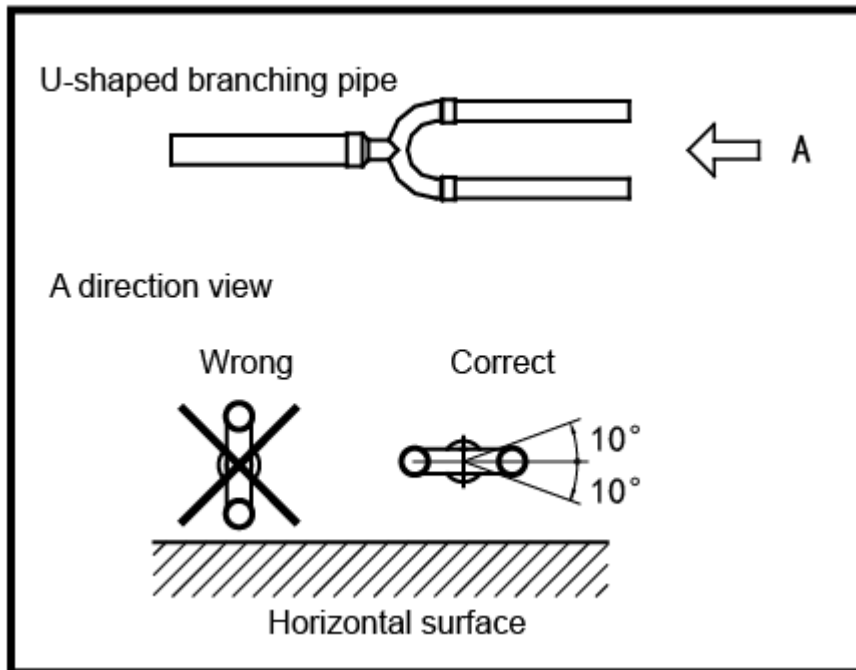

6. Drainage pipe installation

Install the drainage pipe as shown below and take measures against condensation. Improperly installation could lead to leakage and eventually wet furniture and belongings.

6.1 Installation principle

- Ensure at least 1/100 slope of the drainage pipe
- Adopt suitable pipe diameter
- Adopt nearby condensate water discharge

6.2 Key points of drainage water pipe installation

6.2.1 Considering the pipeline route and elevation

- Before installing condensate water pipeline, determine its route and elevation to avoid intersection with other pipelines and ensure slope is straight.

6.2.2 Drainage pipe selection

- The drainage pipe diameter shall not small than the drain hose of indoor unit
- According to the water flowrate and drainage pipe slope to choose the suitable pipe, the water flowrate is decided by the capacity of indoor unit.

Relationship between water flowrate and capacity of indoor unit

Capacity (x1000Btu)	Water flowrate (l/h)
12	2.4
18	4
24	6
30	7
36	8
42	10
48	12
60	14

According to the above table to calculate the total water flowrate for the confluence pipe selection.

For horizontal drainage pipe (The following table is for reference)

PVC pipe	Reference value of inner diameter of pipe (mm)	Allowable maximum water flowrate (l/h)		Remark
		Slope 1/50	Slope 1/100	
PVC25	20	39	27	For branch pipe
PVC32	25	70	50	
PVC40	31	125	88	
PVC50	40	247	175	Could be used for confluence pipe
PVC63	51	473	334	

Attention: Adopt PVC40 or bigger pipe to be the main pipe.

For Vertical drainage pipe (The following table is for reference)

PVC pipe	Reference value of inner diameter of pipe (mm)	Allowable maximum water flowrate (l/h)	Remark
PVC25	20	220	For branch pipe
PVC32	25	410	
PVC40	31	730	
PVC50	40	1440	Could be used for confluence pipe
PVC63	51	2760	
PVC75	67	5710	
PVC90	77	8280	


Attention: Adopt PVC40 or bigger pipe to be the main pipe.

6.2.3 Individual design of drainage pipe system



- The drainage pipe of air conditioner shall be installed separately with other sewage pipe, rainwater pipe and drainage pipe in building.
- The drainage pipe of the indoor unit with water pump should be apart from the one without water pump.

6.2.4 Supporter gap of drainage pipe

- In general, the supporter gap of the drainage pipe horizontal pipe and vertical pipe is respectively 1m~1.5m and 1.5m~2.0m.
- Each vertical pipe shall be equipped with not less than two hangers.
- Overlarge hanger gap for horizontal pipe shall create bending, thus leading to air block.

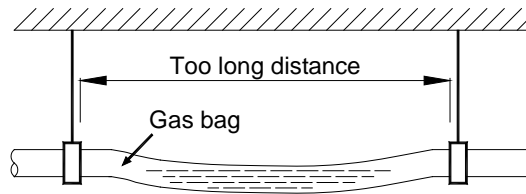


6.2.5 The horizontal pipe layout should avoid converse flow or bad flow

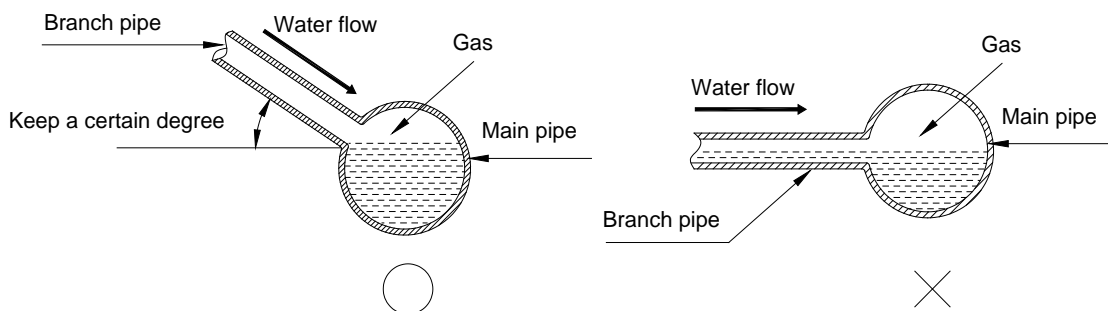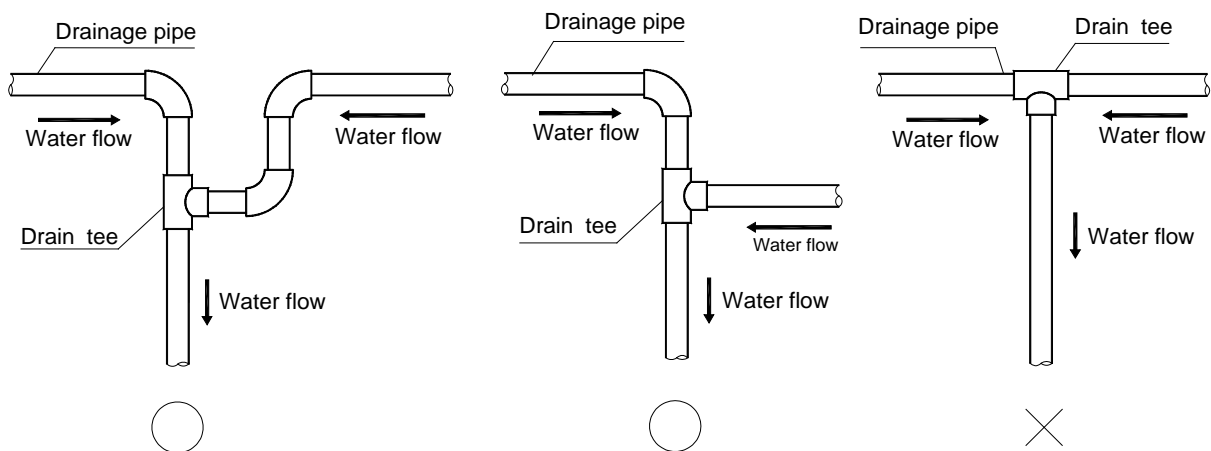

- The correct installation will not cause converse water flow and the slope of the branch pipes can be adjusted freely
- The false installation will cause converse water flow and the slope of the branch pipe can not be adjusted.


6.2.6 Water storage pipe setting

- If the indoor unit has high extra static pressure and without water pump to elevate the condensate water, such as high extra static pressure duct unit, the water storage pipe should be set to avoid converse flow or blow water phenomena.

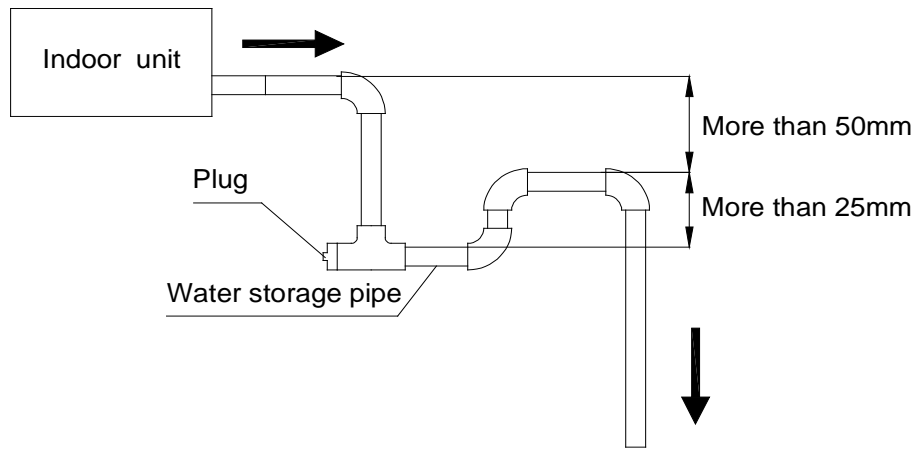


6.2.7 Lifting pipe setting of indoor unit with water pump

- The length of lifting pipe should not exceed the pump head of indoor unit water pump.
 Pump head of big four way cassette: 750mm
 Pump head of compact four way cassette: 500mm
- The drainage pipe should be set down inclined after the lifting pipe immediately to avoid wrong operation of water level switch.
- Refer the following picture for installation reference.

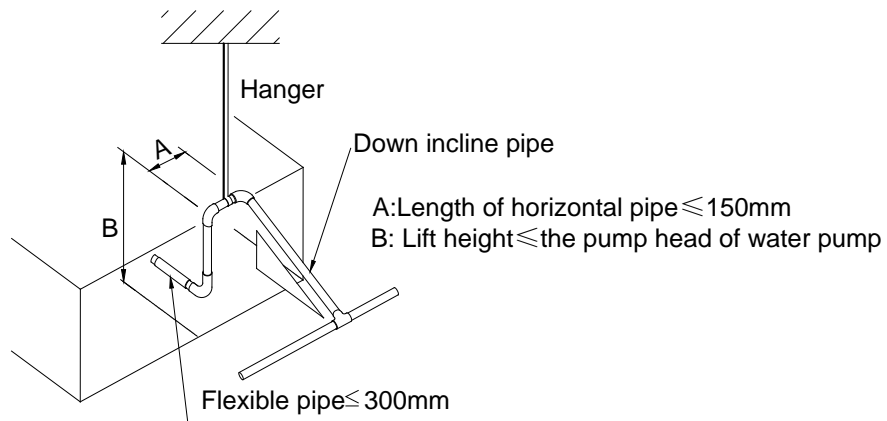

6.2.8 Blowhole setting

- For the concentrated drainage pipe system, there should design a blowhole at the highest point of main pipe to ensure the condensate water discharge smoothly.
- The air outlet shall face down to prevent dirt entering pipe.
- Each indoor unit of the system should be installed it.
- The installation should be considering the convenience for future cleaning.

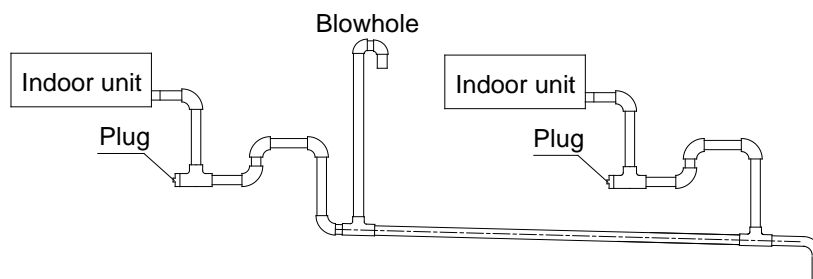

6.2.9 The end of drainage pipe shall not contact with ground directly.

6.3 Drainage test


6.3.1 Water leakage test

After finishing the construction of drainage pipe system, fill the pipe with water and keep it for 24 hours to check whether there is leakage at joint section.

6.3.2 Water discharge test

1. Natural drainage mode(the indoor unit with outdoor drainage pump)

Infuse above 600ml water through water test hole slowly into the water collector, observe whether the water can discharge through the transparent hard pipe at drainage outlet.
2. Pump drainage mode
 - 2.1 Disconnect the plug of water level switch, remove the cover of water test hole and slowly infuse about 2000ml water through the water test hole, be sure that the water will not touch the motor of drainage pump.

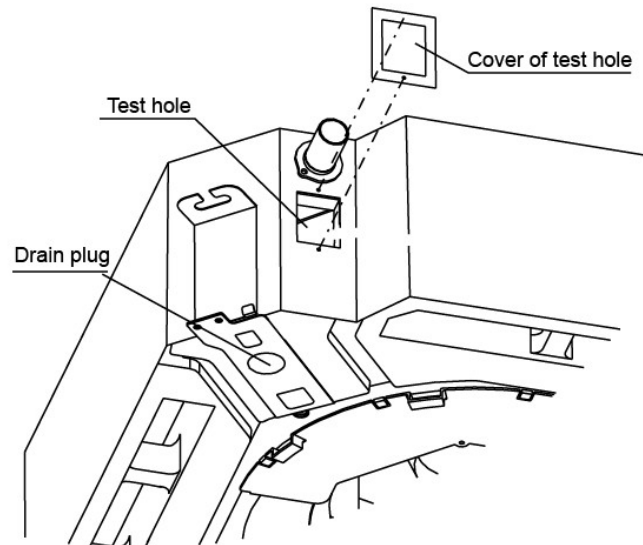

- 2.2 Power on and let the air conditioner operate for cooling. Check operation status of drainage pump, and then connect the plug of water level switch, check the operation sound of water pump and observe whether the water can discharge through the transparent hard pipe at drainage outlet. (In light of the length of drainage pipe, water shall be discharged about 1 minute delayed)
- 2.3 Stop the operation of air conditioner, power off the power supply and put the cover of water test hole back to the original place.
 - a. After stopped the air conditioner 3 minutes, check whether there is anything abnormal. If drainage pipes have not been distributed properly, over back-flow water shall cause the flashing of alarm indicator at remote-controlled receiving board and even water shall run over the water collector.
 - b. Continuously infusing water until water level alarmed, check whether the drainage pump could discharge water at once. If water level does not decline under warning water level 3 minutes later, it shall cause shutdown of unit. When this situation happens, the normal startup only can be recovered by turning down power supply and eliminating accumulated water.

Note: Drain plug at the main water-containing plate is used for eliminating accumulated water in water-containing plate when maintaining air conditioner fault. During normal operation, the plug shall be filled in to prevent leakage.

6.4 Insulation work of drainage pipe

Refer the introduction to the insulation engineering parts.

7. Vacuum Drying and Leakage Checking

7.1 Purpose of vacuum drying

- Eliminating moisture in system to prevent the phenomena of ice-blockage and copper oxidation. Ice-blockage shall cause abnormal operation of system, while copper oxide shall damage compressor.
- Eliminating the non-condensable gas (air) in system to prevent the components oxidizing, pressure fluctuation and bad heat exchange during the operation of system.

7.2 Selection of vacuum pump

- The ultimate vacuum degree of vacuum pump shall be -756mmHg or above.
- Precision of vacuum pump shall reach 0.02mmHg or above.

7.3 Operation procedure for vacuum drying

Due to different construction environment, two kinds of vacuum drying ways could be chosen, namely ordinary vacuum drying and special vacuum drying.

7.3.1 Ordinary vacuum drying

1. When conduct first vacuum drying, connect pressure gauge to the infusing mouth of gas pipe and liquid pipe, and keep vacuum pump running for 1hour (vacuum degree of vacuum pump shall be reached -755mmHg).
2. If the vacuum degree of vacuum pump could not reach -755mmHg after 1 hour of drying, it indicates that there is moisture or leakage in pipeline system and need to go on with drying for half an hour.
3. If the vacuum degree of vacuum pump still could not reach -755mmHg after 1.5 hours of drying, check whether there is leakage source.
4. Leakage test: After the vacuum degree reaches -755mmHg, stop vacuum drying and keep the pressure for 1 hour. If the indicator of vacuum gauge does not go up, it is qualified. If going up, it indicates that there is moisture or leak source.

7.3.2 Special vacuum drying

The special vacuum drying method shall be adopted when:

1. Finding moisture during flushing refrigerant pipe.
2. Conducting construction on rainy day, because rain water might penetrated into pipeline.
3. Construction period is long, and rain water might penetrated into pipeline.
4. Rain water might penetrate into pipeline during construction.

Procedures of special vacuum drying are as follows:

1. Vacuum drying for 1 hour.
2. Vacuum damage, filling nitrogen to reach 0.5Kgf/cm² .
Because nitrogen is dry gas, vacuum damage could achieve the effect of vacuum drying, but this method could not achieve drying thoroughly when there is too much moisture. Therefore, special attention shall be drawn to prevent the entering of water and the formation of condensate water.
3. Vacuum drying again for half an hour.
If the pressure reached -755mmHg, start to pressure leakage test. If it can not reached the value, repeat vacuum damage and vacuum drying again for 1 hour.
4. Leakage test: After the vacuum degree reaches -755mmHg, stop vacuum drying and keep the pressure for 1 hour. If the indicator of vacuum gauge does not go up, it is qualified. If going up, it indicates that there is moisture or leak source.

8. Additional refrigerant charge

- After the vacuum drying process is carried out, the additional refrigerant charge process need to be performed.
- The outdoor unit is factory charged with refrigerant. The additional refrigerant charge volume is decided by the diameter and length of the liquid pipe between indoor and outdoor unit. Refer the following formula to calculate the charge volume.

Diameter of liquid pipe (mm)	Φ6.35	Φ9.52
Formula	$V=15g/m \times (L-5)$	$V=30g/m \times (L-5)$

V: Additional refrigerant charge volume (g).

L : The length of the liquid pipe (m).

Note:

- Refrigerant may only be charged after performed the vacuum drying process.
- Always use gloves and glasses to protect your hands and eyes during the charge work.
- Use electronic scale or fluid infusion apparatus to weight refrigerant to be recharged. Be sure to avoid extra refrigerant charged, it may cause liquid hammer of the compressor or protections.
- Use supplementing flexible pipe to connect refrigerant cylinder, pressure gauge and outdoor unit. And The refrigerant should be charged in liquid state. Before recharging, The air in the flexible pipe and manifold gauge should be exhausted.
- After finished refrigerant recharge process, check whether there is refrigerant leakage at the connection joint part.(Using gas leakage detector or soap water to detect).

9. Engineering of insulation

9.1 Insulation of refrigerant pipe

9.1.1 Operational procedure of refrigerant pipe insulation

Cut the suitable pipe → insulation (except joint section) → flare the pipe → piping layout and connection → vacuum drying → insulate the joint parts

9.1.2 Purpose of refrigerant pipe insulation


- During operation, temperature of gas pipe and liquid pipe shall be over-heating or over-cooling extremely. Therefore, it is necessary to carry out insulation; otherwise it shall debase the performance of unit and burn compressor.
- Gas pipe temperature is very low during cooling. If insulation is not enough, it shall form dew and cause leakage.
- Temperature of gas pipe is very high (generally 50-100°C) during heating. Insulation work must be carried out to prevent hurt by carelessness touching.

9.1.3 Insulation material selection for refrigerant pipe

- The burning performance should over 120°C
- According to the local law to choose insulation materials
- The thickness of insulation layer shall be above 10mm. If in hot or wet environment place, the layer of insulation should be thicker accordingly.

9.1.4 Installation highlights of insulation construction

- Gas pipe and liquid pipe shall be insulated separately, if the gas pipe and liquid pipe were insulated together; it will decrease the performance of air conditioner.

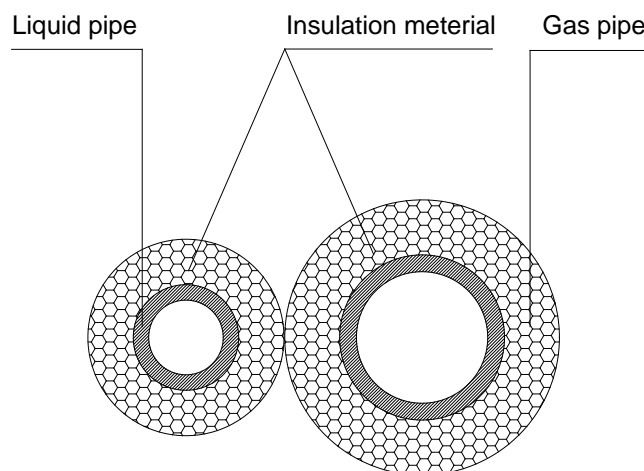

- The insulation material at the joint pipe shall be 5~10cm longer than the gap of the insulation material.
- The insulation material at the joint pipe shall be inserted into the gap of the insulation material.
- The insulation material at the joint pipe shall be banded to the gap pipe and liquid pipe tightly.
- The linking part should be use glue to paste together
- Be sure not bind the insulation material over-tight, it may extrude out the air in the material to cause bad insulation and cause easy aging of the material.

9.2 Insulation of drainage pipe

9.2.1 Operational procedure of refrigerant pipe insulation

Select the suitable pipe → insulation (except joint section) → piping layout and connection → drainage test → insulate the joint parts

9.2.2 Purpose of drainage pipe insulation

The temperature of condensate drainage water is very low. If insulation is not enough, it shall form dew and

cause leakage to damage the house decoration.

9.2.3 Insulation material selection for drainage pipe

- The insulation material should be flame retardant material, the flame retardancy of the material should be selected according to the local law.
- Thickness of insulation layer is usually above 10mm.
- Use specific glue to paste the seam of insulation material, and then bind with adhesive tape. The width of tape shall not be less than 5cm. Make sure it is firm and avoid dew.

9.2.4 Installation and highlights of insulation construction

- The single pipe should be insulated before connecting to another pipe, the joint part should be insulated after the drainage test.
- There should be no insulation gap between the insulation material.

10. Engineering of electrical wiring

10.1 Highlights of electrical wiring installation

- All field wiring construction should be finished by qualified electrician.
- Air conditioning equipment should be grounded according to the local electrical regulations.
- Current leakage protection switch should be installed.
- Do not connect the power wire to the terminal of signal wire.
- When power wire is parallel with signal wire, put wires to their own wire tube and remain at least 300mm gap.
- According to table in indoor part named “the specification of the power” to choose the wiring, make sure the selected wiring not small than the date showing in the table.
- Select different colors for different wire according to relevant regulations.
- Do not use metal wire tube at the place with acid or alkali corrosion, adopt plastic wire tube to replace it.
- There must be not wire connect joint in the wire tube If joint is a must, set a connection box at the place.
- The wiring with different voltage should not be in one wire tube.
- Ensure that the color of the wires of outdoor and the terminal No. are same as those of indoor unit respectively.

11. Test operation

11.1 The test operation must be carried out after the entire installation has been completed.

11.2 Please confirm the following points before the test operation.

- The indoor unit and outdoor unit are installed properly.
- Tubing and wiring are correctly completed.
- The refrigerant pipe system is leakage-checked.
- The drainage is unimpeded.
- The ground wiring is connected correctly.
- The length of the tubing and the added stow capacity of the refrigerant have been recorded.
- The power voltage fits the rated voltage of the air conditioner.
- There is no obstacle at the outlet and inlet of the outdoor and indoor units.
- The gas-side and liquid-side stop valves are both opened.
- The air conditioner is pre-heated by turning on the power.

11.3 Test operation

Set the air conditioner under the mode of "COOLING" by remote controller, and check the following points.

Indoor unit

- Whether the switch on the remote controller works well.
- Whether the buttons on the remote controller works well.
- Whether the air flow louver moves normally.
- Whether the room temperature is adjusted well.
- Whether the indicator lights normally.
- Whether the temporary buttons works well.
- Whether the drainage is normal.
- Whether there is vibration or abnormal noise during operation.

Outdoor unit

- Whether there is vibration or abnormal noise during operation.
- Whether the generated wind, noise, or condensed of by the air conditioner have influenced your neighborhood.
- Whether any of the refrigerant is leaked.

Part 5

Electrical Control System

1. Electrical Control Function	110
2. Troubleshooting	124
3. Controller	158

1. Electrical Control Function

1.1 Definition

T1: Indoor room temperature

T2: Coil temperature of indoor heat exchanger middle.

T2B: Coil temperature of indoor heat exchanger outlet.

T3: Coil temperature of condenser

T4: Outdoor ambient temperature

T5: Compressor discharge temperature

1.2 Main Protection

1.2.1 Time delay at restart for compressor.

1.2.2 Temperature protection of compressor top

The unit will stop working when the compressor top temp. protector cut off, and will restart after the compressor top temp. protector restart.

1.2.3 Temperature protection of compressor discharge

For 12K units:

When the compressor discharge temp. is getting higher, the running frequency will be limited as below rules:

---Compressor discharge temp. $T5 > 115^{\circ}\text{C}$ for 5s, compressor stops and restarts up till $T5 < 90^{\circ}\text{C}$

--- $110 < T5 < 115^{\circ}\text{C}$, decrease the frequency to the lower level every 2 minutes.

--- $105 < T5 < 110^{\circ}\text{C}$, keep running at the current frequency.

---- $T5 < 105^{\circ}\text{C}$, no limit for frequency.

For other units:

When the compressor discharge temp. is getting higher, the running frequency will be limited as below rules:

----If $102^{\circ}\text{C} < T5 < 115^{\circ}\text{C}$, decrease the frequency to the lower level every 2 minutes till to F1.

---If $T5 > 115^{\circ}\text{C}$ for 10 seconds, the compressor will stop and restart till $T5 < 90^{\circ}\text{C}$.

1.2.4 Sensor protection at open circuit and breaking disconnection.

1.2.5 Indoor fan delayed open function

When the unit starts up, the louver will be active immediately and the indoor fan will open 10s later.

If the unit runs in heating mode, the indoor fan will be also controlled by anti-cold wind function.


1.2.6 Fan Speed is out of control(for units used DC motor)

When Indoor Fan Speed keeps too low (For Super slim cassette, less than 200RPM, for other models, less than 300RPM) for 50s, the unit will stop and the LED will display the failure


1.3 Operation Modes and Functions

1.3.1 Fan mode


- (1) Outdoor fan and compressor stop.
- (2) Temperature setting function is disabled, and no setting temperature is displayed.
- (3) For Console& Compact cassette(12K): Indoor fan can be set to high/med/low/ breeze, for other models: Indoor fan can be set to high/(med)/low/auto;
- (4) The louver operates same as in cooling mode.
- (5) Auto fan:
For Console:

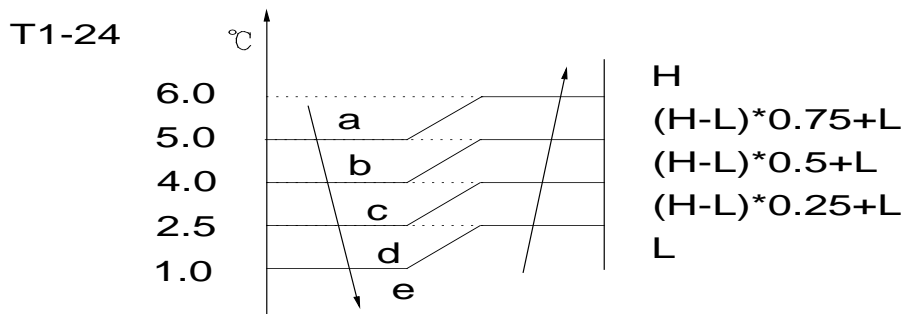

For Compact cassette(12K)、A5(12K)

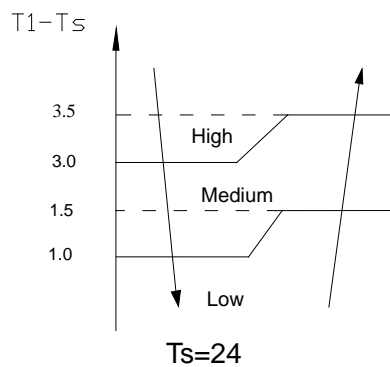

For other models:

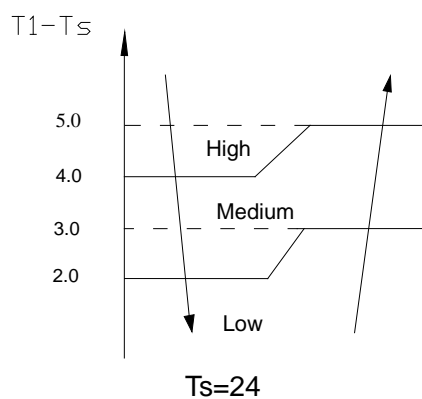


1.3.2 Cooling Mode

1.3.2.1 Outdoor PMW open angle control

The unit is working in cooling mode with the EXV open 300P(For 12K, it is 220P) for 3 minutes, then adjusting PMW open angle according to the temperature of compressor discharge every 2 minutes.

1.3.2.2 Outdoor fan running rules

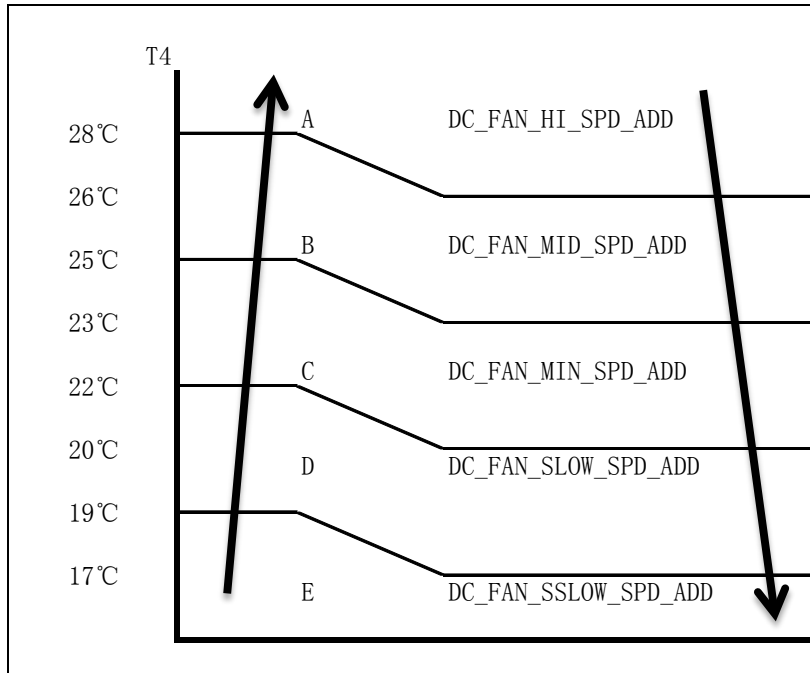


1.3.2.3 Indoor fan running rules

For Console(12K):

In cooling mode, indoor fan runs all the time and the speed can be selected as high, medium, low, auto and silent. When the compressor is running, the indoor fan is controlled as below:

Setting Fan speed	T1-Ts	Actual fan speed
H	4.5	$H+(H+=H+G)$
	3.0	$H (=H)$
	1.5	$H- (H=H-G)$
M	4.5	$M+(M+=M+Z)$
	3.0	$M(M=M)$
	1.5	$M-(M-=M-Z)$
L	4.5	$L+(L+=L+D)$
	3.0	$L(L=L)$
	1.5	$L-(L-=L-D)$


The auto fan acts as below rules:

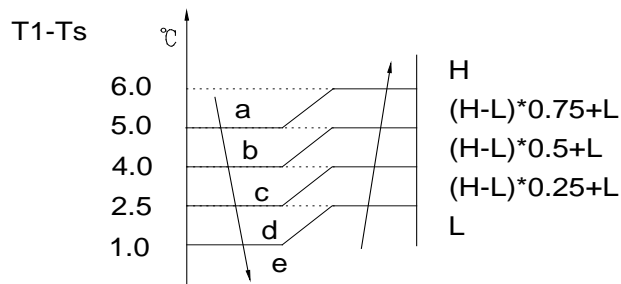


For Compact cassette(12K)、A5(12K)

In cooling mode, indoor fan runs all the time and the speed can be selected as high, medium, low, auto and silent.

The auto fan:

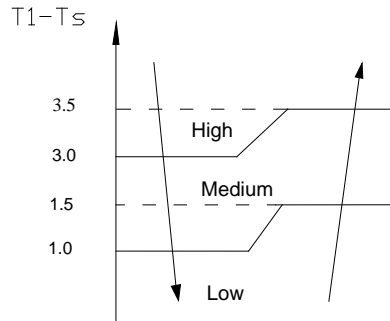

For other models:

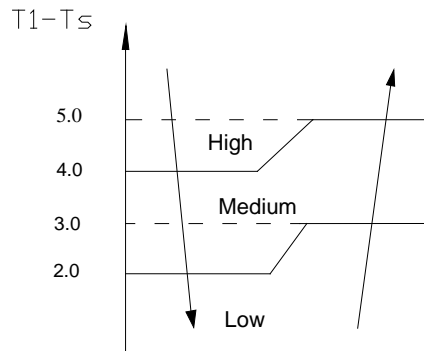

1.3.2.4 Evaporator low temperature T2 protection.

For 12K units:

--- $T_2 < 0^\circ\text{C}$, the compressor will stop and restart when $T_2 \geq 5^\circ\text{C}$.

--- $0^\circ\text{C} \leq T_2 < 4^\circ\text{C}$, the compressor frequency will be limited and decreased to the lower level

--- $4^\circ\text{C} \leq T_2 < 7^\circ\text{C}$, the compressor will keep the current frequency.

--- $T_2 > 7^\circ\text{C}$, the compressor frequency will not be limited.

For other units: When $T_2 < 2^\circ\text{C}$ and lasts for 3 minutes, the indoor has no capacity demand and resume till $T_2 \geq 7^\circ\text{C}$

1.3.2.5 Condenser high temperature T3 protection

For 12K units :

--- $55^\circ\text{C} < T_3 < 60^\circ\text{C}$, the compressor frequency will decrease to the lower level until to F1 and then runs at F1. If

$T_3 < 55^\circ\text{C}$, the compressor will keep running at the current frequency.

--- $T_3 < 52^\circ\text{C}$, the compressor will not limit the frequency and resume to the former frequency.

--- $T_3 > 60^\circ\text{C}$ for 5 seconds, the compressor will stop until $T_3 < 52^\circ\text{C}$.


For other units: When $T_3 \geq 65^\circ\text{C}$ for 3 seconds, the compressor will shut off. When $T_3 < 52$, the compressor will restart.

1.3.3 Heating Mode

1.3.2.1 Outdoor PMW open angle control

The unit is working in heating mode with the EXV open 300P(For 12K,it is 480P) for 3 minutes, then adjusting PMW open angle according to the temperature of compressor discharge every 2 minutes.

1.3.3.2 Outdoor fan running rules:

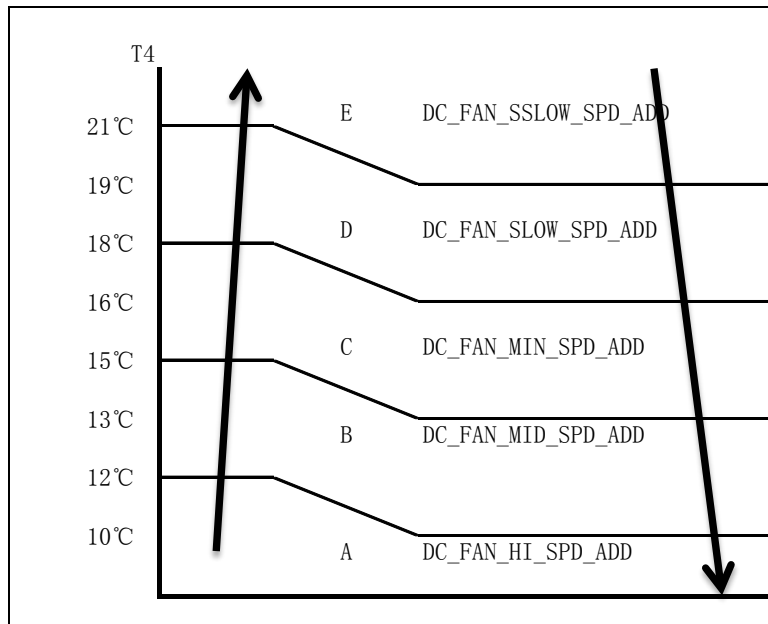

1.3.3.3 Indoor fan running rules:

For Console(12K):


In heating mode, indoor fan can be selected as high, medium, low, auto and silent. The anti-cold- wind function has the priority.

When the compressor is running, the indoor fan is controlled as below:

Setting fan speed	T1-Ts	Actual fan speed
H	-1.5	H+ (H=H+G)
	-3.0	H (=H)
	-4.5	H+(H+=H+G)
M	-1.5	M-(M-=M-Z)
	-3.0	M(M=M)
	-4.5	M+(M+=M+Z)
L	-1.5	L-(L-=L-D)
	-3.0	L(L=L)
	-4.5	L+(L+=L+D)

If the compressor stops caused by the room temperature rising, the indoor fan will be forced to run 127 seconds with breeze. During this period, the anti-cold-wind is disabled.


Auto fan action in heating mode:

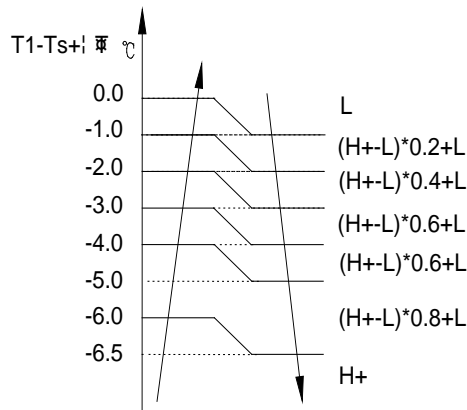

For Compact cassette(12K)、A5(12K):

When the compressor is on, the indoor fan can be set to high, medium, low, auto and silent. And the anti-cold wind function has the priority.


Auto fan action:

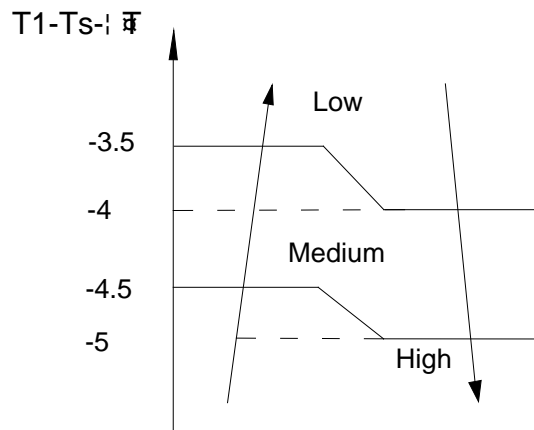

For other models:

When the compressor is on, the indoor fan can be set to high/medium/low/auto. And the anti-cold wind function has the priority.

Auto fan action:

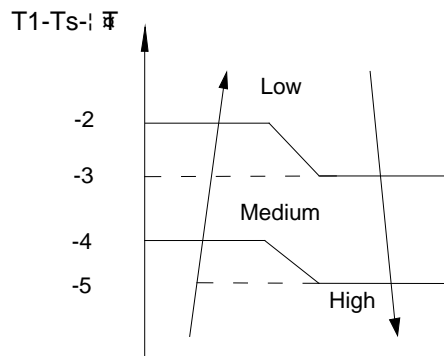

1.3.3.4 Defrosting mode:

For 12K units:

Condition of defrosting:

If any one of the following items is satisfied, AC will enter the defrosting mode.

After the compressor starts up and keeps running, mark the minimum value of T3 from the 10th minutes to 15th minutes as T30.


- 1) If the compressor cumulate running time is up to 29 minutes and $T3 < TCDI1$, $T3 + T30SUBT3ONE \leq T30$.
- 2) If the compressor cumulate running time is up to 35 minutes and $T3 < TCDI2$, $T3 + T30SUBT3TWO \leq T30$.
- 3) If the compressor cumulate running time is up to 29 minutes and $T3 < TCDI3$ for 3 minutes.
- 4) If the compressor cumulate running time is up to 120 minutes and $T3 < -15^{\circ}C$.

Condition of ending defrosting:

If any one of the following items is satisfied, the defrosting will finish and the machine will turn to normal heating mode.

- T3 rises to be higher than $TCDE1^{\circ}C$.
- T3 keeps to be higher than $TCDE2^{\circ}C$ for 80 seconds.
- The machine has run for 10 minutes in defrosting mode.

Defrosting action:

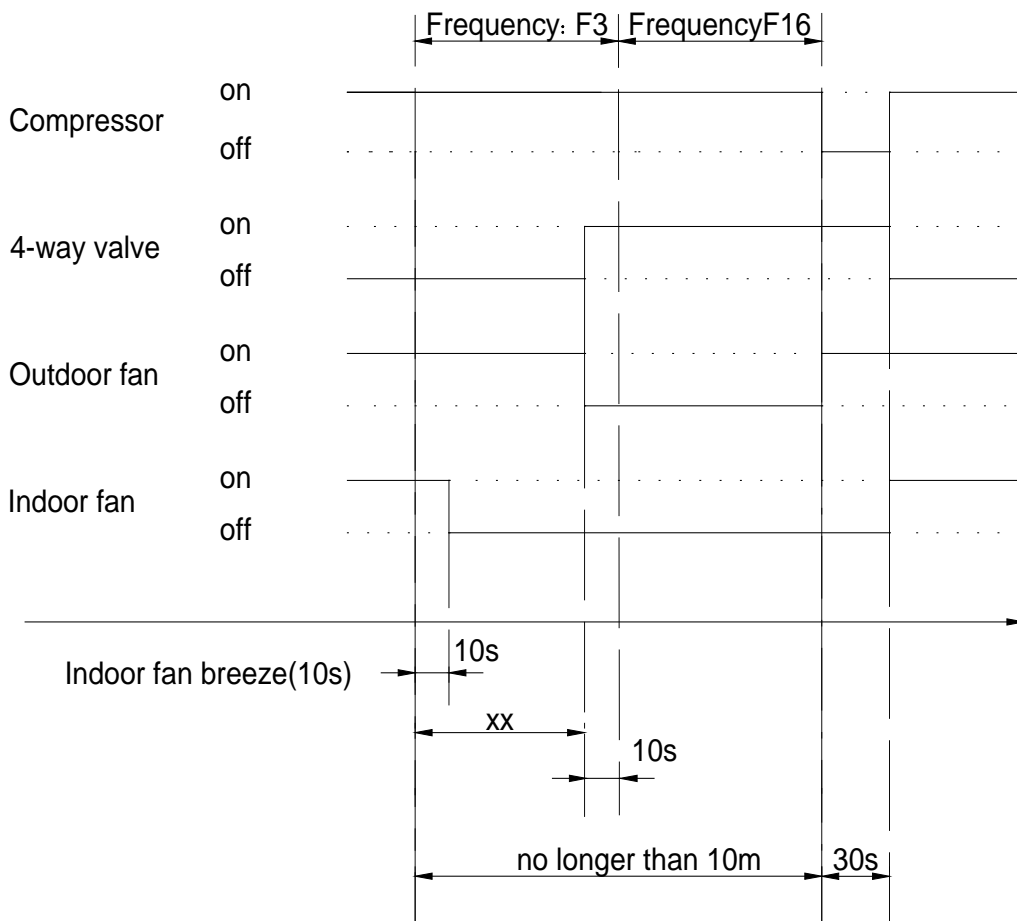

xx=90

Model MOU-36HFN1-QRC4 :

Condition of defrosting:



$T3 \leq \text{TempEnterDefrost_ADD } ^\circ\text{C}$ and lasts for 40 minutes.

Condition of ending defrosting:

If any one of following items is satisfied, defrosting will stop and the machine will turn to normal heating mode.

① $T3 > \text{TempQuitDefrost_ADD } ^\circ\text{C}$;

② The defrosting time achieves 10min.

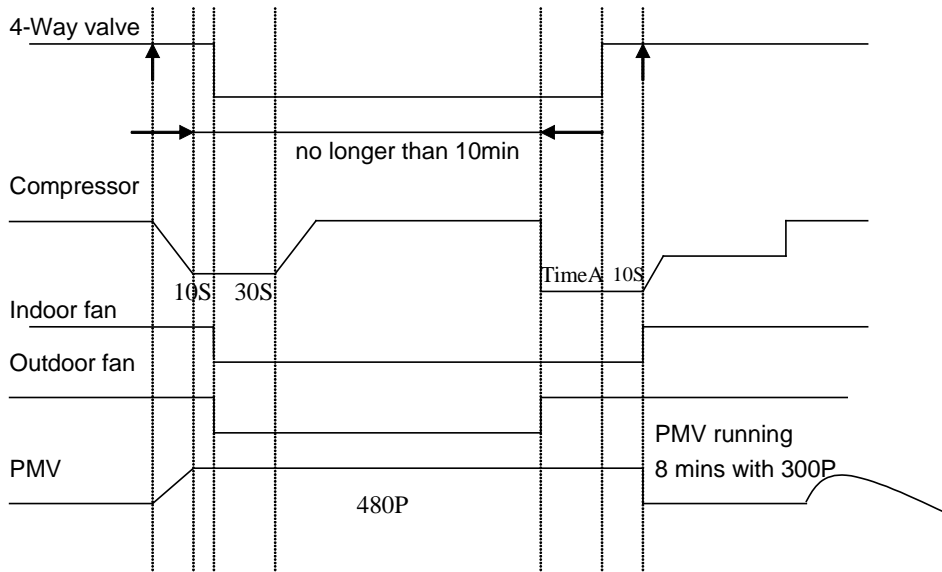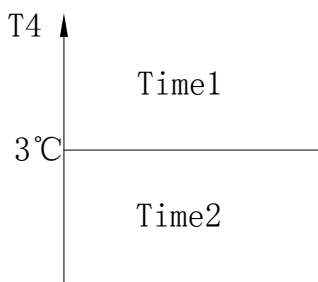Defrosting action:**The other models:****Condition of defrosting:****Time conditions:****time1**

Time conditions (Meet the following conditions)

1. Running in heating mode
2. $T4 \geq 3^\circ\text{C}$
3. Compressor is on
4. $T3 \leq \text{TempEnterDefrost_ADD } ^\circ\text{C}$

Cleared conditions (Meet any one of the following conditions)

1. Compressor is off.
2. $T3 > \text{TempEnterDefrost_ADD } ^\circ\text{C}$

Time2

Time conditions(Meet the following conditions)

1. Running in heating mode
2. $T4 < 3^{\circ}\text{C}$
3. Compressor is on
4. $T3 \leq \text{TempEnterDefrost_ADD } ^{\circ}\text{C}$

Cleared conditions (Meet any one of the following conditions)

1. Compressor is off and $T3 > \text{TempEnterDefrost_ADD} + 2^{\circ}\text{C}$ last for 20 minutes
2. Running in cooling mode.
3. Compressor is off for 1 hour.

Condition of entry defrosting:


$\text{time1} + \text{time2} \geq 40$ minutes, When defrosting is end, time1 and time2 are cleared.

Condition of ending defrosting:

If any one of following items is satisfied, defrosting will stop and the machine will turn to normal heating mode.


- ① The defrosting time achieves 10min;
- ② $T3 \geq 15^{\circ}\text{C}$;
- ③ $T3 \geq 7^{\circ}\text{C}$ for 60seconds.

Defrosting action:

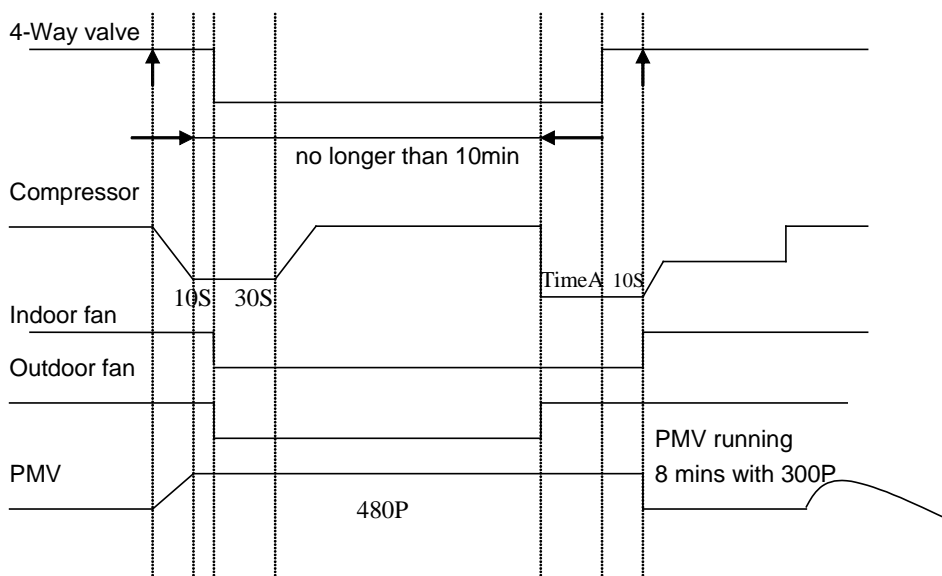

1.3.3.5 High evaporator coil temp.T2 protection:

For 12K units:

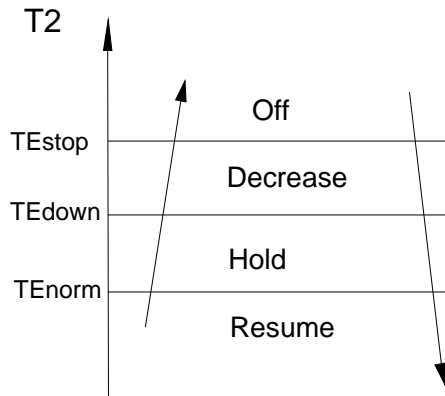

Off: Compressor stops.

Decrease: Decrease the running frequency to the lower level.

Hold: Keep the current frequency.

Resume: No limitation for frequency.

For other units: $T_2 > 60^\circ\text{C}$, the compressor will stop and restart when $T_2 \leq 54^\circ\text{C}$.

1.3.4 Auto-mode

This mode can be chosen with remote controller and the setting temperature can be changed between $17\sim 30^\circ\text{C}$.

In auto mode, the machine will choose cooling, heating or fan-only mode according to ΔT ($\Delta T = T_1 - T_s$).

For 12K units:

$\Delta T = T_1 - T_s$	Running mode
$\Delta T > 1^\circ\text{C}$	Cooling
$-1 < \Delta T \leq 1^\circ\text{C}$	Fan-only
$\Delta T \leq -1^\circ\text{C}$	Heating

For other units:

$\Delta T = T_1 - T_s$	Running mode
$\Delta T \geq 2^\circ\text{C}$	Cooling
$-1 \leq \Delta T < 2^\circ\text{C}$	Fan-only
$\Delta T < -1^\circ\text{C}$	Heating

Indoor fan will run at auto fan of the relevant mode.

The louver operates same as in relevant mode.

If the machine switches mode between heating and cooling, the compressor will keep stopping for 15 minutes and then choose mode according to $T_1 - T_s$.

If the setting temperature is modified, the machine will choose running function again.

1.3.5 Drying mode

For 12K units:

Indoor fan speed is fixed at breeze and can't be changed. The louver angle is the same as in cooling mode.

Low indoor room temperature protection

In drying mode, if room temperature is lower than 10°C, the compressor will stop and not resume until room temperature exceeds 12°C.

All protections are active and the same as that in cooling mode.

For other units: Drying mode works the same as cooling mode in low speed.

All protections are active and the same as that in cooling mode.

1.3.6 Timer function

1.3.6.1 Timing range is 24 hours.

1.3.6.2 Timer on. The machine will turn on automatically when reaching the setting time.

1.3.6.3 Timer off. The machine will turn off automatically when reaching the setting time.

1.3.6.4 Timer on/off. The machine will turn on automatically when reaching the setting "on" time, and then turn off automatically when reaching the setting "off" time.

1.3.6.5 Timer off/on. The machine will turn off automatically when reaching the setting "off" time, and then turn on automatically when reaching the setting "on" time.

1.3.6.6 The timer function will not change the AC current operation mode. Suppose AC is off now, it will not start up firstly after setting the "timer off" function. And when reaching the setting time, the timer LED will be off and the AC running mode has not been changed.

1.3.6.7 The setting time is relative time.

1.3.7 Economy function

1.3.7.1 The sleep function is available in cooling, heating or auto mode.

1.3.7.2. Operation process in sleep mode is as follow:

When cooling, the setting temperature rises 1°C (be lower than 30°C) every one hour, 2 hours later the setting temperature stops rising and the indoor fan is fixed at low speed.

When heating, the setting temperature decreases 1°C (be higher than 17°C) every one hour, 2 hours later the setting temperature stops rising and indoor fan is fixed at low speed. (Anti-cold wind function has the priority).

1.3.7.3 Operation time in sleep mode is 7 hours. After 7 hours the AC quits this mode but doesn't turns off, but for console, the unit will turn off.

1.3.7.4 Timer setting is available

1.3.8 Auto-Restart function

The indoor unit is equipped with auto-restart function, which is carried out through an auto-restart module. In case of a sudden power failure, the module memorizes the setting conditions before the power failure. The unit will resume the previous operation setting (not including Swing function) automatically after 3 minutes when power returns.

1.3.9 Drain pump control (For Duct & Cassette)

Adopt the water-level switch to control the action of drain pump.

Main action under different condition :(every 5 seconds the system will check the water level one time)

1. When the A/C operates with cooling (including auto cooling) and forced cooling mode, the pump will start running immediately and continuously, till stop cooling.
2. Once the water level increase and up to the control point, LED will alarm and the drain pump open and continue checking the water level. If the water level fall down and LED disarmed (drain pump delay close 1 minute) and operate with the last mode. Otherwise the entire system stop operating (including the pump) and LED remain alarming after 3 minutes.

1.3.10 Follow me

- 1) If the indoor PCB receives the signal which results from pressing the FOLLOW ME button on remote controller, the buzzer will emit a sound and this indicates the follow me function is initiated. But when the indoor PCB receives signal which sent from remote controller every 3 minutes, the buzzer will not respond. When the unit is running with follow-me function, the PCB will control the unit according to the temperature from follow-me signal, and the temperature collection function of room temperature sensor will be shielded.
- 2) When the follow-me function is available, the PCB will not respond according to the setting temperature from follow-me signal every 3 minutes.
- 3) The PCB will take action to the mode change information from remote controller signal, and the follow-me function will be turned off. (if the wired remote controller does not initiate follow me function).
- 4) When the unit is running with follow-me function, if the PCB doesn't receive any signal from remote controller for 7 minutes or pressing FOLLOW ME button again, the follow-me function will be turned off automatically, and the temperature collection function of room temperature sensor will be available, the PCB will control the unit according to the room temperature detected from its own room temperature sensor and setting temperature.
- 5) When the indoor PCB receives the follow-me signal from wired remote controller, the control is the same as that from wireless remote controller, but buzzer will not respond. When the PCB receives turning-off follow-me signal from wired remote controller, the unit will quit follow-me function at once. The follow-me function controlled by wired remote controller prevails that by wireless remote controller.

1.3.11 Point Check Function(18-36K)

There is a check switch in outdoor PCB.

Press the switch SW1 to check the states of unit when the unit is running.

Press the switch N times it will display the content corresponding to No. N. After getting into the check function, it will display No. N with 1.5s, meanwhile the low bit decimal of digit display flashing, indicated to get into the check function display. After 1.5s, it will display the content corresponding to No. N.

the digital display tube will display the follow procedure when push SW1 each time.


N	Display	Remark		
00	Normal display	Display running frequency, running state or malfunction code		
01	Indoor unit capacity demand code	Actual data*HP*10 If capacity demand code is higher than 99, the digital display tube will show single digit and tens digit. (For example, the digital display tube show "5.0",it means the capacity demand is 15. the digital display tube show "60",it means the capacity demand is 6.0)		
02	Amendatory capacity demand code			
03	The frequency after the capacity requirement transfer			
04	The frequency after the frequency limit			
05	The frequency of sending to 341			
06	Indoor unit evaporator outlet temp.(heating T2, cooling T2B)	If the temp. is lower than 0 degree, the digital display tube will show "0".If the temp. is higher than 70 degree, the digital display tube will show "70".		
07	Condenser pipe temp.(T3)	If the temp. is lower than -9 degree, the digital display tube will show "-9".If the temp. is higher than 70 degree, the digital display tube will show "70". If the indoor unit is not connected, the digital display tube will show: "——"		
08	Outdoor ambient temp.(T4)			
09	Compressor discharge temp.(Tp)	The display value is between 13~129 degree. If the temp. is lower than 13 degree, the digital display tube will show "13".If the temp. is higher than 99 degree, the digital display tube will show single digit and tens digit. (For example, the digital display tube show "0.5",it means the compressor discharge temp. is 105 degree. the digital display tube show "1.6",it means the compressor discharge temp. is 116 degree)		
10	AD value of current	The display value is hex number.		
11	AD value of voltage			
12	Indoor unit running mode code	Off:0, Fan only 1,Cooling:2, Heating:3		
13	Outdoor unit running mode code	Off:0, Fan only 1,Cooling:2, Heating:3, Forced cooling:4		
14	EXV open angle	Actual data/4. If the value is higher than 99, the digital display tube will show single digit and tens digit. For example ,the digital display tube show "2.0",it means the EXV open angle is 120*4=480p.)		
15	Frequency limit symbol	Bit7	Frequency limit caused by IGBT radiator	The display value is hex number. For example, the digital display tube show 2A,then Bit5=1, Bit3=1, Bit1=1. It means frequency limit caused by T4,T3 and current.
		Bit6	Frequency limit caused by PFC	
		Bit5	Frequency limit caused by T4.	
		Bit4	Frequency limit caused by T2.	
		Bit3	Frequency limit caused by T3.	
		Bit2	Frequency limit caused by Tp.	
		Bit1	Frequency limit caused by current	
Bit0	Frequency limit caused by voltage			
16	DC fan motor speed			
17	IGBT radiator temp.	The display value is between 30~120 degree. If the temp. is lower than 30 degree, the digital display tube will show "30".If the temp. is higher than 99 degree, the digital display tube will show single digit and tens digit. (For example, the digital display tube show "0.5",it means the IGBT radiator temp. is 105 degree. the digital display tube show "1.6",it means the IGBT radiator temp. is 116 degree)		
18	Indoor unit number	The indoor unit can communicate with outdoor unit well.		
19	Condenser pipe temp. of 1# indoor unit	If the temp. is lower than 0 degree, the digital display tube will show "0".If the temp. is higher than 70 degree, the digital		
20	Condenser pipe temp. of 2# indoor unit			

21	Condenser pipe temp. of 3# indoor unit	display tube will show "70". If the capacity demand is 0, , the digital display tube will show "0. If the indoor unit is not connected, the digital display tube will show: "——"(heating T2, cooling T2B)
22	1# Indoor unit capacity demand code	Actual data*HP*10 If capacity demand code is higher than 99, the digital display tube will show single digit and tens digit. (For example, the digital display tube show "5.0",it means the capacity demand is 15. the digital display tube show "60",it means the capacity demand is 6.0). If the indoor unit is not connected, the digital display tube will show: "——"
23	2# Indoor unit capacity demand code	
24	3# Indoor unit capacity demand code	


2. Troubleshooting

2.1 Display board

2.1.1 Icon explanation on indoor display board (Super slim cassette).

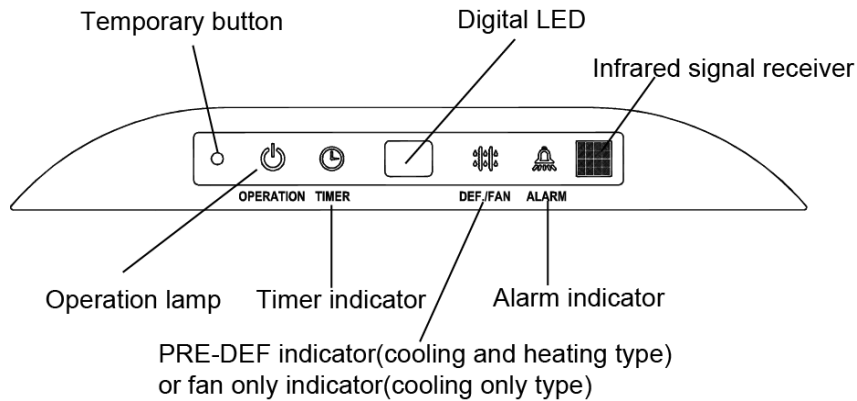


2.1.2 Icon explanation on indoor display board (A5 Duct)

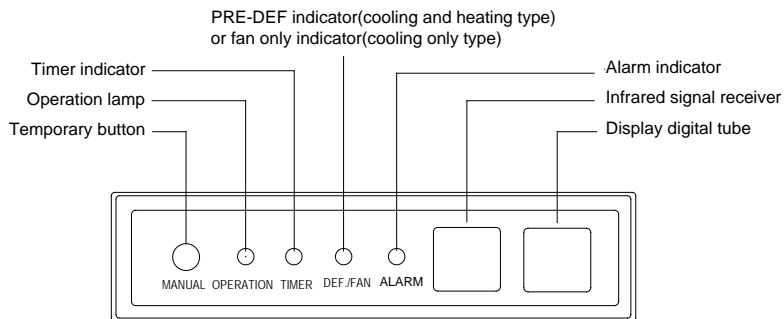


2.1.3 Auto-lifting panel of 4 way cassette




2.1.4 Display board of Ceiling-floor indoor unit

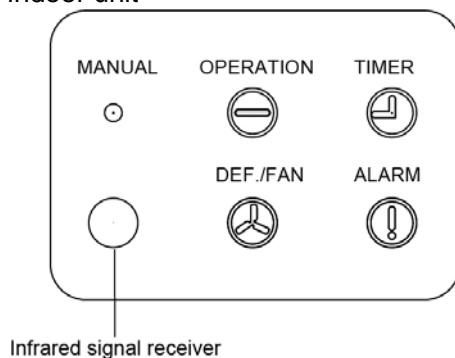

2.1.5 Icon explanation on indoor display board (Compact cassette).

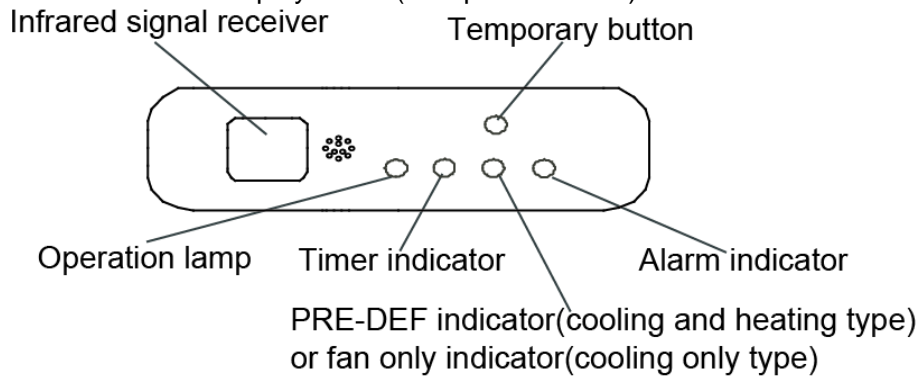

2.1.6 Icon explanation on indoor display board (Console)

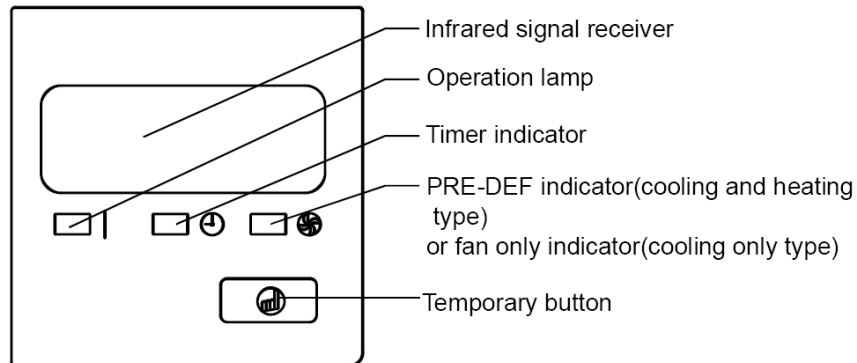

2.2 Indoor unit malfunction

For Console(12K)

NO.	Malfunction	Running lamp	Timer lamp	Defrosting lamp
1	Refrigerant Leakage Detection	☆	☆	◎
2	Open or short circuit of T1 temperature sensor	☆	X	X
3	Open or short circuit of T2 temperature sensor	X	X	☆
4	Indoor / outdoor units communication error	X	☆	X
5	Outdoor fan speed has been out of control	X	☆	O
6	Indoor EEPROM malfunction	☆	☆	X
7	IPM module protection	☆	X	☆
8	Open or short circuit of T3 or T4 temperature sensor or Outdoor unit EEPROM parameter error	☆	☆	☆
9	Over voltage or over low voltage protection	☆	☆	O
10	Top temperature protection of compressor	☆	O	X
11	Inverter compressor drive protection	☆	◎	X
12	Indoor fan speed has been out of control.	☆	O	☆
O(light) X(off) ☆(flash at 5Hz) ◎(flash at 0.5Hz)				

For console type(18K)

NO.	Malfunction	Running lamp	Timer lamp	Defrosting lamp
1	Indoor EEPROM malfunction	☆	☆	☆
2	Indoor fan Speed has been out of control.	☆	X	☆
3	Open or short circuit of T1 or T2 temperature sensor	☆	☆	X
4	Indoor / outdoor units communication error	X	☆	X
5	Outdoor unit malfunction	X	X	◎
X(off) ☆(flash at 5Hz) ◎(flash at 0.5Hz)				

For Compact cassette(12K)、A5(12K):

NO.	Malfunction	Defrosting lamp	Alarm lamp	Running lamp	Timer lamp	Display(digital tube)
1	Open or short circuit of T1 temperature sensor	X	X	☆	X	E0
2	Open or short circuit of T2 temperature sensor	☆	X	X	X	E1
3	Indoor / outdoor units communication error	X	X	X	☆	E2
4	Full-water malfunction	X	☆	X	X	E3
5	Indoor EEPROM malfunction	X	X	☆	☆	E4
6	IPM module protection	X	O	☆	X	E5
7	Open or short circuit of T3 or T4 temperature sensor or Outdoor unit EEPROM parameter error	X	X	☆	O	E6
8	Outdoor fan speed has been out of control	☆	X	☆	O	E7
9	Refrigerant Leakage Detection	☆	☆	O	X	EC
10	Over voltage or over low voltage protection	X	O	☆	O	P0
11	Top temperature protection of compressor	O	X	☆	X	P1

12	Outdoor current protection	☆	X	☆	☆	P2
13	Inverter compressor drive error	X	◎	X	X	P4
14	Indoor fan Speed has been out of control.	O	X	☆	O	F5
O (on) X(off) ☆(flash at 5Hz) ◎(flash at 0.5Hz)						

For other models:

NO.	Malfunction	Defrosting lamp	Alarm lamp	Running lamp	Timer lamp	Display(digital tube)
1	Indoor / outdoor units communication error	X	X	X	☆	E1
2	Open or short circuit of T1 temperature sensor	X	X	☆	X	E2
3	Open or short circuit of T2 temperature sensor	X	X	☆	X	E3
4	Open or short circuit of T2B temperature sensor	X	X	☆	X	E4
5	Indoor EEPROM malfunction	☆	X	X	X	E7
6	Indoor fan speed is out of control	☆	☆	X	X	E8
7	Refrigerant Leakage Detection	☆	☆	O	X	EC
8	Outdoor unit malfunction	X	◎	X	X	Ed
9	Full-water malfunction	X	☆	X	X	EE
10	Communication malfunction between main PCB and up-down panel PCB	☆	☆	☆	X	F0
11	Up-down panel malfunction	☆	☆	X	☆	F1
12	Up-down panel is not closed	☆	☆	X	O	F2
13	Communication malfunction between master unit and slave unit	X	☆	X	☆	F3
14	Other malfunction of master unit or slave unit	X	☆	☆	X	F4
O (on) X(off) ☆(flash at 5Hz) ◎(flash at 0.5Hz) F0,F1,F2 are only available for super-slim cassette F3,F4 are only available for the unit with TWINS function Note: Digital display is only available for super slim cassette & duct type.						

2.3 Outdoor unit malfunction 18~36k


Display	Malfunction or Protection
E0	Outdoor EEPROM malfunction
E2	Indoor / outdoor units communication error
E3	Communication malfunction between IPM board and outdoor main board
E4	Open or short circuit of T3 or T4 temperature sensor
E5	Voltage protection of compressor
E6	PFC module protection (For MOU-36HFN1-QRC4,MOU-36HFN1-QRC8)
E8	Outdoor fan speed is out of control
P0	Top temperature protection of compressor
P1	High pressure protection (For 36k models)
P2	Low pressure protection(For 36k models)
P3	Current protection of compressor
P4	Discharge temperature protection of compressor
P5	High temperature protection of condenser
P6	IPM module protection
P7	High temperature protection of evaporator

In low ambient cooling mode, the LED displays “LC” or alternative displays between running frequency and “LC”(each displays 0.5s)


2.4 Solving steps for typical malfunction

2.4.1 For the indoor unit


2.4.1.1 Open or short circuit of temperature sensor

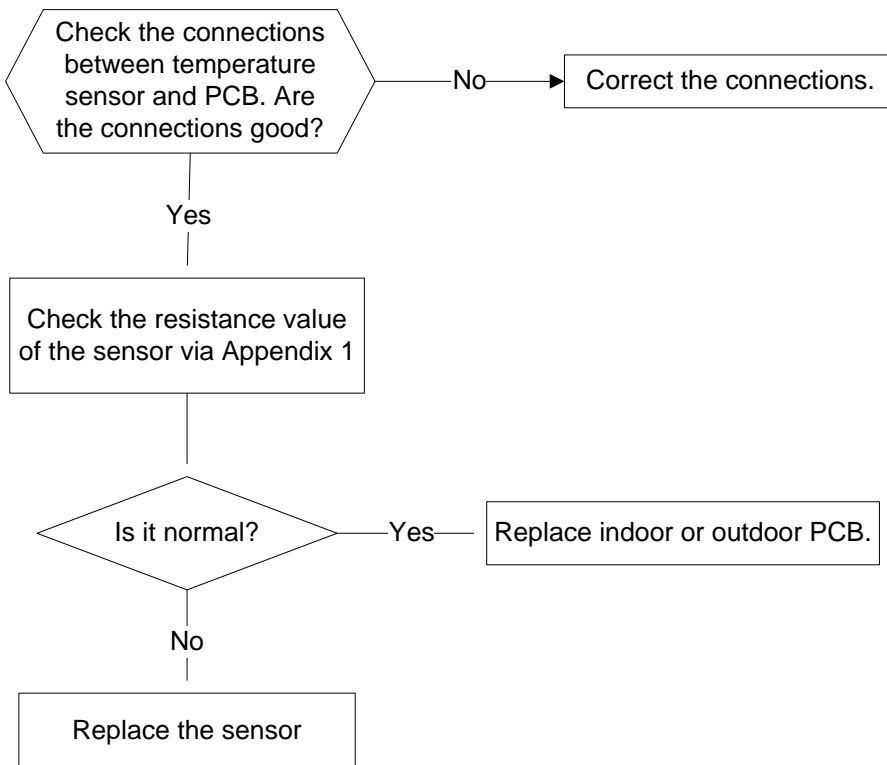


2.4.1.2. Outdoor unit malfunction

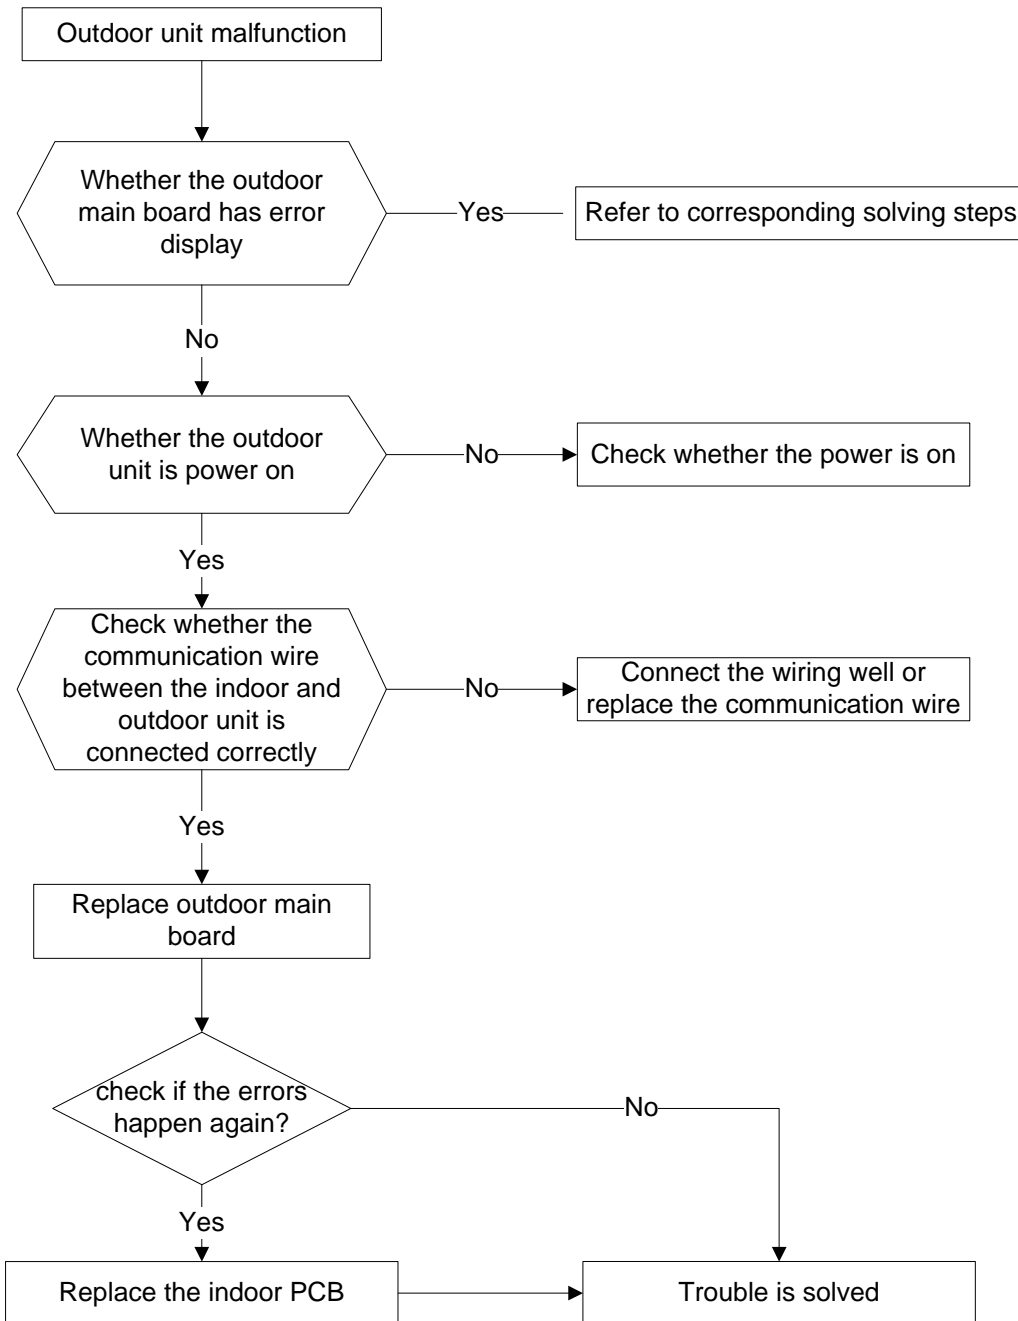


2.4.1.3. Indoor EEPROM malfunction

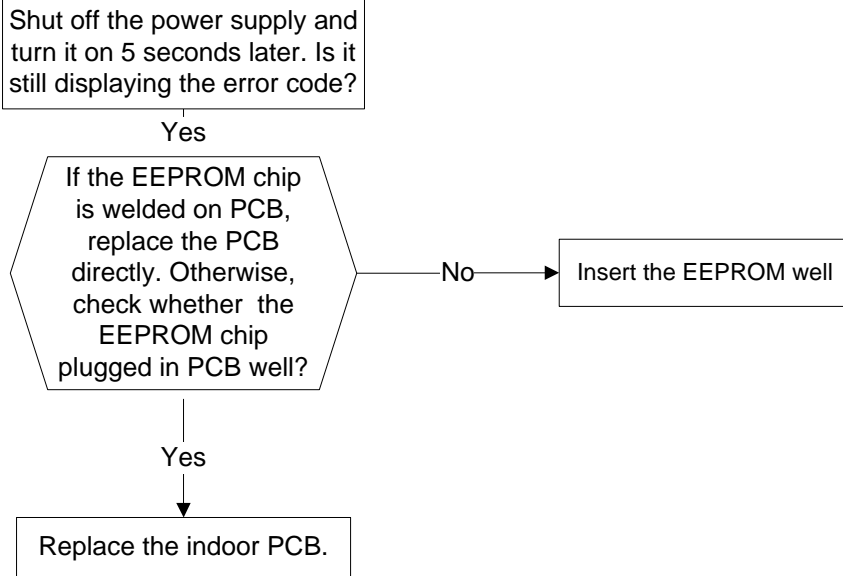

2.4.1.4. Full-water malfunction

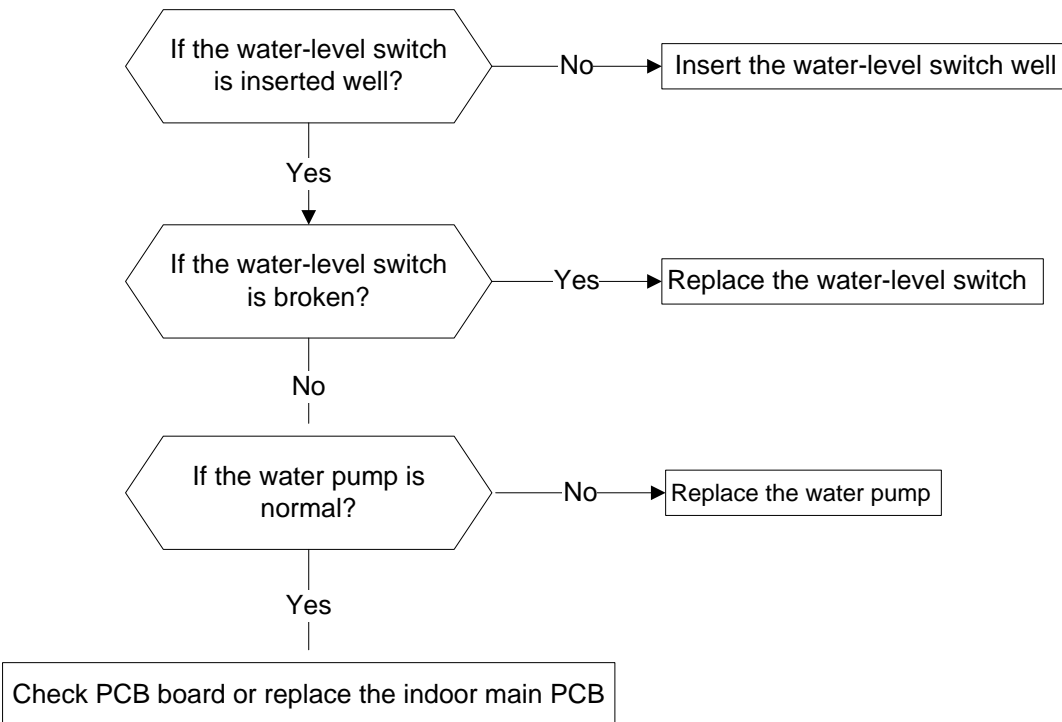

2.4.1.5. Indoor fan speed has been out of control.

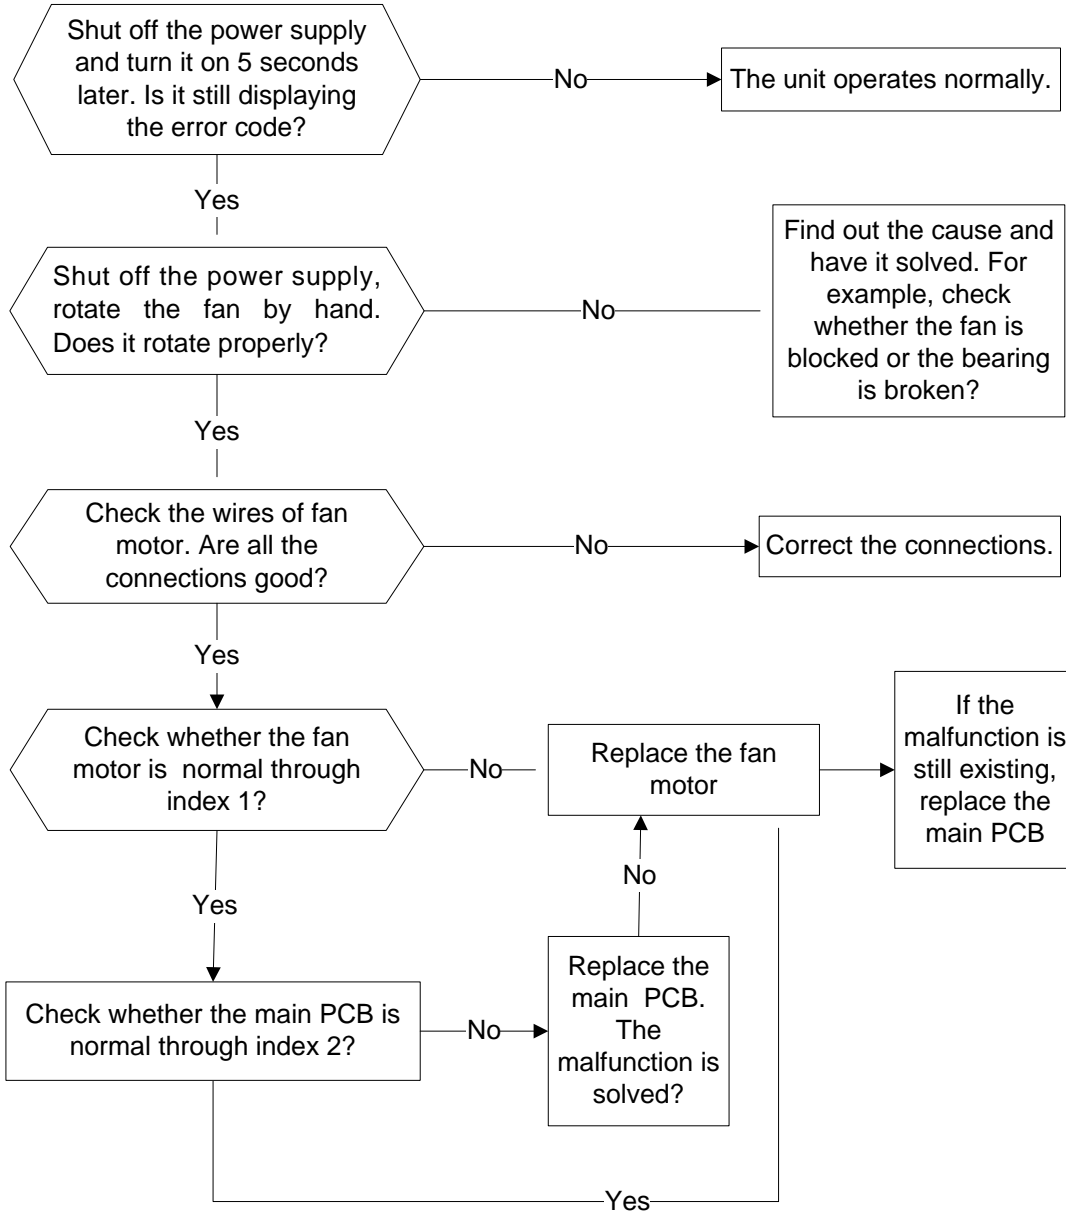


Index 1:

1. Indoor DC fan motor (control chip is inside fan motor)


Measure the resistance value of each winding by using the tester. If any resistance value is zero, the fan motor must have problems and need to be replaced.

For other models:

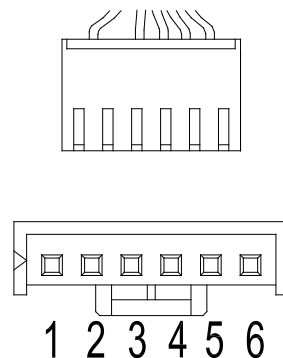


NO.	Color
1	Red
2	---
3	Black
4	White
5	Yellow
6	Blue

For console:

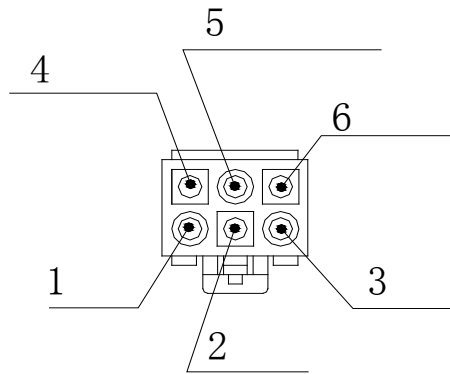

NO.	Color
1	Red
2	---
3	White
4	Blue
5	Yellow
6	Black

2. Indoor DC Fan Motor(control chip is in outdoor PCB)

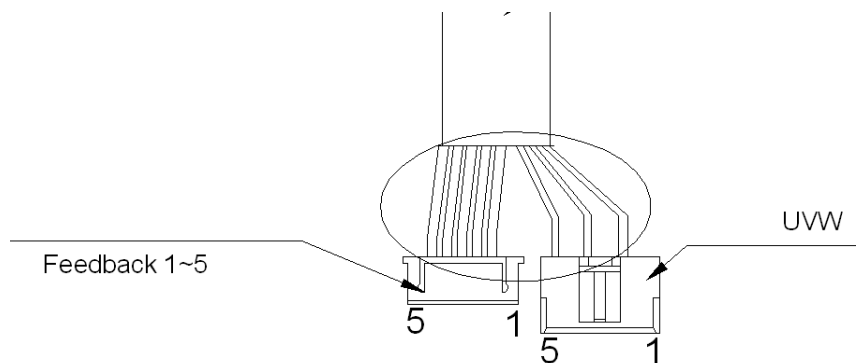

NO.	1	2	3	4	5
Color	Orange	Grey	White	Pink	Black
Signal	Hu	Hv	Hw	Vcc	GND

Color	Red	Blue	Yellow
Signal	W	V	U

- 1) Release the UVW connector. Measure the resistance of U-V, U-W, V-W. If the resistance is not equal to each other, the fan motor must have problems and need to be replaced. Otherwise, go to step 2.
- 2) Power on and when the unit is in standby, measure the voltage of pin4-5 in feedback signal connector. If

the value is not 5V, change the PCB. Otherwise, go to step 3.

3) Rotate the fan by hand, measure the voltage of pin1-5, pin 2-5 and pin 3-5 in feedback signal connector.


If any voltage is not positive voltage fluctuation, the fan motor must has problems and need to be replaced.

Index2:

1. Indoor DC fan motor(control chip is inside fan motor)

Power on and when the unit is in standby, measure the voltage of pin1-pin3, pin4-pin3 in fan motor connector. If the value of the voltage is not in the range showing in below table, the PCB must have problems and need to be replaced.


For other models:

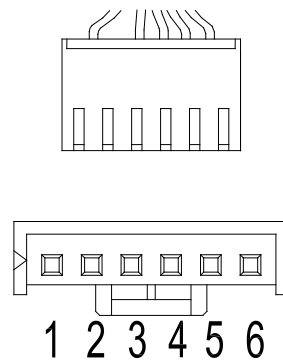

DC motor voltage input and output

NO.	Color	Signal	Voltage
1	Red	Vs/Vm	192V~380V
2	---	---	---
3	Black	GND	0V
4	White	Vcc	13.5-16.5V
5	Yellow	Vsp	0~6.5V
6	Blue	FG	15V


For console:

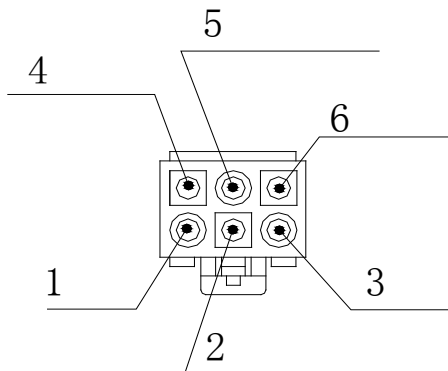

DC motor voltage input and output

NO.	Color	Signal	Voltage
1	Red	VDC	310V
2	---	---	---
3	White	Vcc	15V
4	Blue	FG	15V
5	Yellow	Vsp	0-7.5V
6	Black	GND	0V


2.4.1.6. Refrigerant Leakage Detection

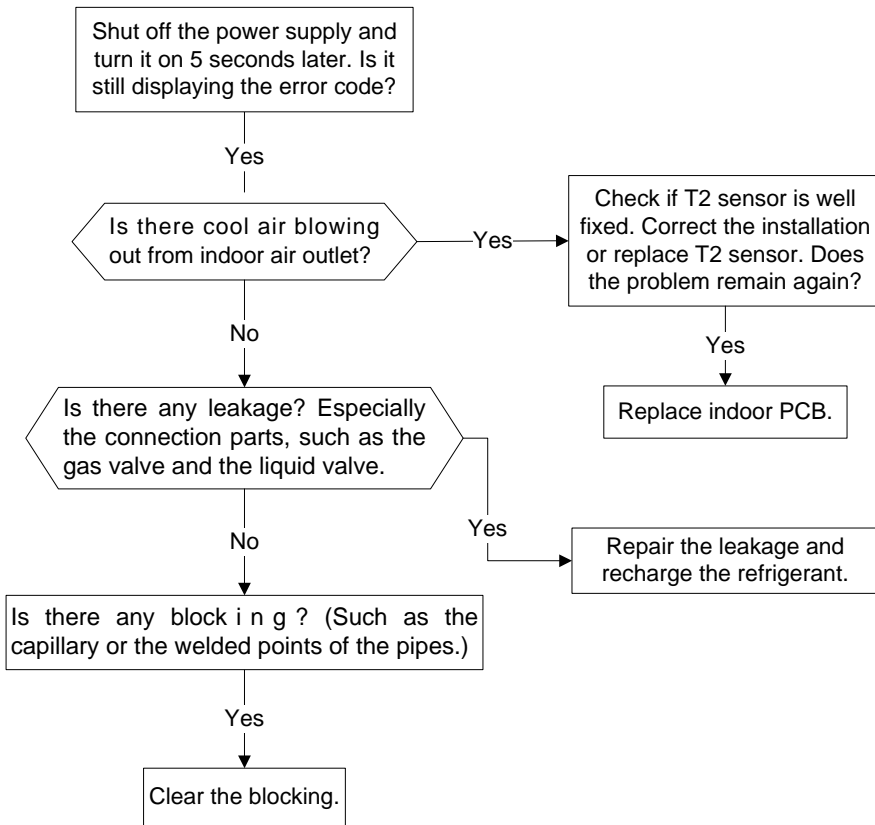


2.4.2 For the super-slim cassette with up-down panel

2.4.2.1 Communication error between indoor unit and up-down panel

2.4.2.2 Up-down panel is defective

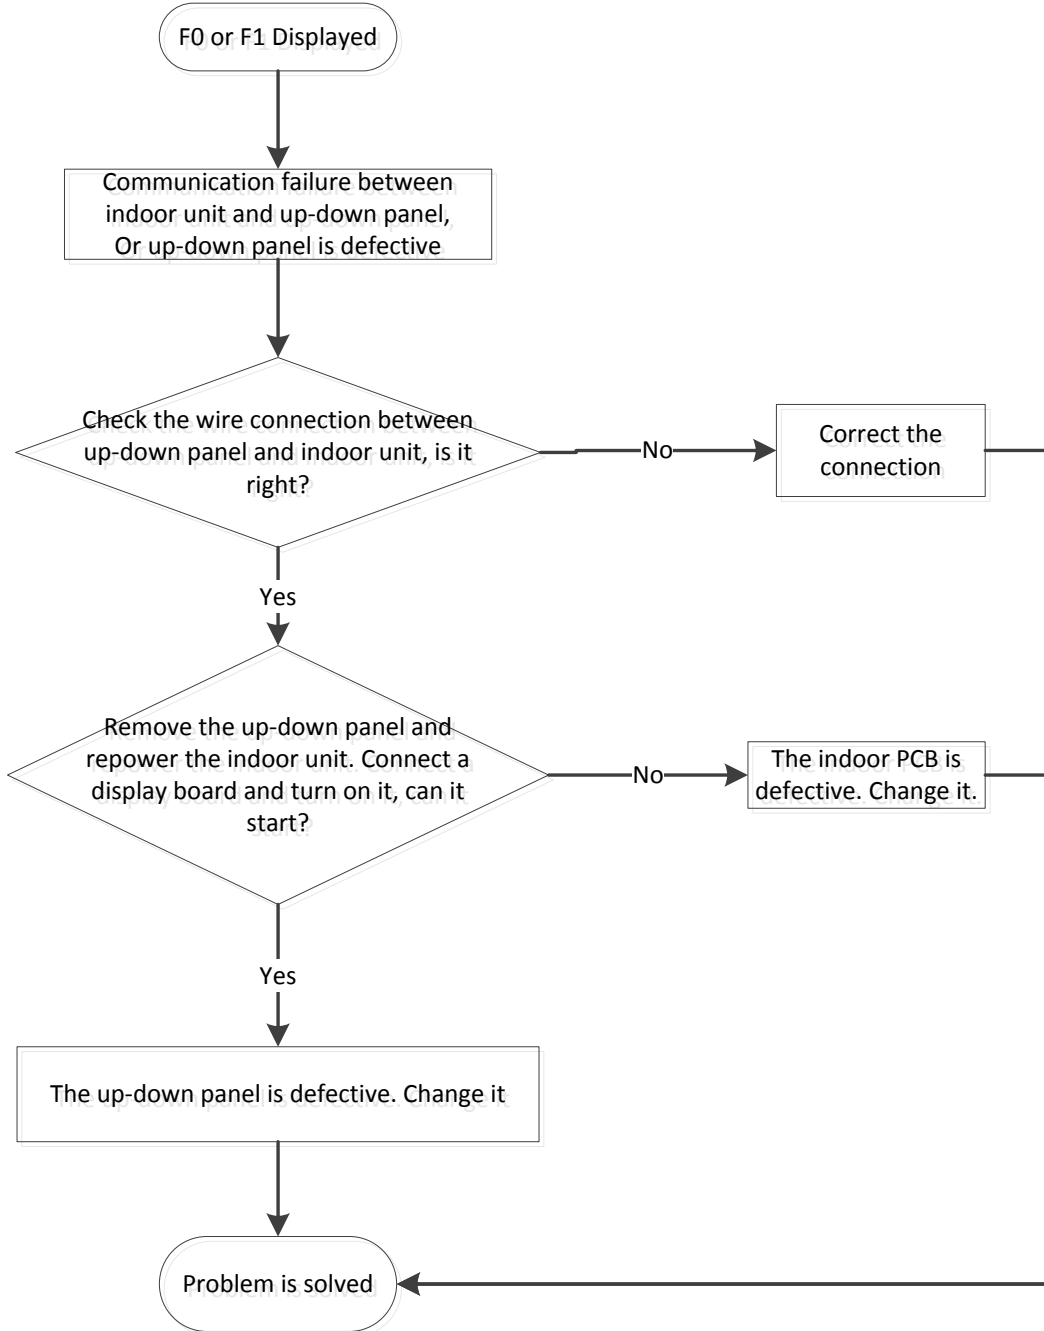


2.4.2.3 Up-down panel is not closed

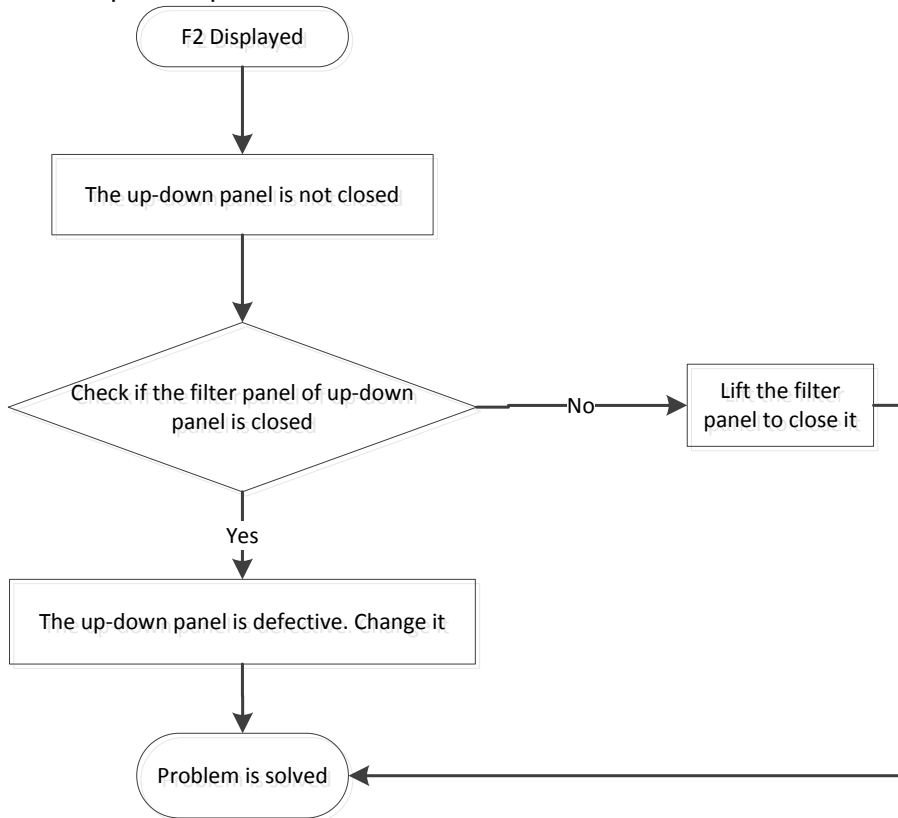

2.4.3 For the unit with TWINS function(For the super-slim cassette & A5 duct)

2.4.3.1 Communication malfunction between master unit and indoor unit

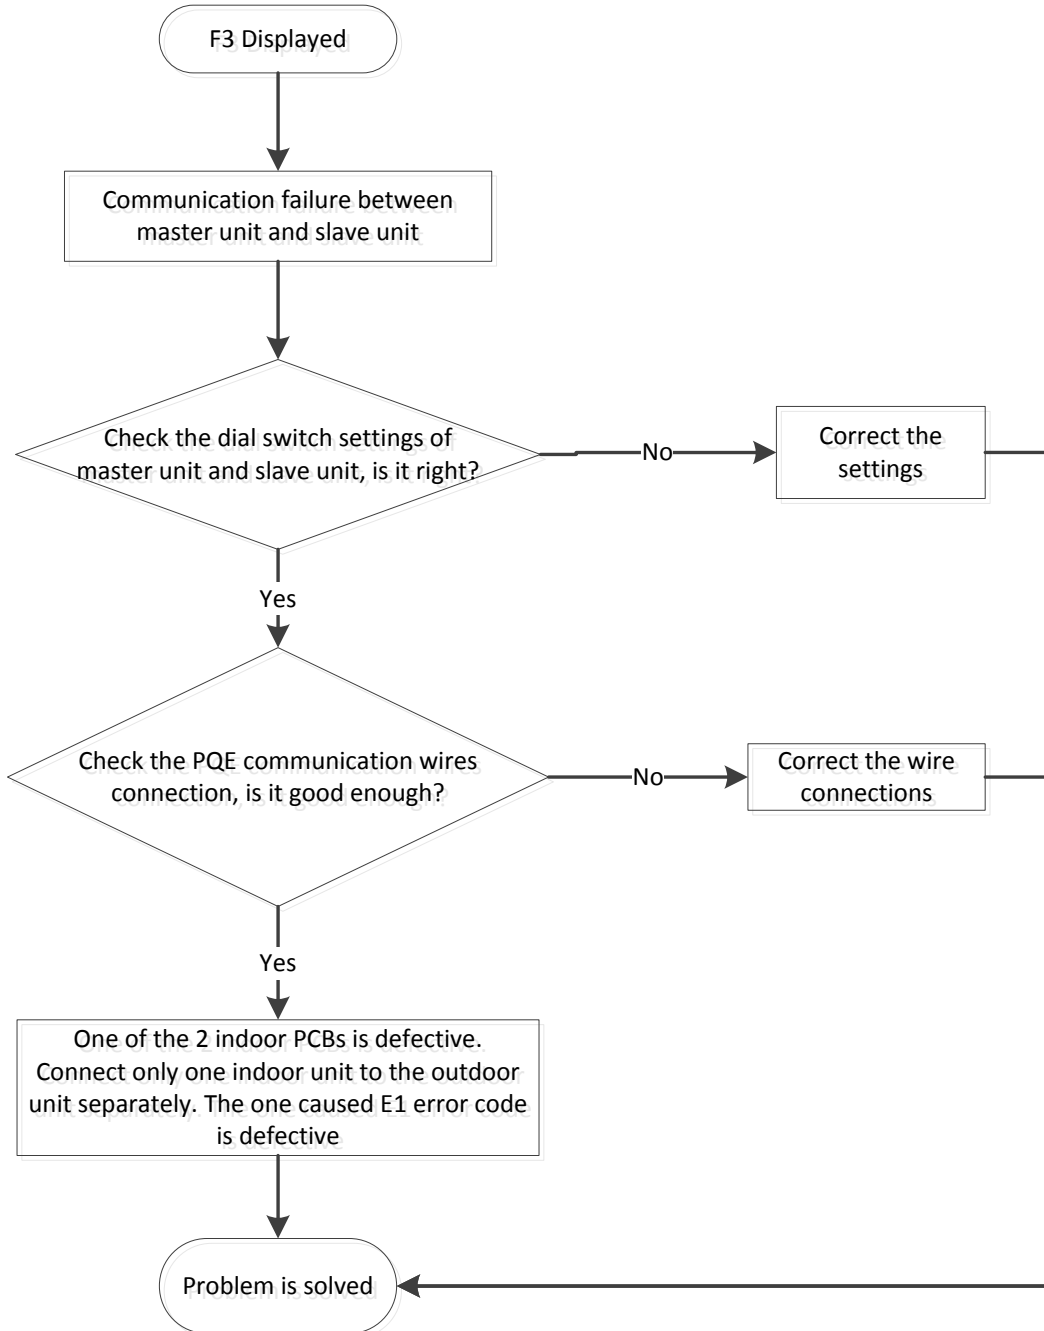


2.4.3.2 Other malfunction between master unit and indoor unit


One indoor unit displays "F4", which means another indoor unit is faulty. Check another indoor unit's error code and then follow the appropriate solutions to solve the malfunction.

2.4.4 For the outdoor unit


2.4.4.1. E0 malfunction

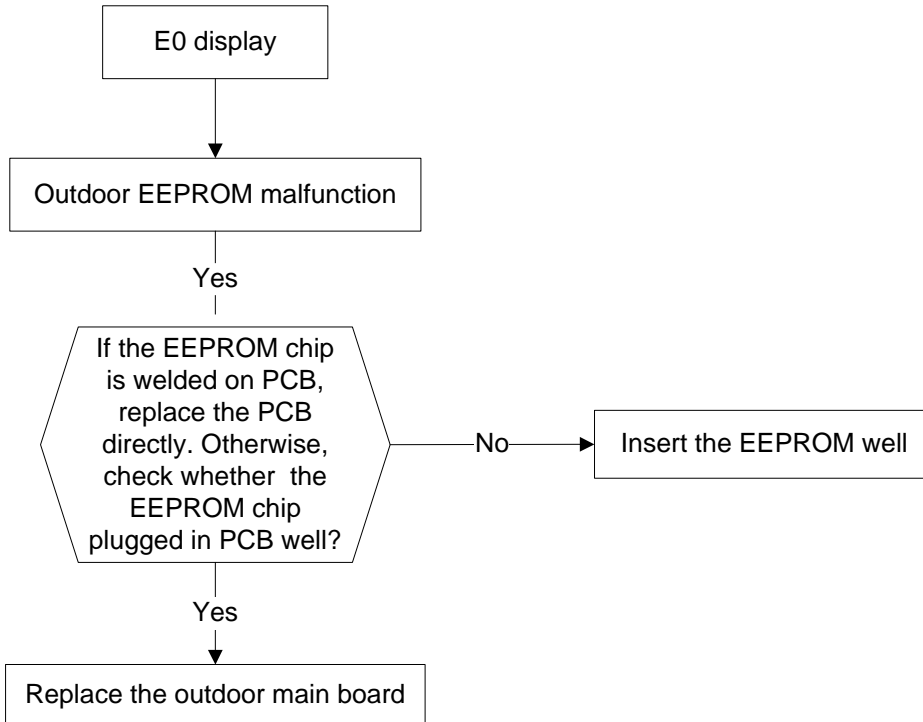


2.4.4.2. E2 malfunction

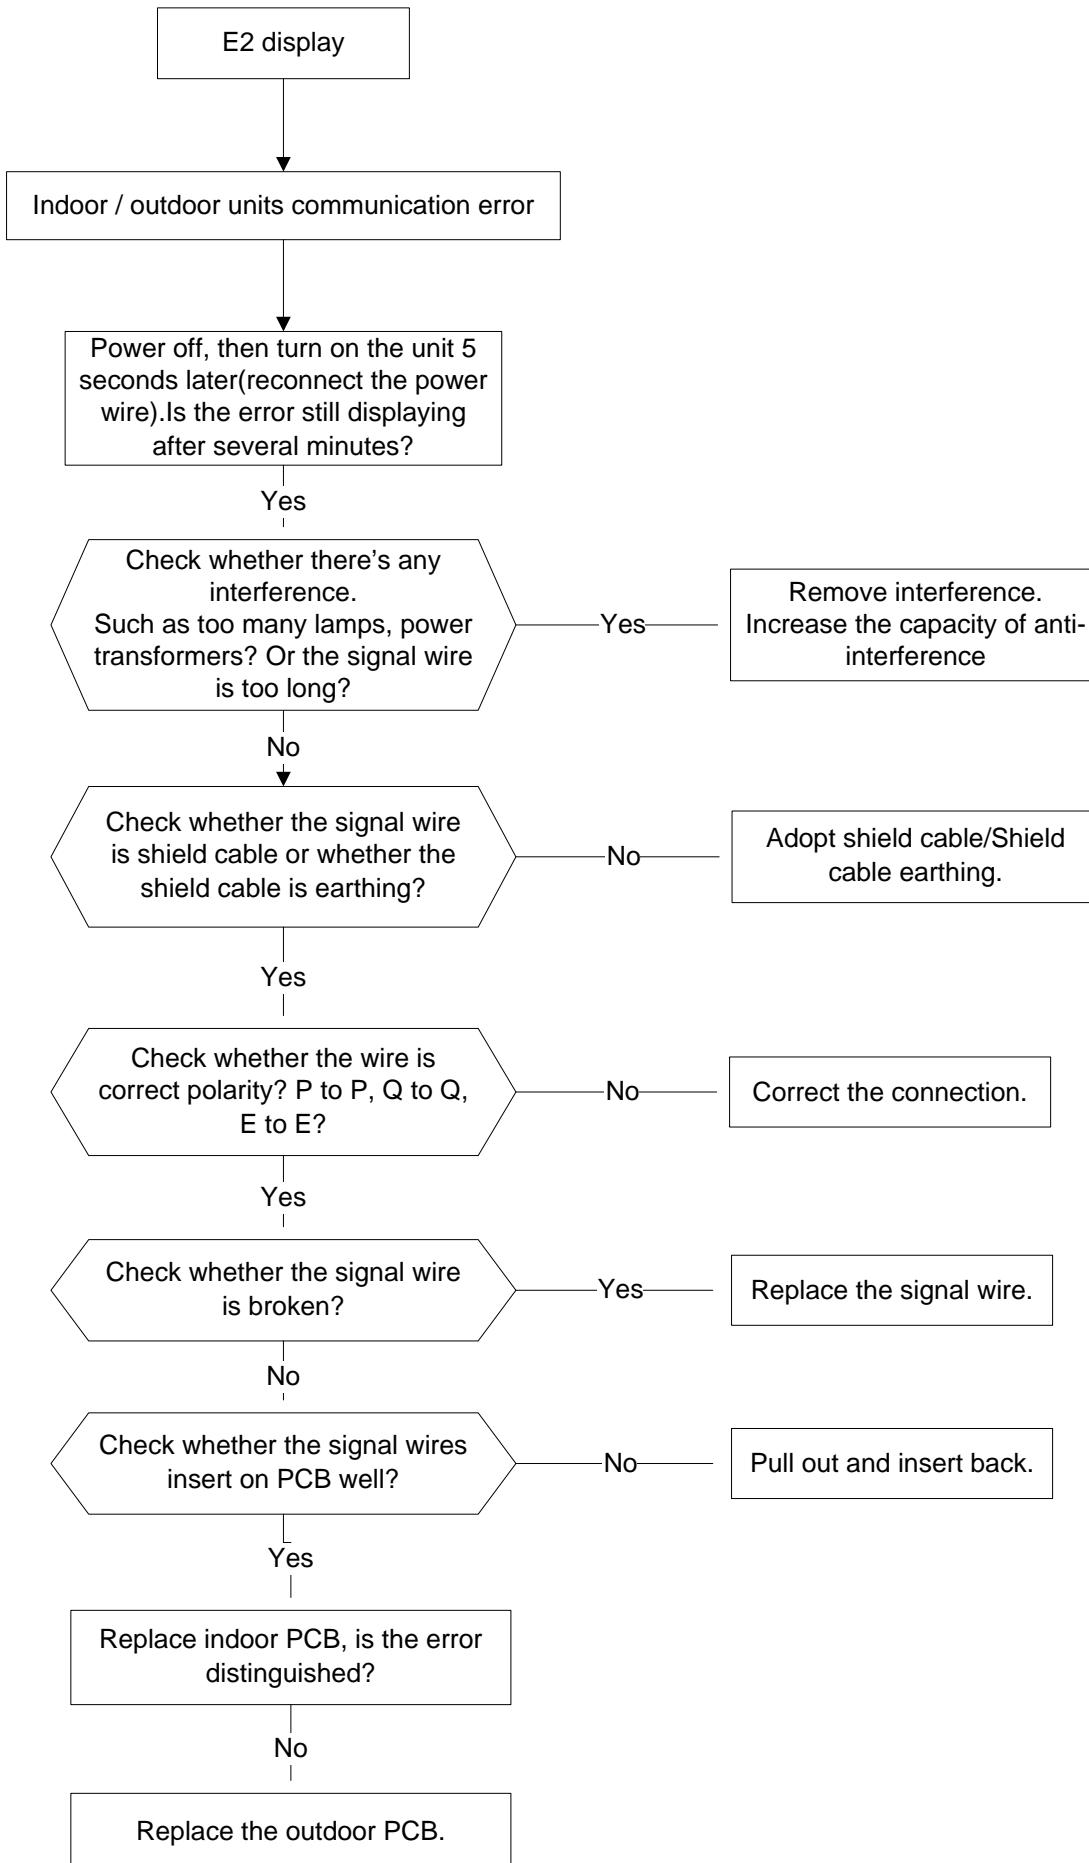


2.4.4.3. E3 malfunction

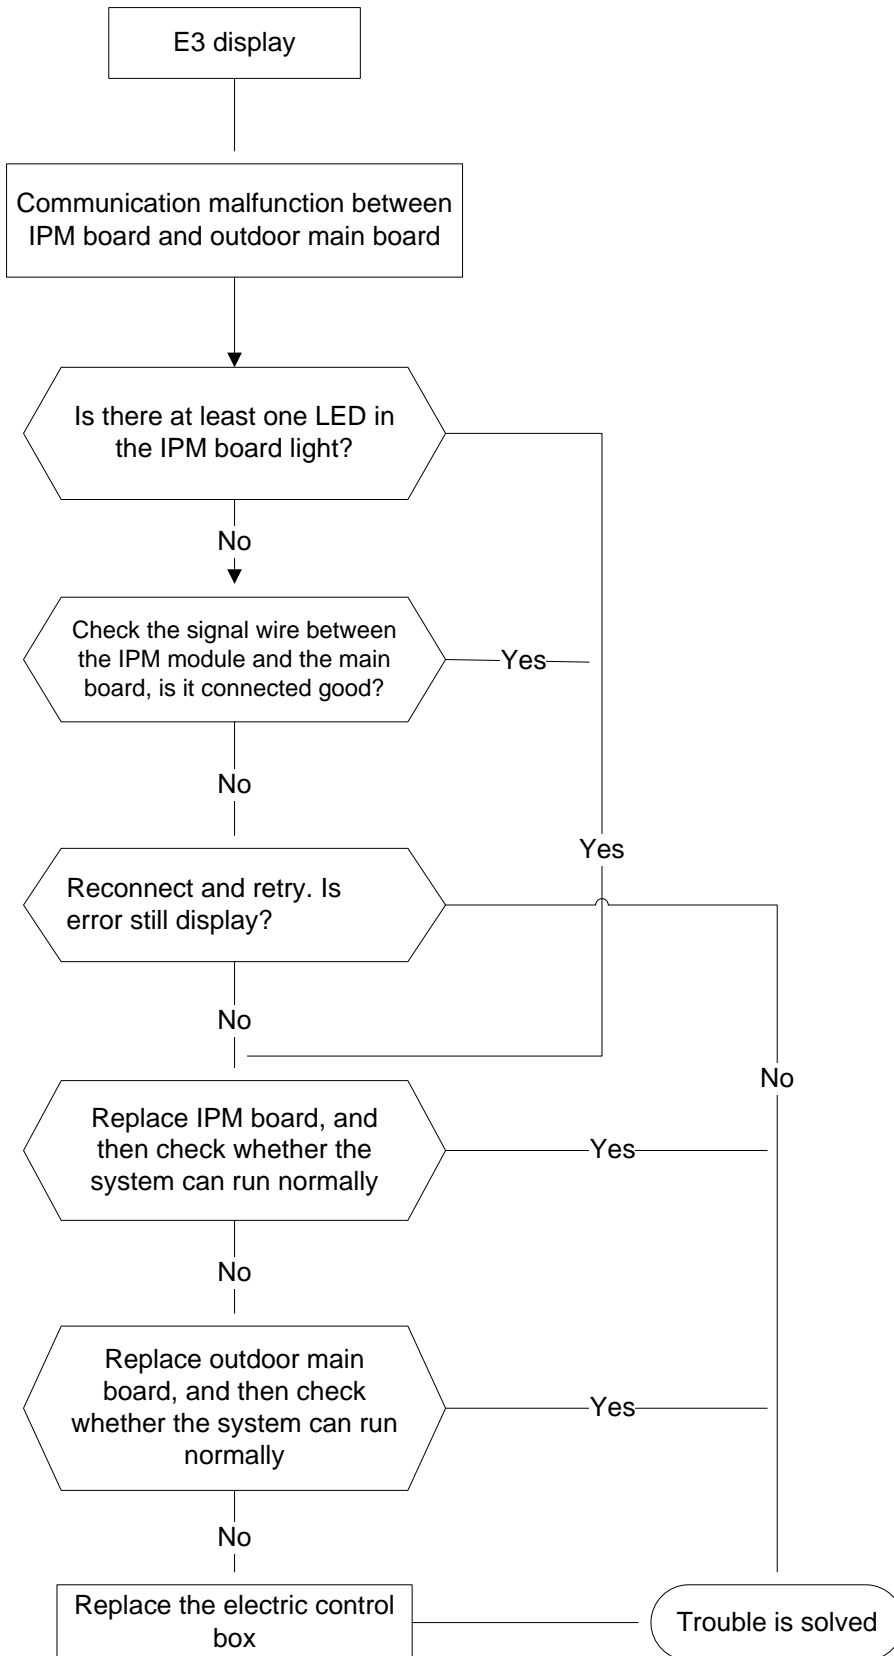


2.4.4.4. E4 malfunction

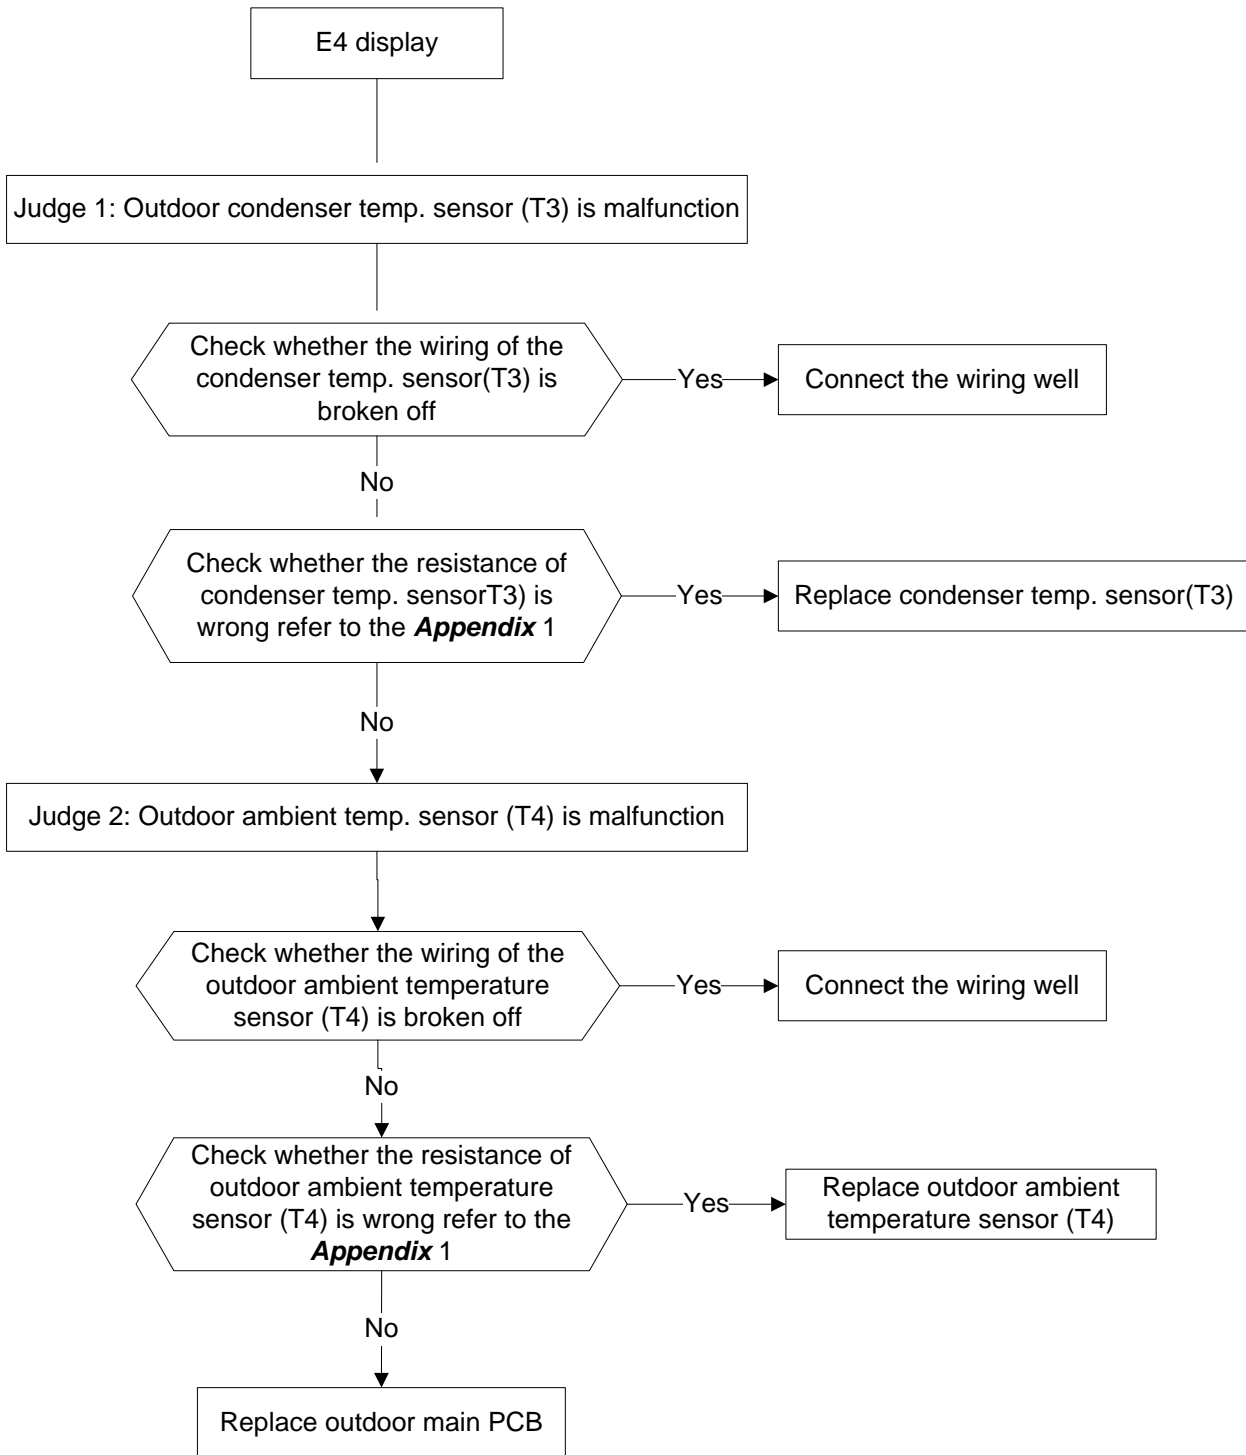


2.4.4.5. E5 malfunction (For single phase units)

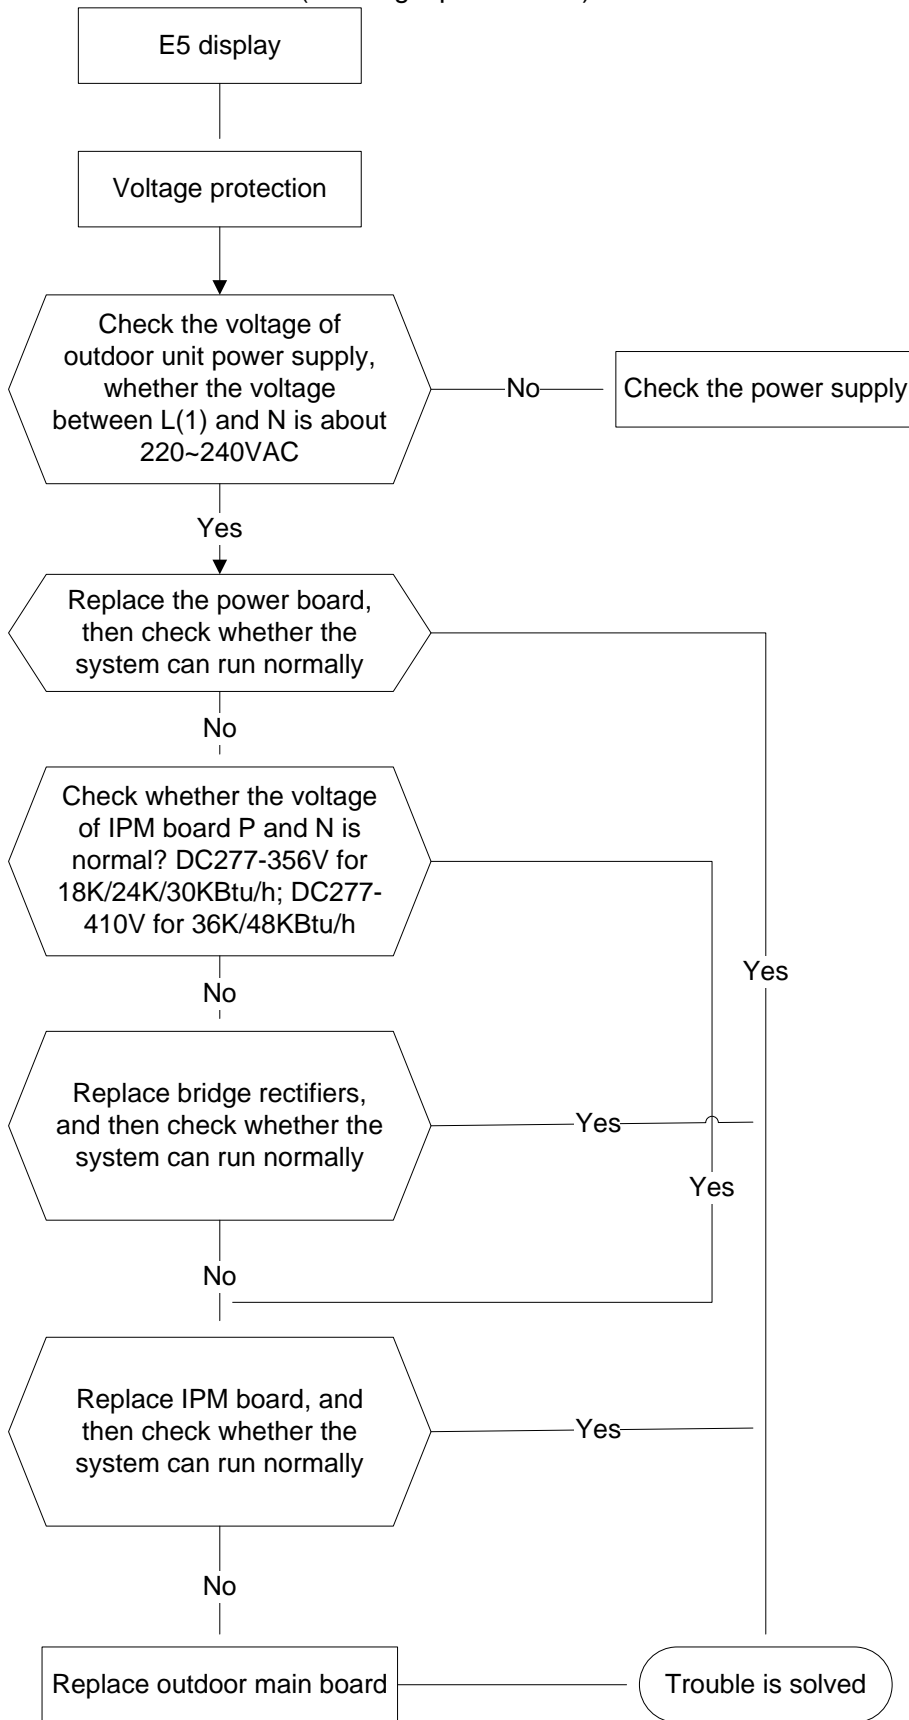




2.4.4.6. E5 malfunction (For three phases units)

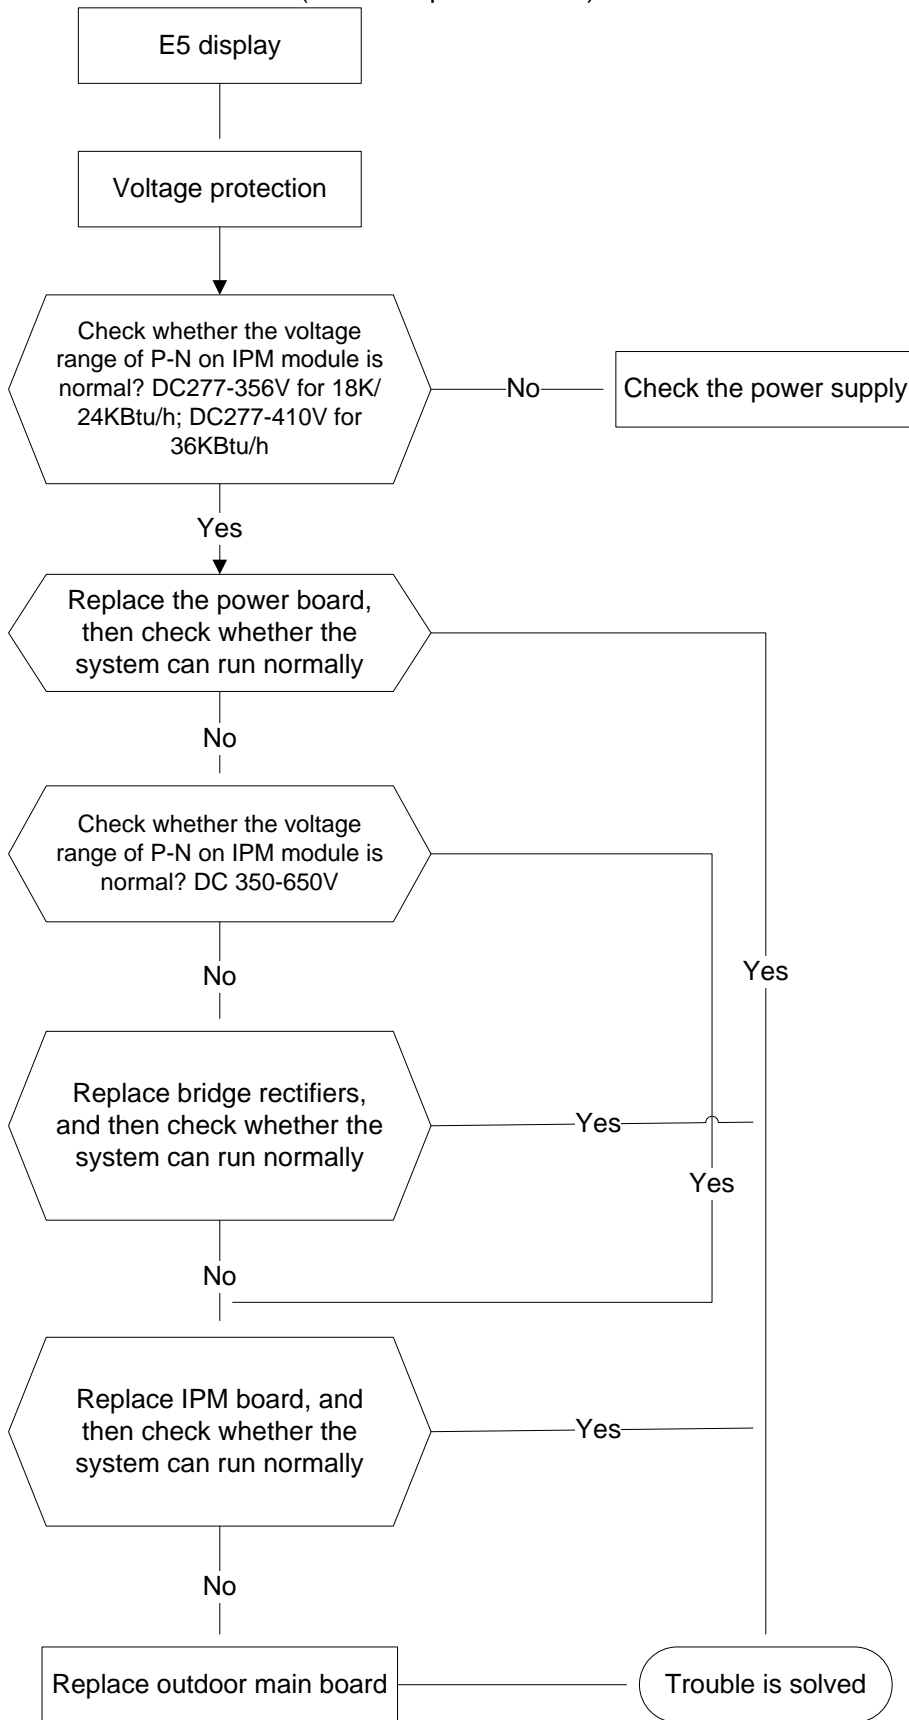

2.4.4.7. E6 malfunction (Only for MOU-36HFN1-QRC4,MOU-36HFN1-QRC8)

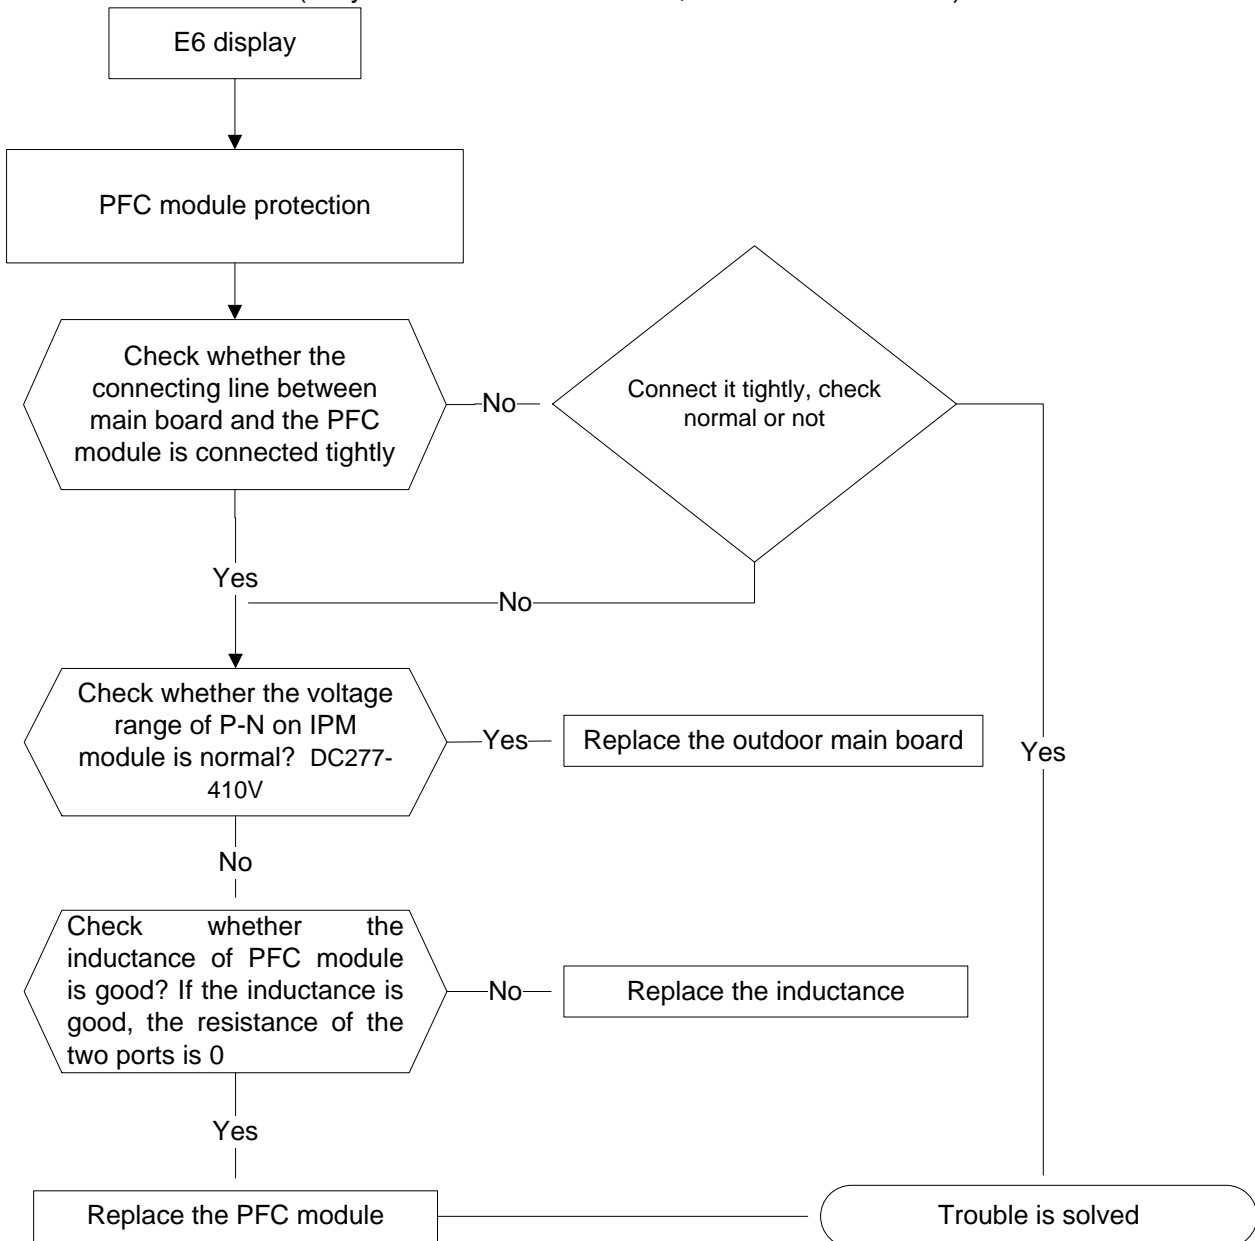


2.4.4.8. E8 malfunction

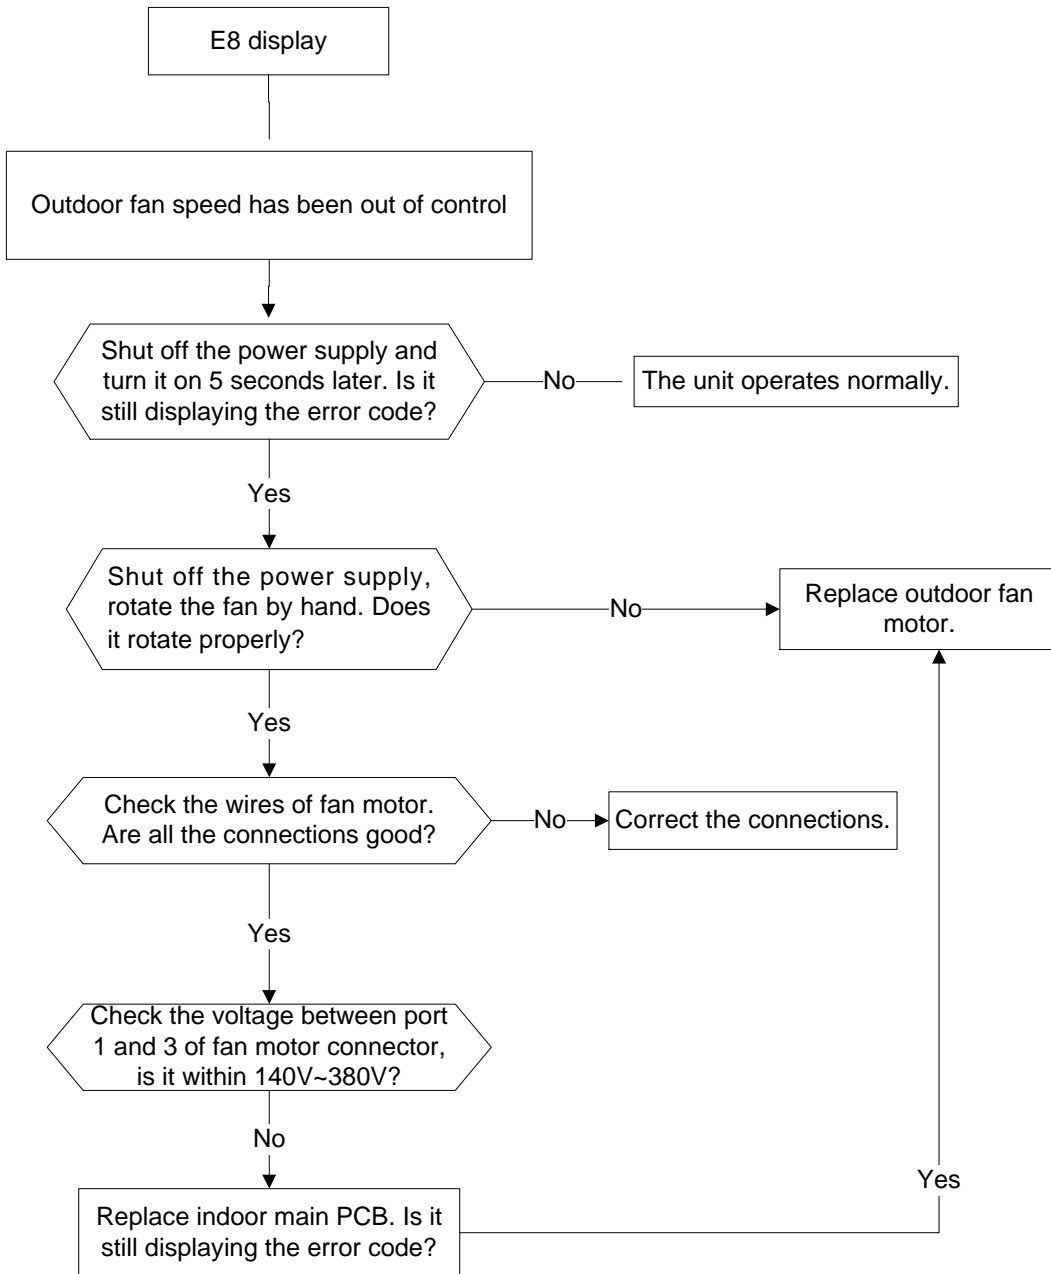


DC motor voltage input and output

NO.	Color	Signal	Voltage
1	Red	Vs/Vm	140~380V
2	---	---	---
3	Black	GND	0V
4	White	Vcc	13.5~16.5V
5	Yellow	Vsp	0~6.5V
6	Blue	FG	15V


2.4.4.8. P0 malfunction

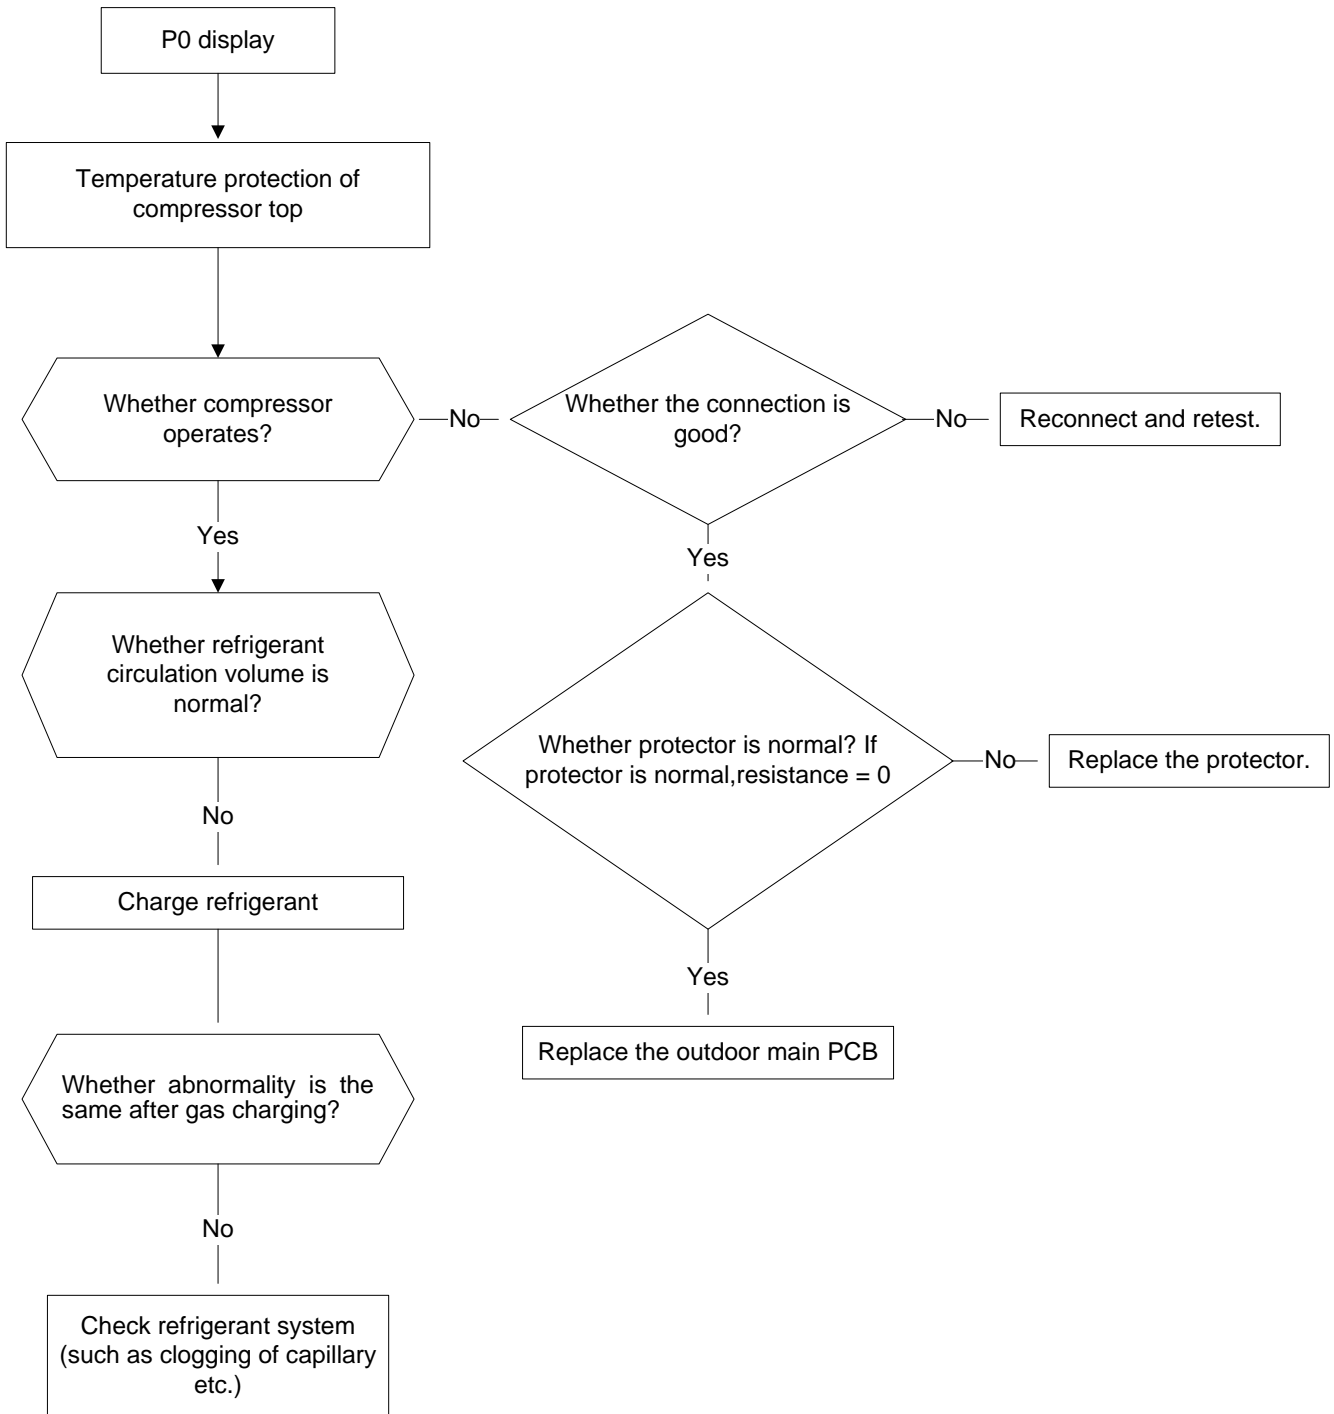


2.4.4.9. P1 malfunction (For 36k models)

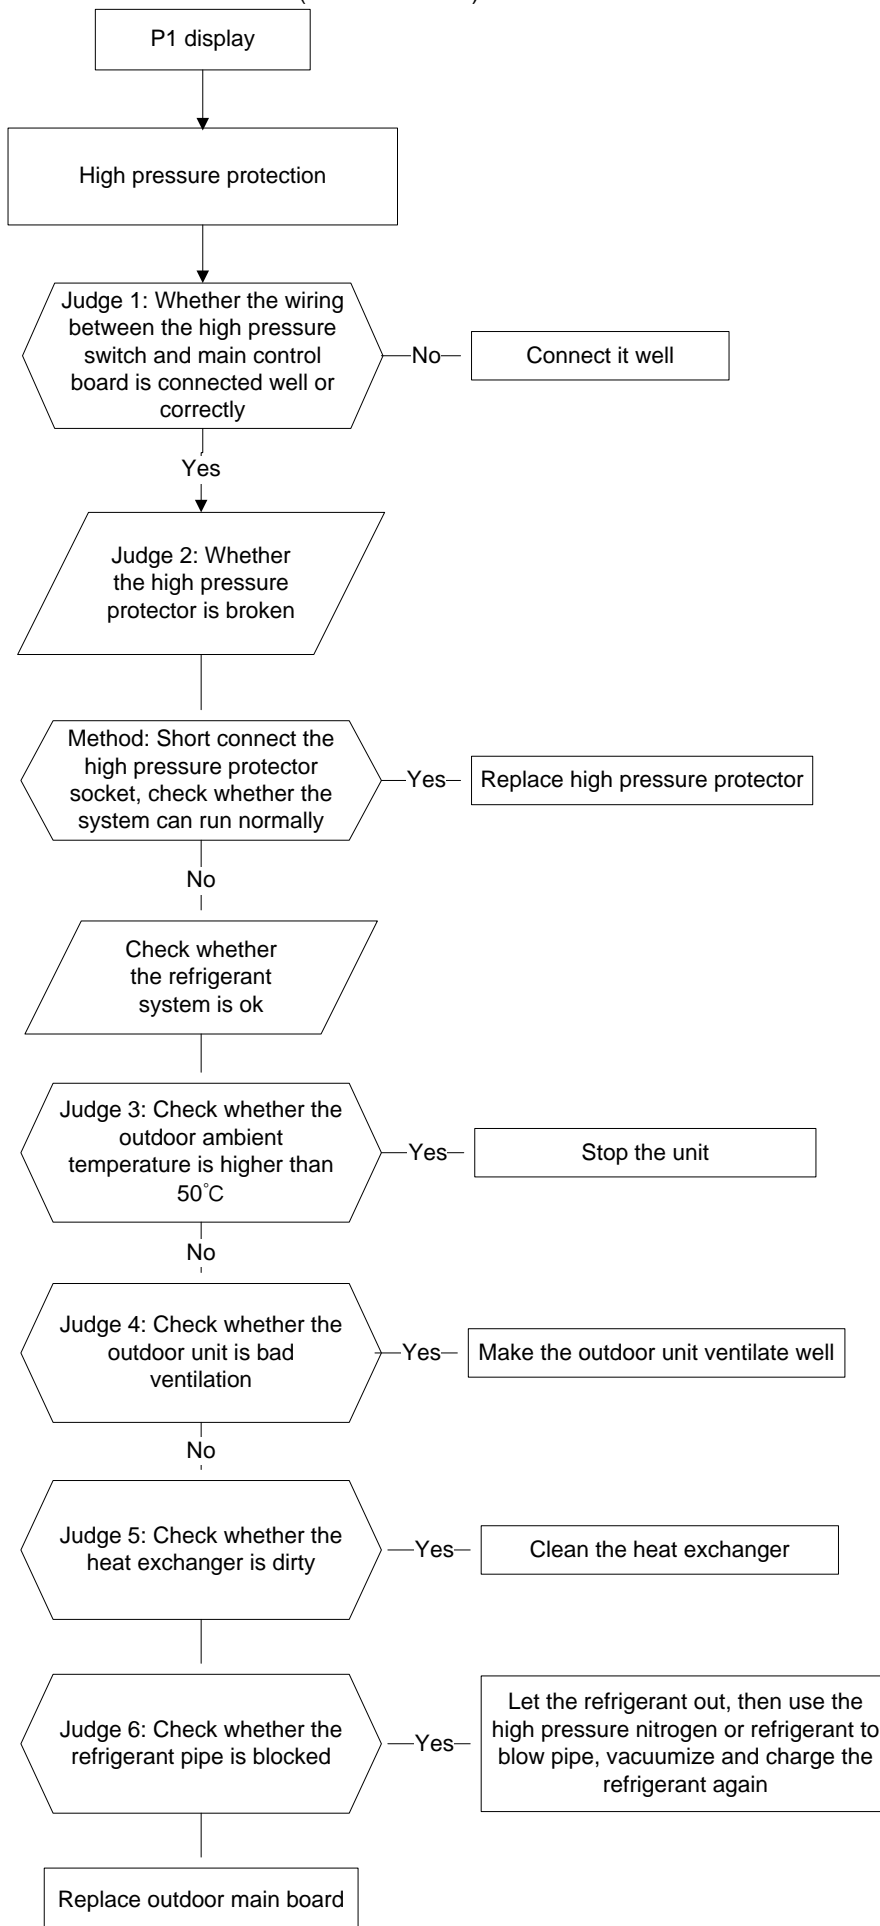

2.4.4.10. P2 malfunction (For 36k models)

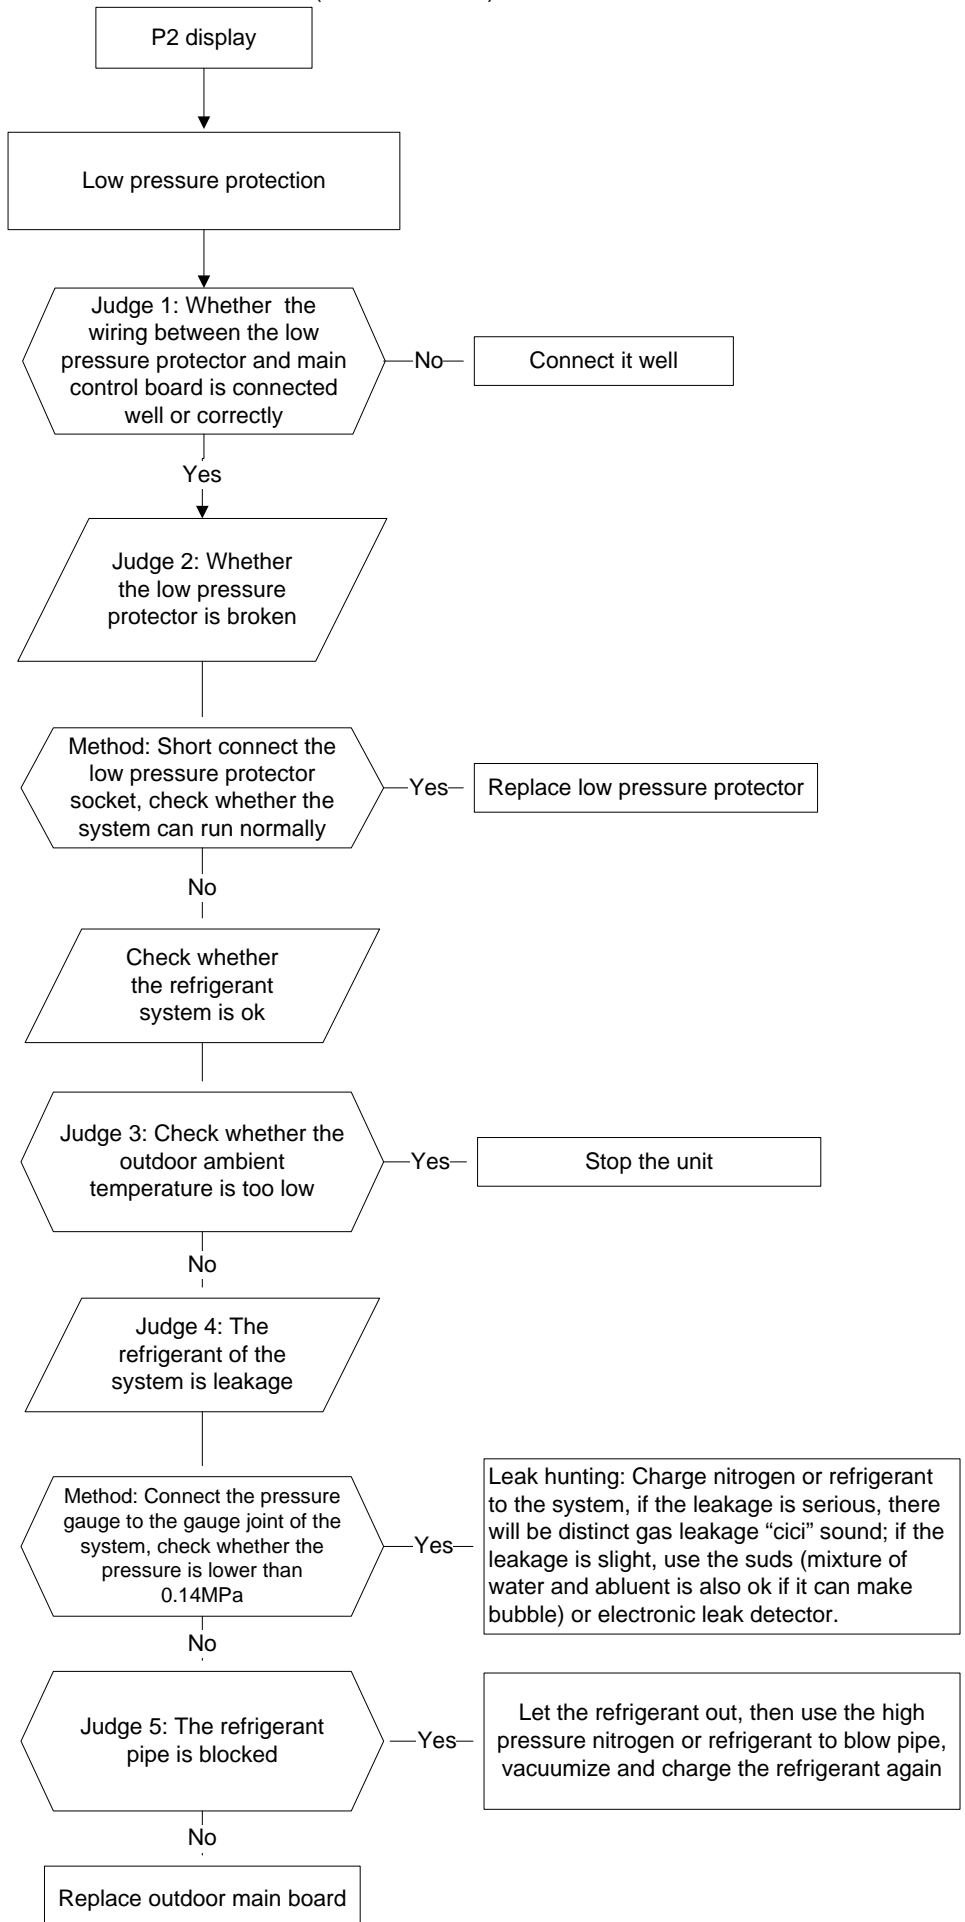


2.4.4.11. P3 malfunction

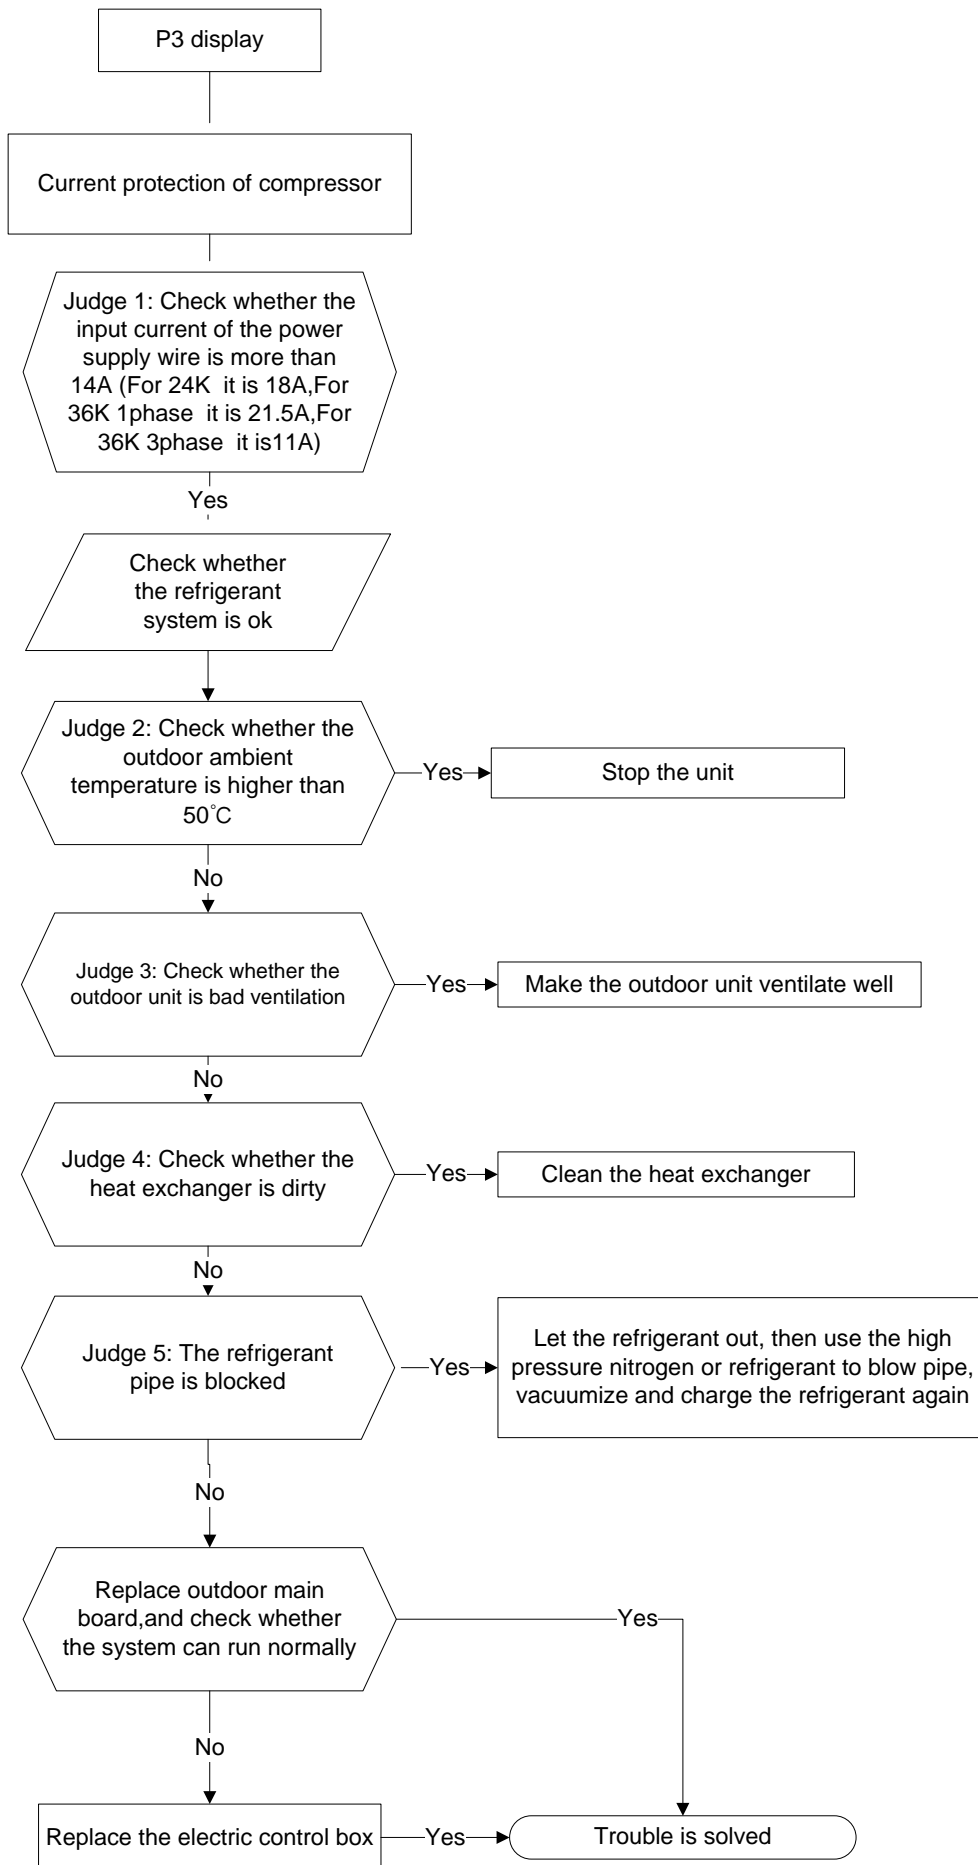


2.4.4.12. P4 malfunction

When compressor discharge temperature is higher than 115°C, the unit will stop, and unit runs again when compressor discharge temperature is lower than 90°C.

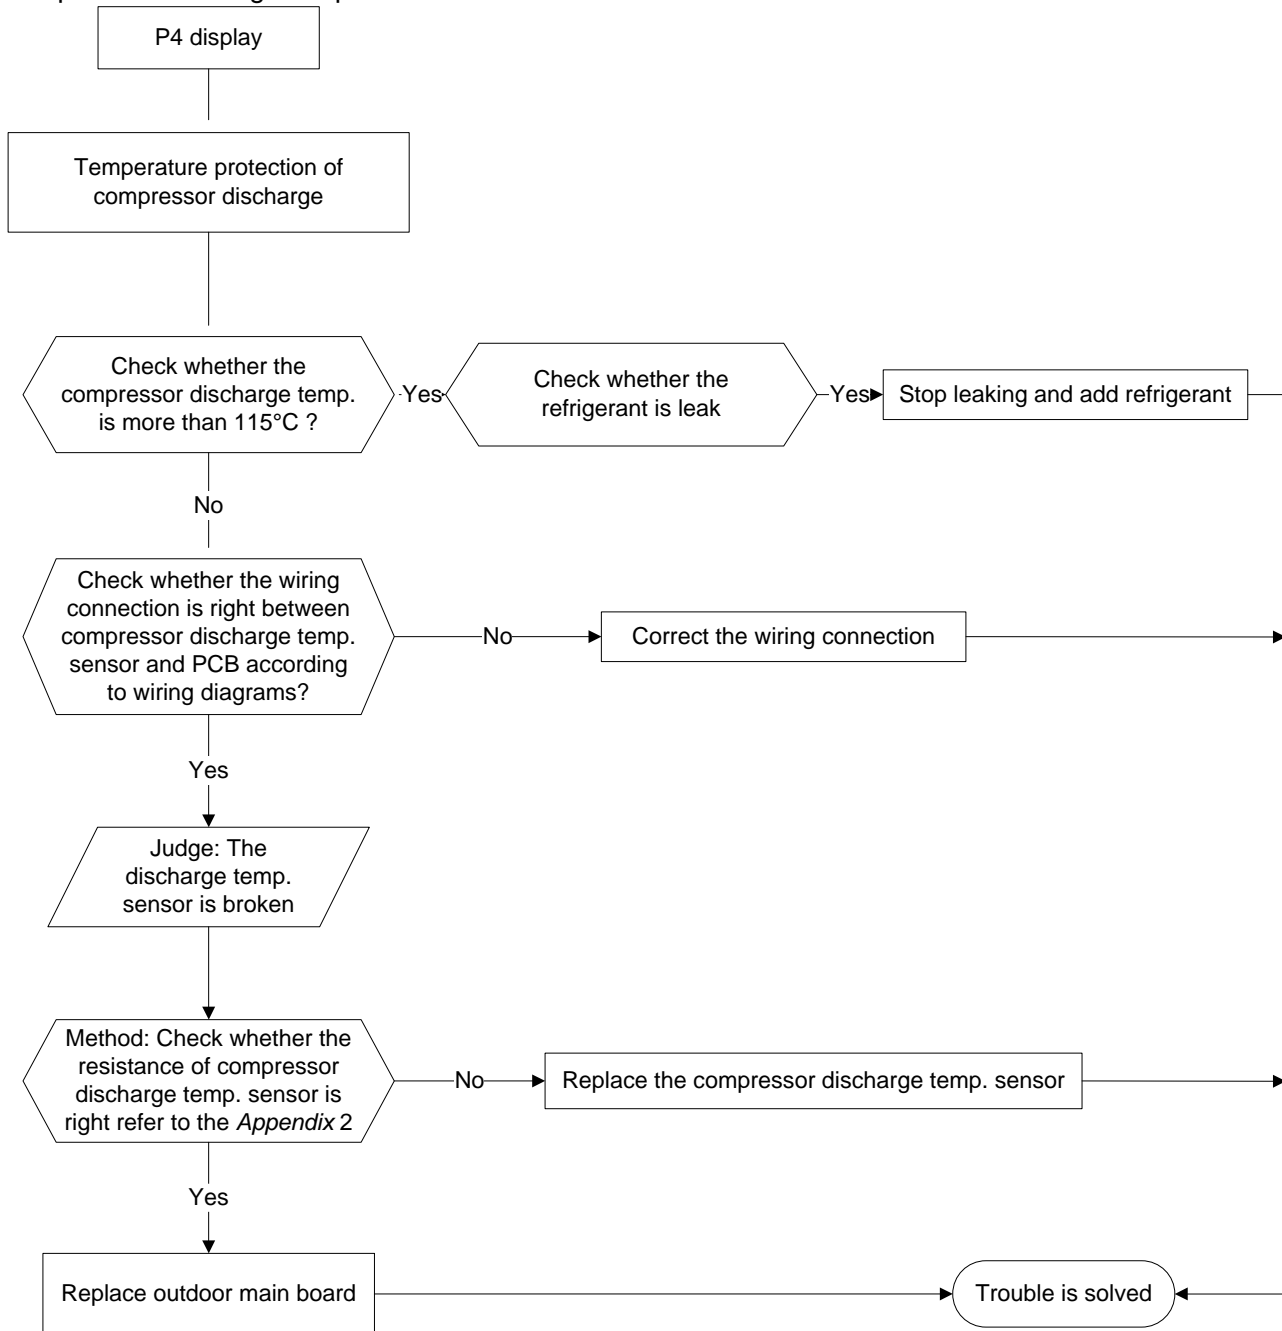


2.4.4.13. P5 malfunction

When condenser high temp. is more than 65°C, the unit will stop, and unit runs again when outdoor pipe temp. less than 52°C.

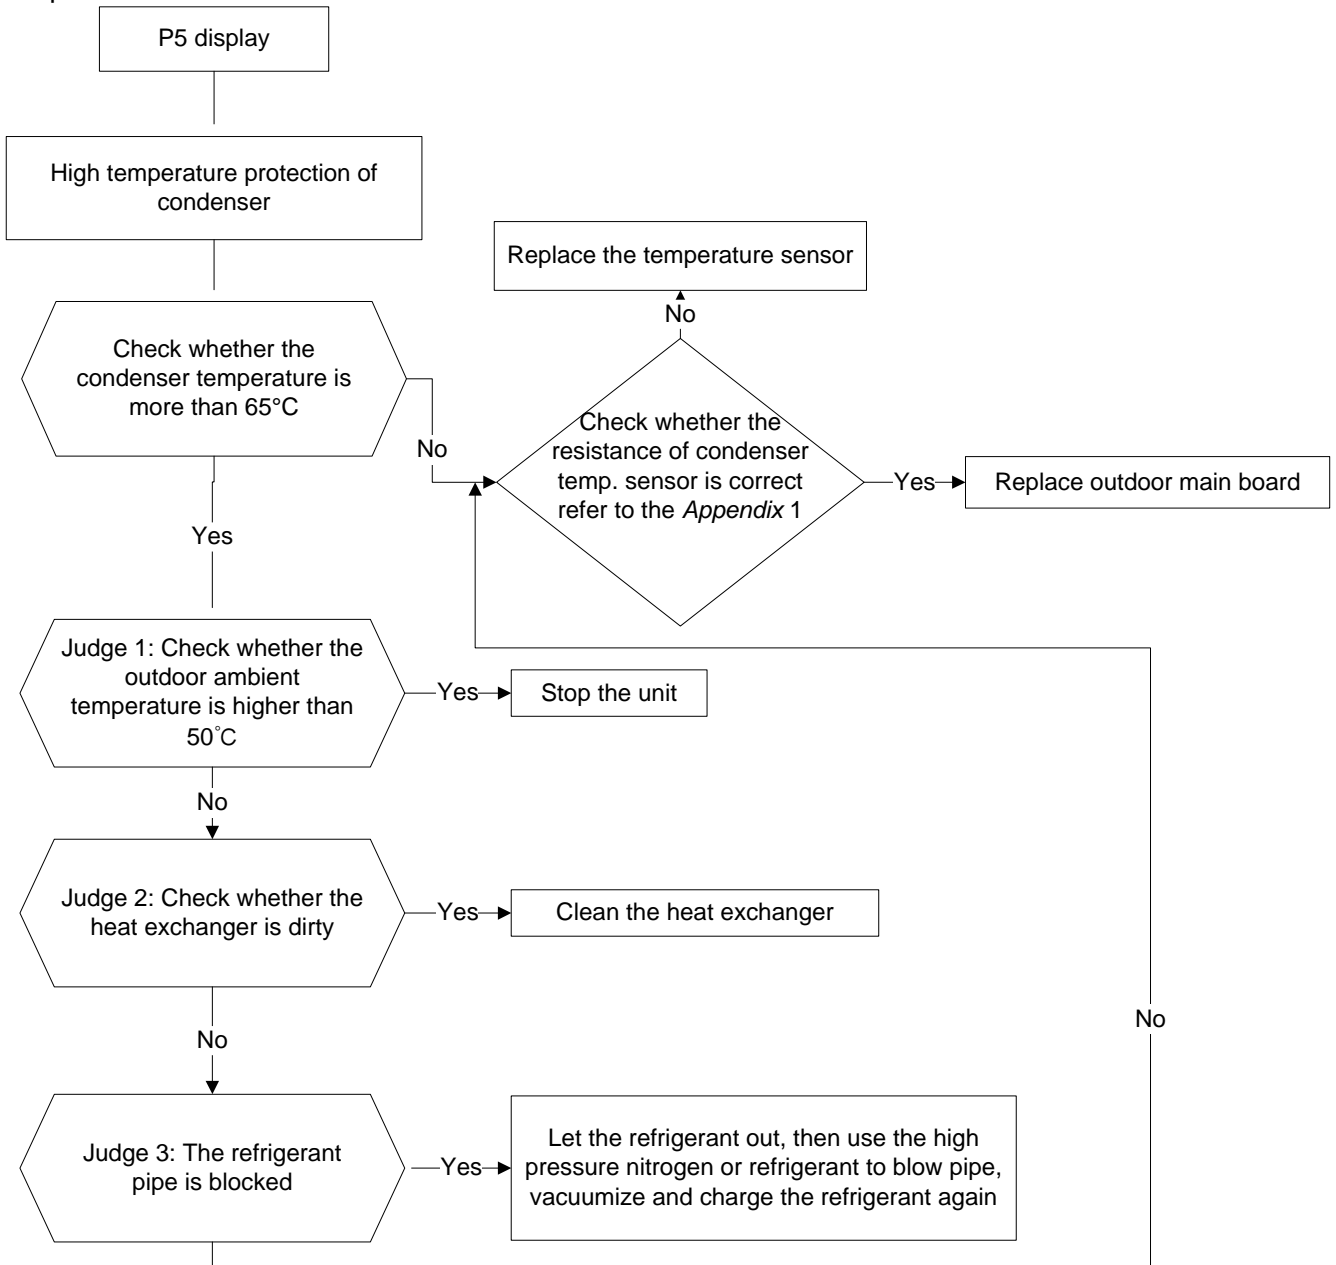


2.4.4.14. P6 malfunction (For single phase units)

At first test the resistance between every two ports of U, V, W of IPM and P, N. If any result of them is 0 or close to 0, the IPM is defective. Otherwise, please follow the procedure below:

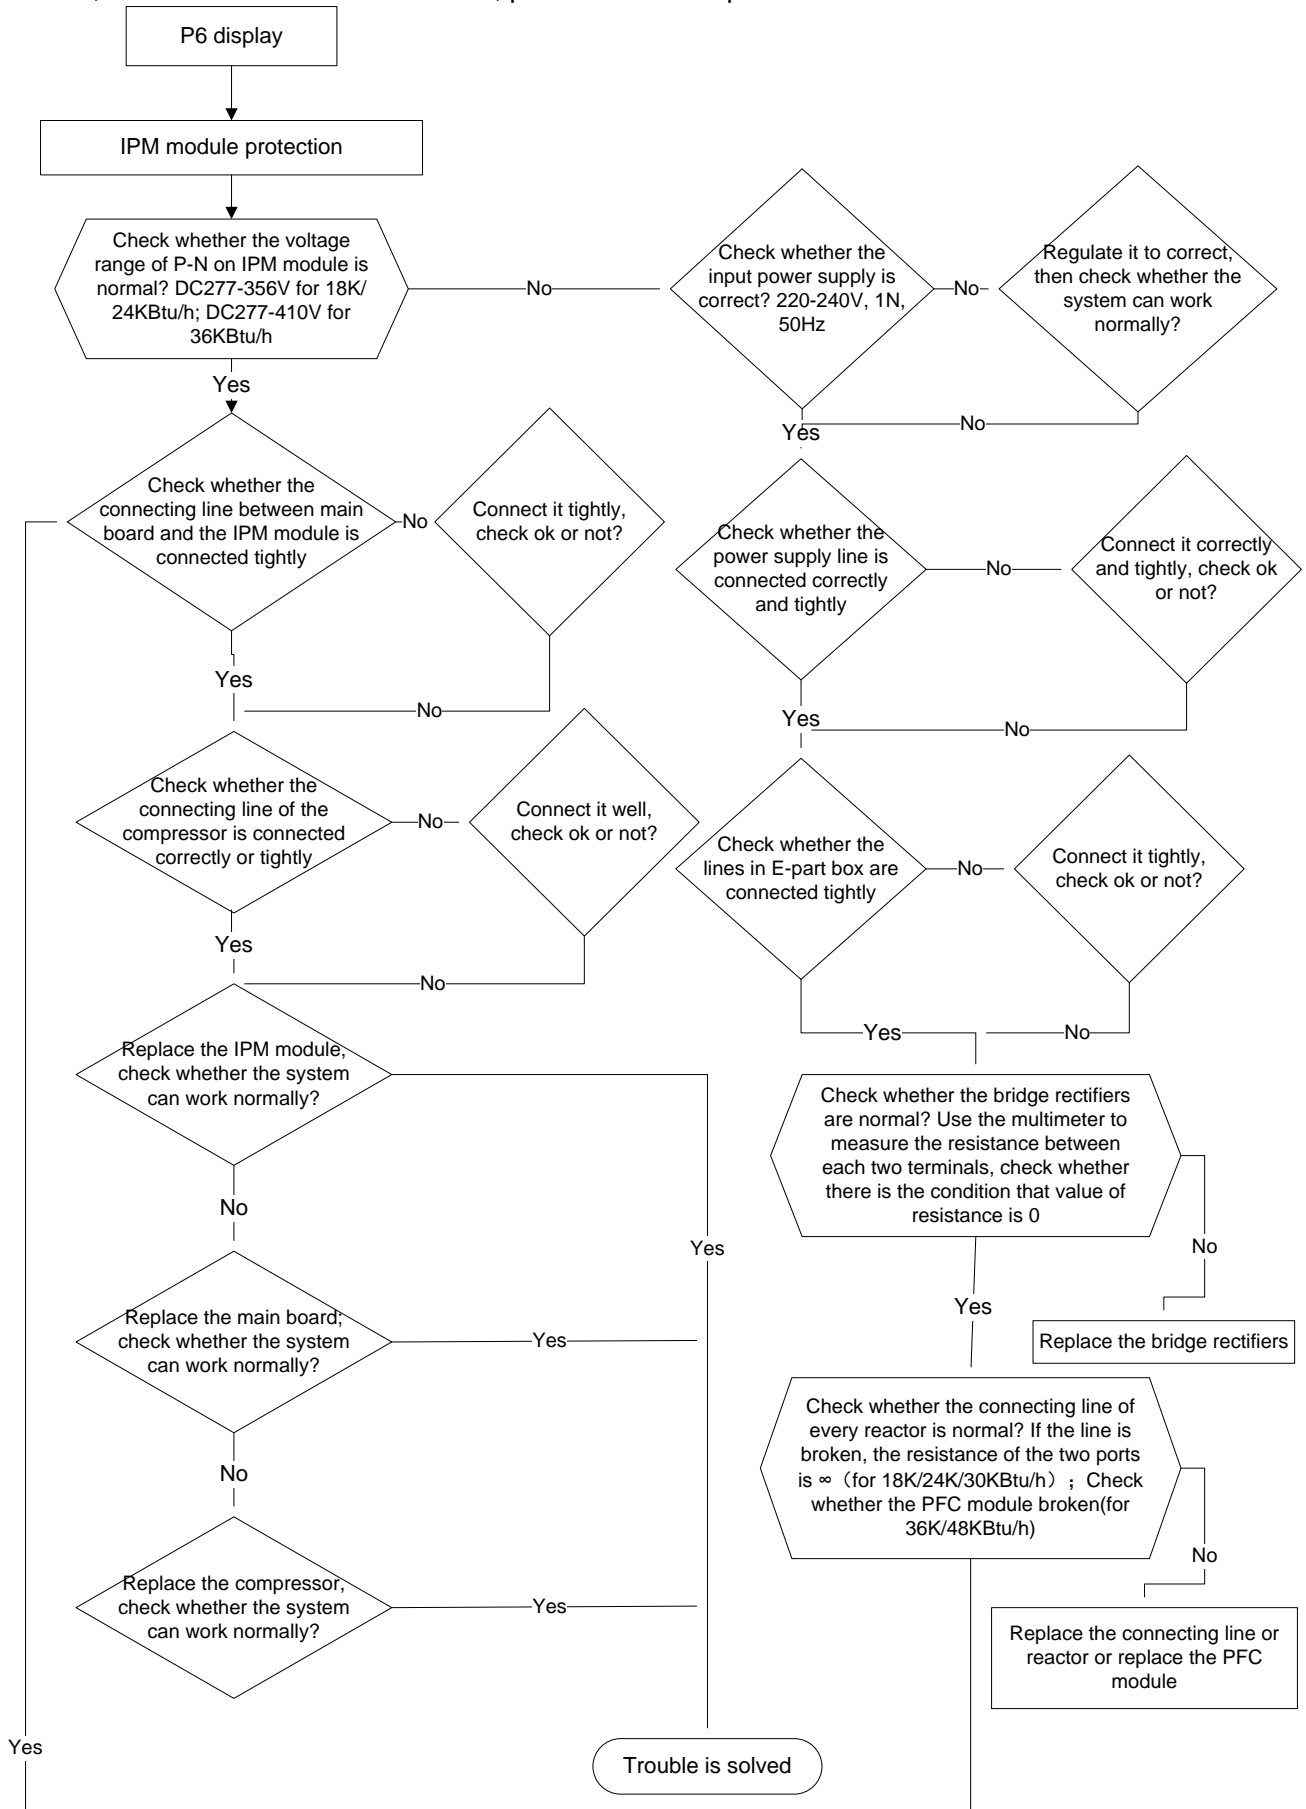


2.4.4.15. P6 malfunction (For three phases units)

At first test the resistance between every two ports of U, V, W of IPM and P, N. If any result of them is 0 or close to 0, the IPM is defective. Otherwise, please follow the procedure below:

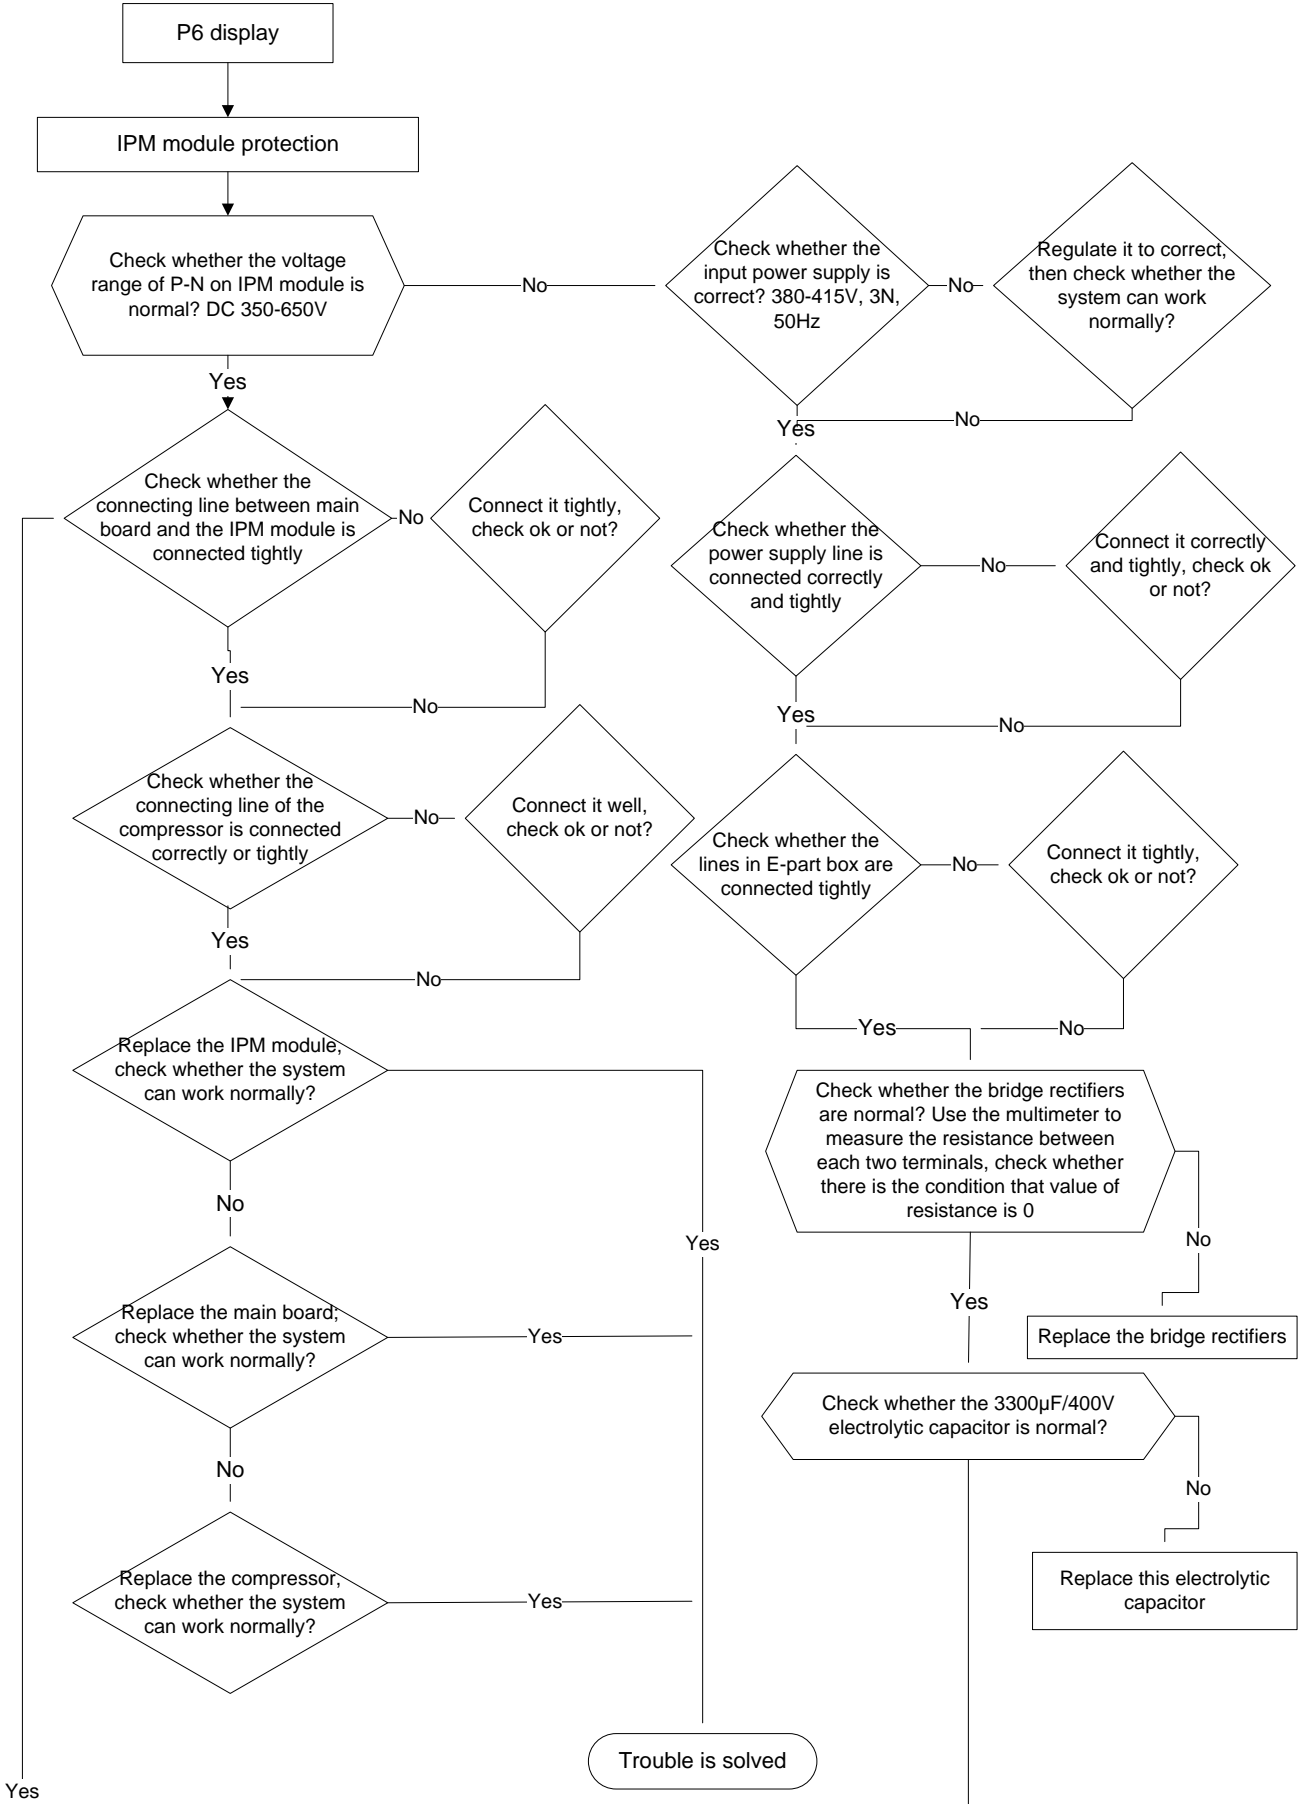

2.4.4.16. P7 malfunction

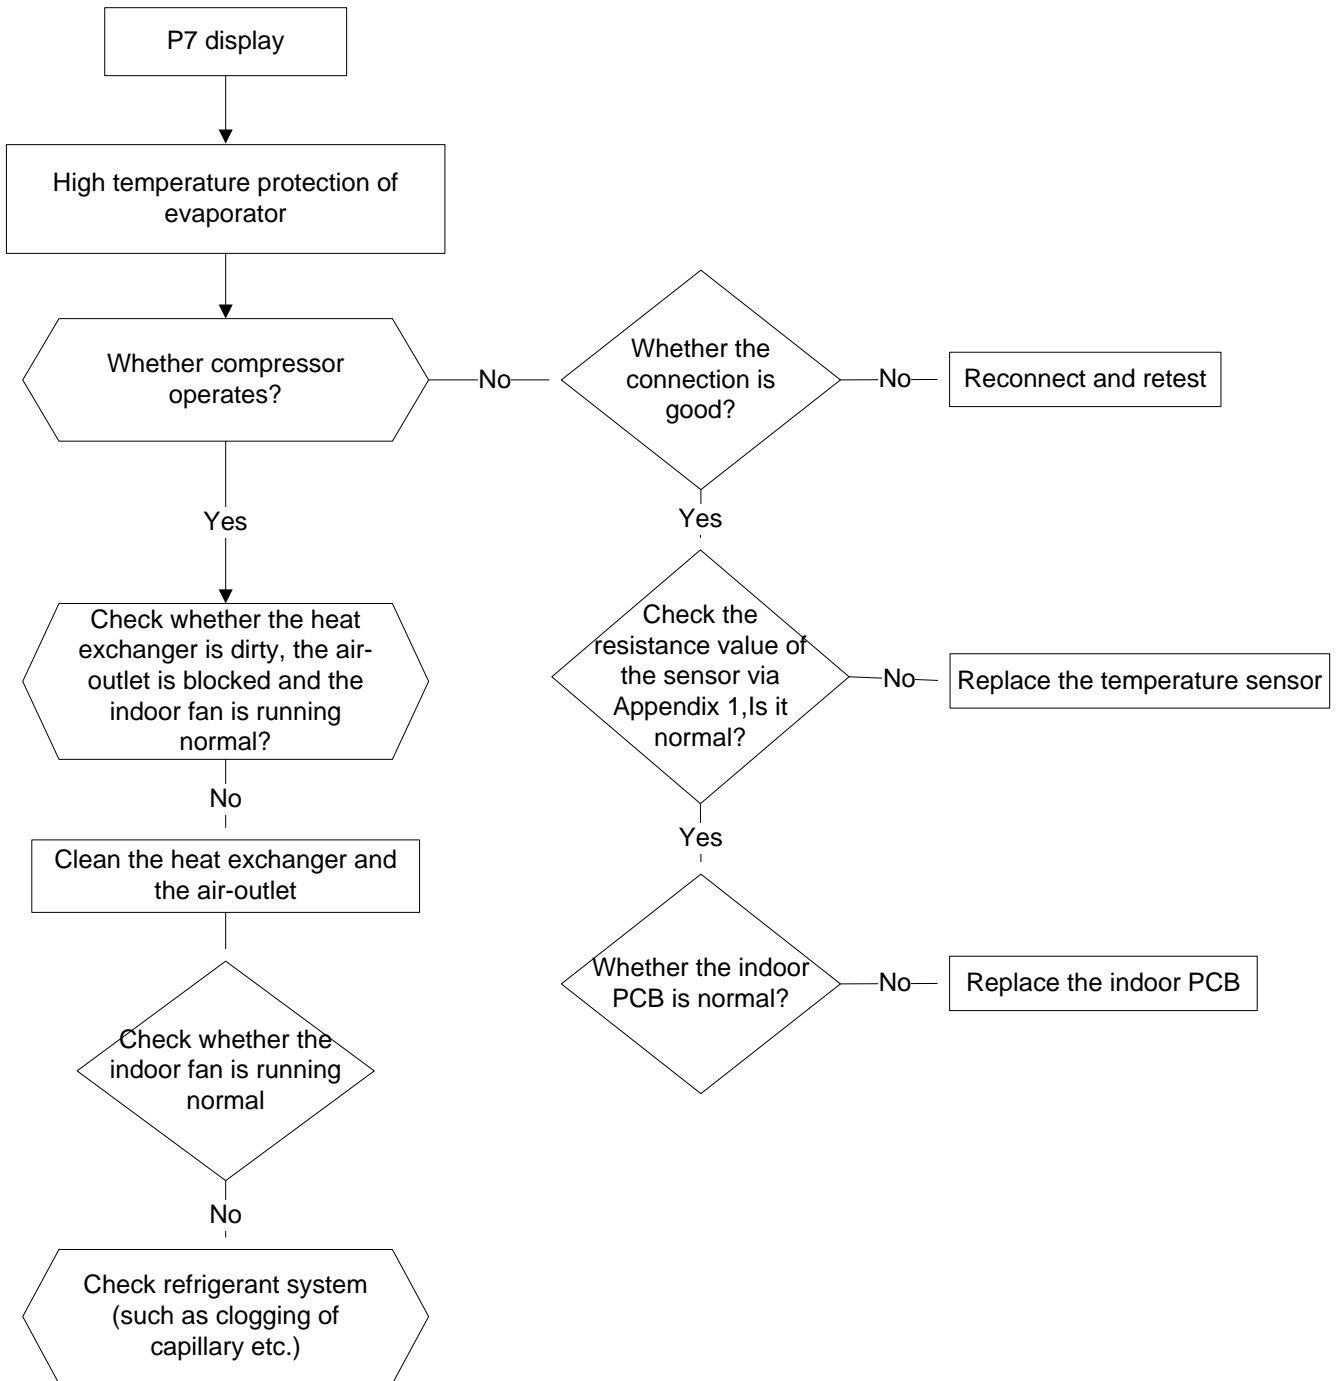

Appendix 1 Temperature Sensor Resistance Value Table (°C--K)

°C	K Ohm	°C	K Ohm	°C	K Ohm	°C	K Ohm
-20	115.266	20	12.6431	60	2.35774	100	0.62973
-19	108.146	21	12.0561	61	2.27249	101	0.61148
-18	101.517	22	11.5000	62	2.19073	102	0.59386
-17	96.3423	23	10.9731	63	2.11241	103	0.57683
-16	89.5865	24	10.4736	64	2.03732	104	0.56038
-15	84.2190	25	10.0000	65	1.96532	105	0.54448
-14	79.3110	26	9.55074	66	1.89627	106	0.52912
-13	74.5360	27	9.12445	67	1.83003	107	0.51426
-12	70.1698	28	8.71983	68	1.76647	108	0.49989
-11	66.0898	29	8.33566	69	1.70547	109	0.48600
-10	62.2756	30	7.97078	70	1.64691	110	0.47256
-9	58.7079	31	7.62411	71	1.59068	111	0.45957
-8	56.3694	32	7.29464	72	1.53668	112	0.44699
-7	52.2438	33	6.98142	73	1.48481	113	0.43482
-6	49.3161	34	6.68355	74	1.43498	114	0.42304
-5	46.5725	35	6.40021	75	1.38703	115	0.41164
-4	44.0000	36	6.13059	76	1.34105	116	0.40060
-3	41.5878	37	5.87359	77	1.29078	117	0.38991
-2	39.8239	38	5.62961	78	1.25423	118	0.37956
-1	37.1988	39	5.39689	79	1.21330	119	0.36954
0	35.2024	40	5.17519	80	1.17393	120	0.35982
1	33.3269	41	4.96392	81	1.13604	121	0.35042
2	31.5635	42	4.76253	82	1.09958	122	0.3413
3	29.9058	43	4.57050	83	1.06448	123	0.33246
4	28.3459	44	4.38736	84	1.03069	124	0.32390
5	26.8778	45	4.21263	85	0.99815	125	0.31559
6	25.4954	46	4.04589	86	0.96681	126	0.30754
7	24.1932	47	3.88673	87	0.93662	127	0.29974
8	22.5662	48	3.73476	88	0.90753	128	0.29216
9	21.8094	49	3.58962	89	0.87950	129	0.28482
10	20.7184	50	3.45097	90	0.85248	130	0.27770
11	19.6891	51	3.31847	91	0.82643	131	0.27078
12	18.7177	52	3.19183	92	0.80132	132	0.26408
13	17.8005	53	3.07075	93	0.77709	133	0.25757
14	16.9341	54	2.95896	94	0.75373	134	0.25125
15	16.1156	55	2.84421	95	0.73119	135	0.24512
16	15.3418	56	2.73823	96	0.70944	136	0.23916
17	14.6181	57	2.63682	97	0.68844	137	0.23338
18	13.9180	58	2.53973	98	0.66818	138	0.22776
19	13.2631	59	2.44677	99	0.64862	139	0.22231


Appendix 2

Unit: °C--K		Discharge temp. sensor table					
-20	542.7	20	68.66	60	13.59	100	3.702
-19	511.9	21	65.62	61	13.11	101	3.595
-18	483	22	62.73	62	12.65	102	3.492
-17	455.9	23	59.98	63	12.21	103	3.392
-16	430.5	24	57.37	64	11.79	104	3.296
-15	406.7	25	54.89	65	11.38	105	3.203
-14	384.3	26	52.53	66	10.99	106	3.113
-13	363.3	27	50.28	67	10.61	107	3.025
-12	343.6	28	48.14	68	10.25	108	2.941
-11	325.1	29	46.11	69	9.902	109	2.86
-10	307.7	30	44.17	70	9.569	110	2.781
-9	291.3	31	42.33	71	9.248	111	2.704
-8	275.9	32	40.57	72	8.94	112	2.63
-7	261.4	33	38.89	73	8.643	113	2.559
-6	247.8	34	37.3	74	8.358	114	2.489
-5	234.9	35	35.78	75	8.084	115	2.422
-4	222.8	36	34.32	76	7.82	116	2.357
-3	211.4	37	32.94	77	7.566	117	2.294
-2	200.7	38	31.62	78	7.321	118	2.233
-1	190.5	39	30.36	79	7.086	119	2.174
0	180.9	40	29.15	80	6.859	120	2.117
1	171.9	41	28	81	6.641	121	2.061
2	163.3	42	26.9	82	6.43	122	2.007
3	155.2	43	25.86	83	6.228	123	1.955
4	147.6	44	24.85	84	6.033	124	1.905
5	140.4	45	23.89	85	5.844	125	1.856
6	133.5	46	22.89	86	5.663	126	1.808
7	127.1	47	22.1	87	5.488	127	1.762
8	121	48	21.26	88	5.32	128	1.717
9	115.2	49	20.46	89	5.157	129	1.674
10	109.8	50	19.69	90	5	130	1.632
11	104.6	51	18.96	91	4.849		
12	99.69	52	18.26	92	4.703		
13	95.05	53	17.58	93	4.562		
14	90.66	54	16.94	94	4.426		
15	86.49	55	16.32	95	4.294	B(25/50)=3950K	
16	82.54	56	15.73	96	4.167		
17	78.79	57	15.16	97	4.045	R(90°C)=5KΩ±3%	
18	75.24	58	14.62	98	3.927		
19	71.86	59	14.09	99	3.812		

3. Controller

3.1 Wireless Remote Controller

3.1.1 RG51Q1/BGE

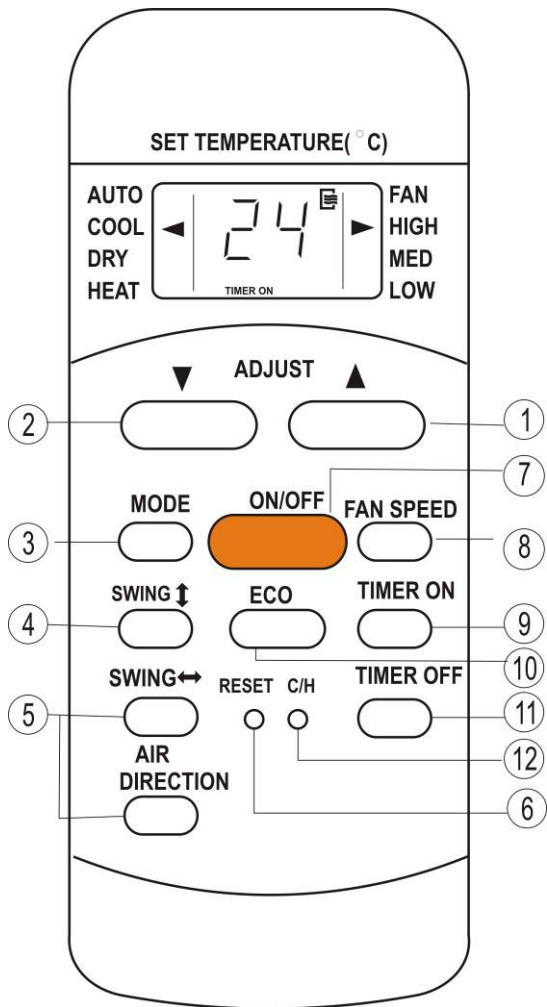


General Function for wireless remote controller:

Model	RG51Q1/BGE
Rated voltage	3.0V(2pieces of LR03 7# batteries)
Min voltage for sending signal of CPU	2.4V
Effective receiving distance	8m~11m
Operation condition	-5~60℃


Buttons and functions

1. **Adjust** ▼ : Decrease the set temp. Keeping pressing will decrease the temp with 1°C per 0.5s.
2. **Adjust** ▲ : Increase the set temp. Keeping pressing will increase the temp with 1°C per 0.5s.
3. **MODE**: Once pressing, running mode will be selected in the following sequence:



NOTE: No heating mode for cool only type unit.

4. **VERT SWING**: Used to stop or start horizontal louver movement or set the desired up/down air flow direction. The louver changes 6 degree in angle for each press. If keep pushing more than 2 seconds, the louver will swing up and down automatically.
5. **HORIZ SWING**: Used to stop or start vertical louver movement.
6. **AIR DIRECTION**: Used to set the desired up/down air flow direction. The louver changes 6 degree in angle for each press.
7. **ON/OFF**: For turning on or turning off the air conditioner. ▶ ▶ ▶ ▶ ▶
8. **FAN SPEED**: Fan speed will be selected in following sequence once pressing this button:



9. **TIME ON**: For time ON setting. Once pressing this button, the time will increase by 0.5 hour. When the set time exceeds 10 hours, pressing the button will increase the time by 1 hour. Adjusting the figure to 0.00 will cancel time ON setting.
10. **ECO**: Activate or turn off economic operation mode. It is suggested to turn on this function when sleeping. (Only available when remote controller is used with corresponding unit.)
11. **TIME OFF**: For time OFF setting. Once pressing this button, the time will increase by 0.5 hour. When the set time exceeds 10 hours, pressing the button will increase the time by 1 hour. ▶ ▶ ▶

Adjust the figure to 0.00 will cancel time ON setting.


12. **C/H** (inner located): Press this button with a needle of 1mm to shift the mode between Cooling only and Cooling & Heating according to the feature of the machine.
13. **RESET** (inner located): Press this button with a needle of 1mm to cancel the current setting and reset remote controller.

3.1.2 RG51C/E


Remote Controller Specifications

Model	RG51C/E
Rated Voltage	3.0V(2pieces of LR03 7# batteries)
Lowest Voltage of CPU Emitting Signal	2.0V
Reaching Distance	8m (when using 3.0 voltage, it can get 11m)
Environment Temperature Range	-5℃~60℃

Introduction of Function Buttons on the Remote Controller

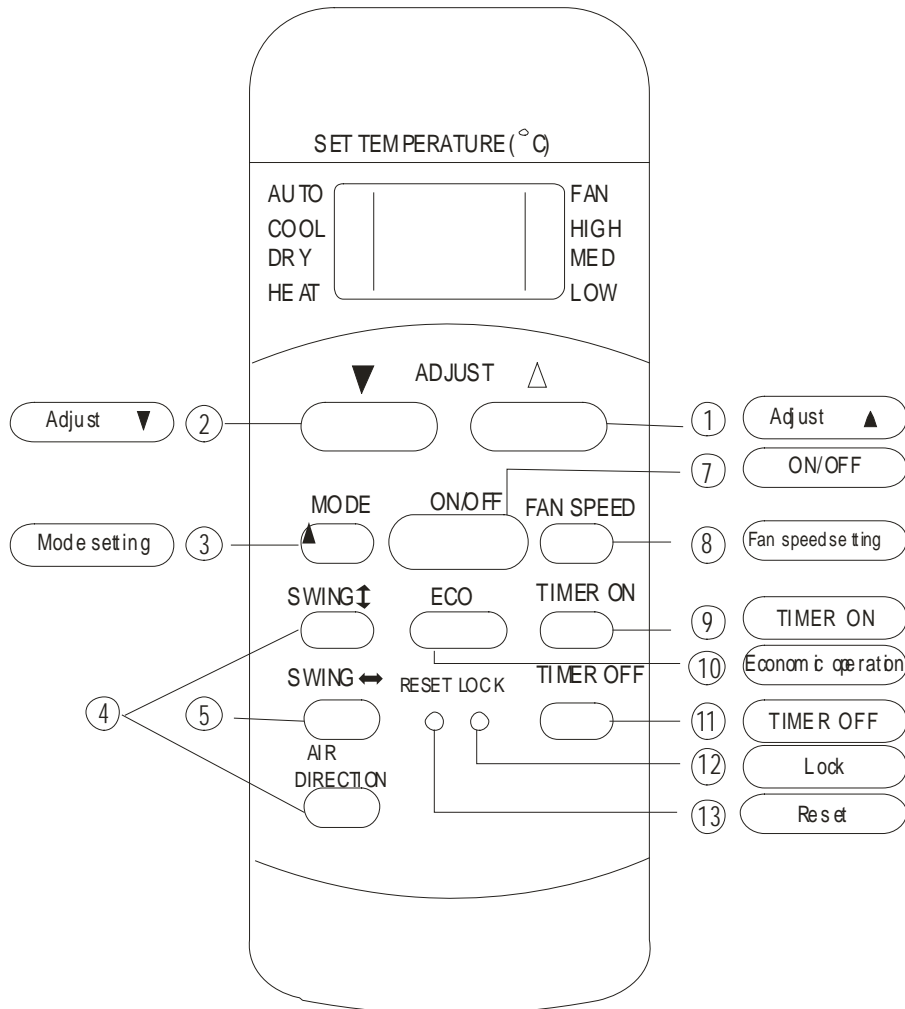

- Adjust ▼** : Decrease the set temp. Keeping pressing will decrease the temp with 1℃ per 0.5s.
- Adjust ▲** : Increase the set temp. Keeping pressing will increase the temp with 1℃ per 0.5s.
- MODE**: Once pressing, running mode will be selected in the following sequence:



NOTE: No heating mode for cool only type unit.

4. VERT SWING: Used to stop or start horizontal louver movement. The louver will swing up and down automatically if push this button.

AIR DIRECTION: Used to set the desired up/down air flow direction. The louver changes 6 degree in angle for each press.


5. HORIZ SWING: Used to stop or start vertical louver movement.

6. FAN SPEED+ MODE: Press the Mode and Fan speed button simultaneously for 2 seconds. The remote

controls into faceplate setting state and the LCD shows F2. Press the TEMPUP(▲) to control the faceplate up and press the TEMP DOWN(▼) to control the faceplate down. Press any button to exit the faceplate setting state, then the LCD back to the normal display.

7. ON/OFF: For turning on or turning off the air conditioner.

8. FAN SPEED: Fan speed will be selected in following sequence once pressing this button:



9. TIME ON: For time ON setting. Once pressing this button, the time will increase by 0.5 hour. When the set time exceeds 10 hours, pressing the button will increase the time by 1 hour. Adjusting the figure to 0.00 will cancel time ON setting.

10. ECO: Select this function during the sleeping time. It can maintain the most comfortable temperature and save energy. This function is available on COOL, HEAT or AUTO mode only .

NOTE: While the unit is running under Energy-saving mode, it would be cancelled if press MODE, FAN SPEED or ON/OFF button.

11. TIME OFF: For time OFF setting. Once pressing this button, the time will increase by 0.5 hour. When the set time exceeds 10 hours, pressing the button will increase the time by 1 hour.

Adjust the figure to 0.00 will cancel time ON setting.

12. LOCK (inner located): Push this button to lock in all the current settings, and the remote controller will not accept any operation except that of the LOCK. Use the LOCK mode when you want to prevent settings from being changed accidentally. Press the LOCK button again to cancel the LOCK function. A lock symbol will appear on the remote controller display when the lock function is activated.


13. RESET (inner located): Once the recessed RESET button is pressed, all of the current settings will be cancelled and the controller will return to the initial settings..

3.1.3 R51D/(C)E


Remote Controller Specifications

Model	R51D/E, R51D/CE
Rated voltage	3.0V(2pieces of LR03 7 # batteries)
Min voltage for sending signal of CPU	2.0V
Effective receiving distance	8m (when using 3.0 voltage, it can get 11m)
Operation condition	-5~60℃

Introduction of Function Buttons on the Remote Controller

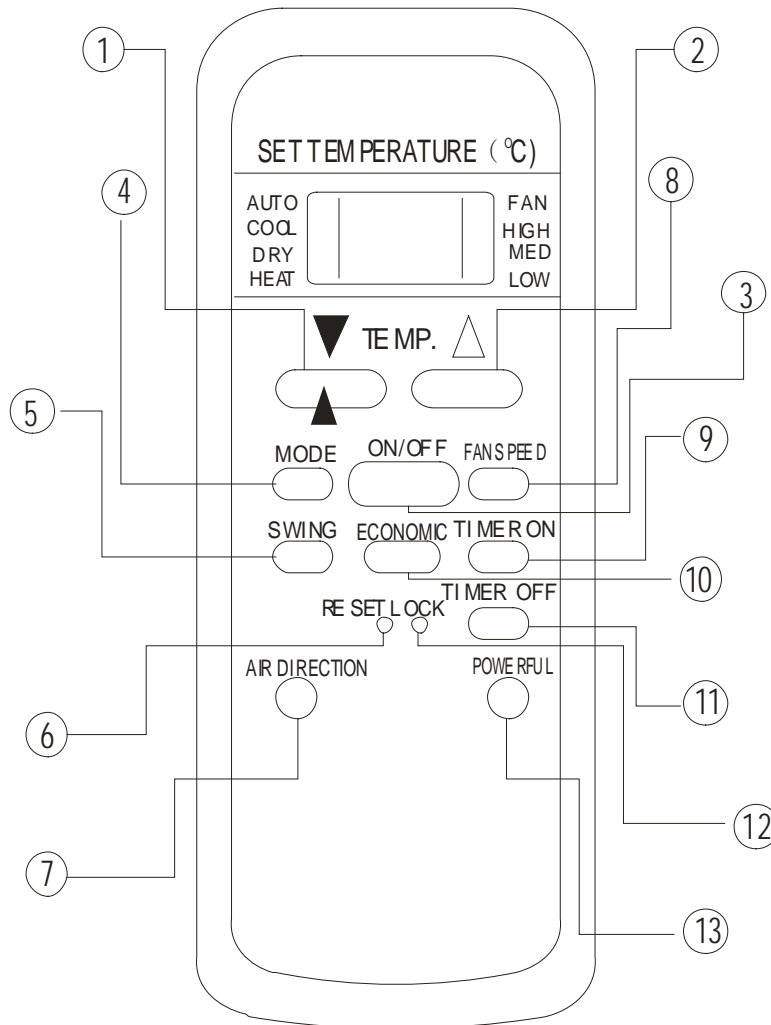

1. **TEMP Button ▼** : Press the button to decrease the indoor temperature setting.
2. **TEMP Button ▲** : Press the button to increase the indoor temperature setting.
3. **ON/OFF Button**: Push this button to start the unit operation. Push the button again to stop the unit operation.
4. **MODE Select Button**: Each time you push the button, a mode is selected in a sequence that goes from AUTO、COOL、DRY、HEAT and FAN, as the following figure indicates:




NOTE: No heating mode for cool only type unit.

5. **SWING Button**: Push this button, the louver would swing up and down automatically. Push again to stop it.
6. **RESET Button**: When the RESET button is pushed, all of the current settings are cancelled and the

control will return to the initial settings.(Use a ϕ 1mm little round stick to push the button)

7. AIR DIRECTION Button: Push this button, the louver can be fixed at a desired angle. The louver swing (upward or downward) to a certain angle for each press. When the louvers swing at an angle which would affect the cooling and heating efficiency of the air conditioner, it would automatically change the swing direction (upward or downward).

8. FAN SPEED Button: Fan speed will be selected in following sequence once pressing this button:



9. TIMER ON Button: Press this button to preset the time ON(start to operate). Each press will increase the time ON setting in 30minutes increments. When the setting time displays 10:00, each press will increase the time ON setting in 60 minutes increments. To cancel the time ON program, simply adjust the time ON to 0:00.

10. ECONOMIC RUNNING Button: Press this button to go into the energy-Saving operation mode. Press the button again to cancel.

11. TIMER OFF Button: Press this button to preset the time OFF (turn off the operation). Each press will increase the time OFF setting in 30 minutes increments. When the setting time displays 10:00, each press will increase the time OFF setting in 60 minutes increments. To cancel the time OFF program, simply adjust the time OFF to 0:00

12. LOCK Button: Push this button to lock in all the current settings. To release settings, push again. (Use a ϕ 1mm little round stick to push this button)


13. POWERFUL Button: Press this button on cooling/heating mode to go into powerful cooling (heating operation. Press again to cancel it.

Note: The unit will automatically revert back to the previous operational mode after continuously operating under the powerful cooling mode.

3.2 Wired Remote Controller

3.2.1 KJR-10B


Name and functions of buttons on the wire controller

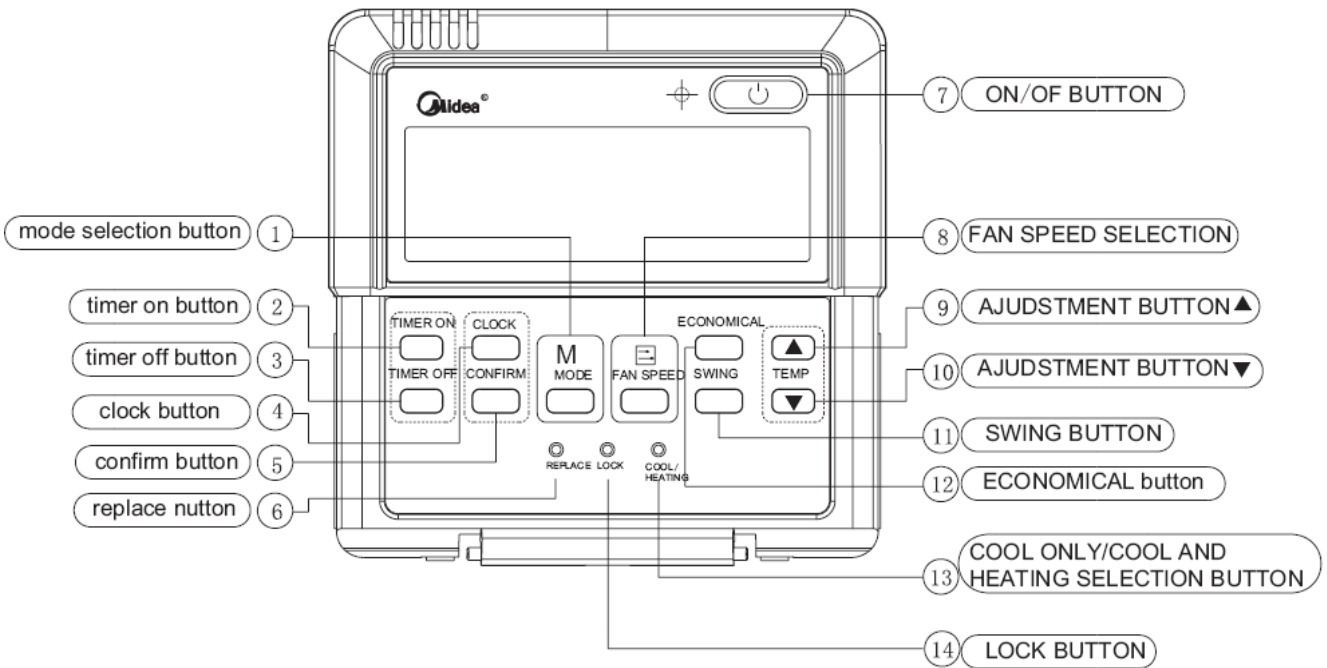

1 mode selection button:

It is used to select mode, push the button one time, then the operation modes will change

In turn as follows:



Remark: no heating mode if wire controller is set as the cool only.

2 Timer on button:

Push the button to set TIMER ON, each time you push the button the time moves forward by 0.5 hours. When the set time is over 10 hours, each time you push the button the time moves forward by 1 hour. If want to cancel the TIMER ON, then adjust the time of TIMER ON as 0.0


3 Timer off button:

Push the button to set TIMER OFF, each time you push the button the time moves forward by 0.5 hours. When the set time is over 10 hours, each time you push the button the time moves forward by 1 hour. If want to cancel the TIMER OFF, then adjust the time of TIMER OFF as 0.0

4 CLOCK button:


Normally display the clock set currently (display 12:00 for the first electrifying or resetting). When push the button for 4 seconds, the hour part on the clock display flashes every 0.5 seconds, then push button and to adjust hour; push the button CLOCK again, the minute part flashes every 0.5 seconds, then push and button to adjust minute. When set clock or alter clock setting, must push the confirm button to complete the setting

Name and function of LCD on the wire controller

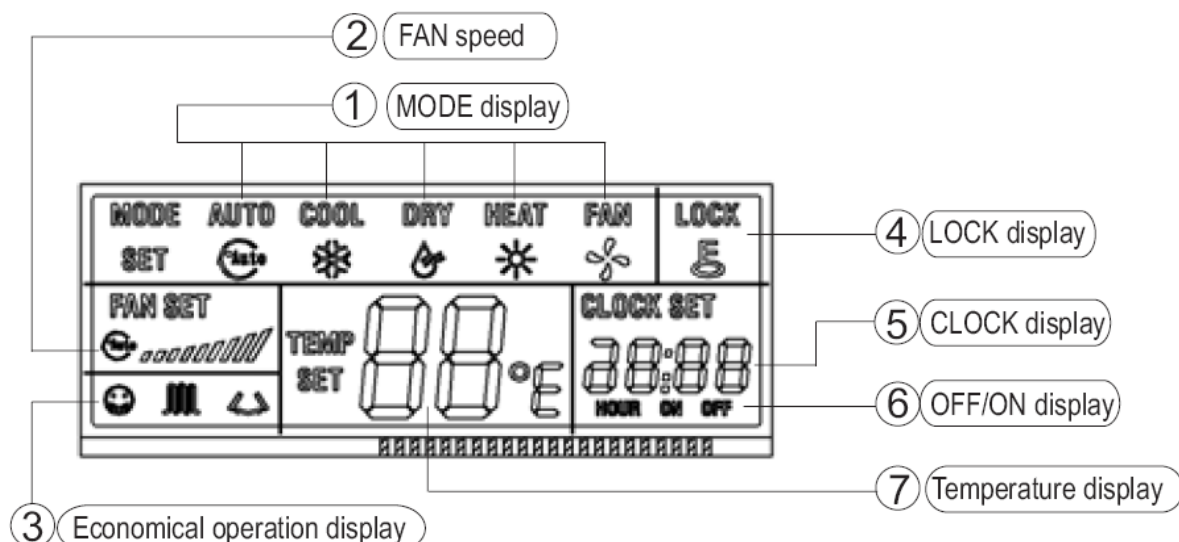

1 Mode select button (MODE):

Press MODE button to select "COOL", "DRY", "HEAT", or "FAN ONLY" mode. (HEAT is invalid for COOL ONLY wire controller.)



2 Fan speed button (FAN SPEED)

Press FAN SPEED to select fan speed from "AUTO", "LOW", "MED", and "HIGH". NOTE: some air conditioners have no MED fan speed, and then the MED is regarded as HIGH.

3 Economical operation displays:

Press ECONOMICAL to display economical operation, if press ECONOMICAL again then the display disappears

4 Lock display

Press LOCK to display the icon of LOCK. Press the button again then the icon of LOCK disappears. In the mode of LOCK, all the buttons are invalid except for LOCK button.

5 CLOCK display.

Usually display the clock set currently. Press the button CLOCK for 4 seconds, the HOUR part will flash, press button ▲ and ▼ to adjust HOUR. Press the button CLOCK again, the minute part flash, press button ▲ or ▼ to adjust MINUTE. After clock set or clock operation, it must press CONFIRM to complete the set.

6 TIMER ON/OFF display:

Display ON at the state of TIMER ON adjustment or after only set the TIMER ON; Display OFF at the state of TIMER OFF adjustment or after only set the TIMER OFF; Display ON/OFF if simultaneously set the mode of TIMER ON and TIMER OFF.

7 Temperature display area:

Usually display the set temperature. Press the buttons of and to set temperature, at the mode of FAN, there is no figure display in the area.


Remark:

The wired controller will reset to factory setting with auto mode, auto fan and 24°C setting temperature when the air conditioner restarts after power failure.

And this may cause inconsistent displays on the wired controller and on the air conditioner. You need to readjust the running status through the wired controller.


Installation

Wiring Principle Sketch:

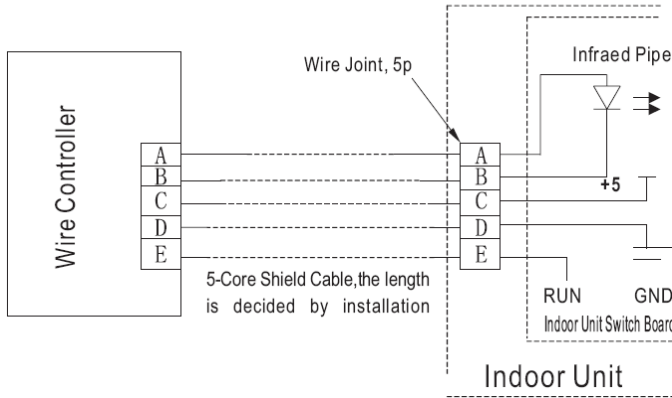

Installation Notice:

When the air conditioner needs the constant frequency wire Controller, be sure adding a Wire Joint with 5 terminal named A, B, C, D, E in indoor unit, and fixing a infrared emitter whose anode and cathode connecting with A and B near the receiver in the Indoor Unit Switch Board, then connecting the terminal +5v, GND, Run in the Switch Board to C,D,E respectively.

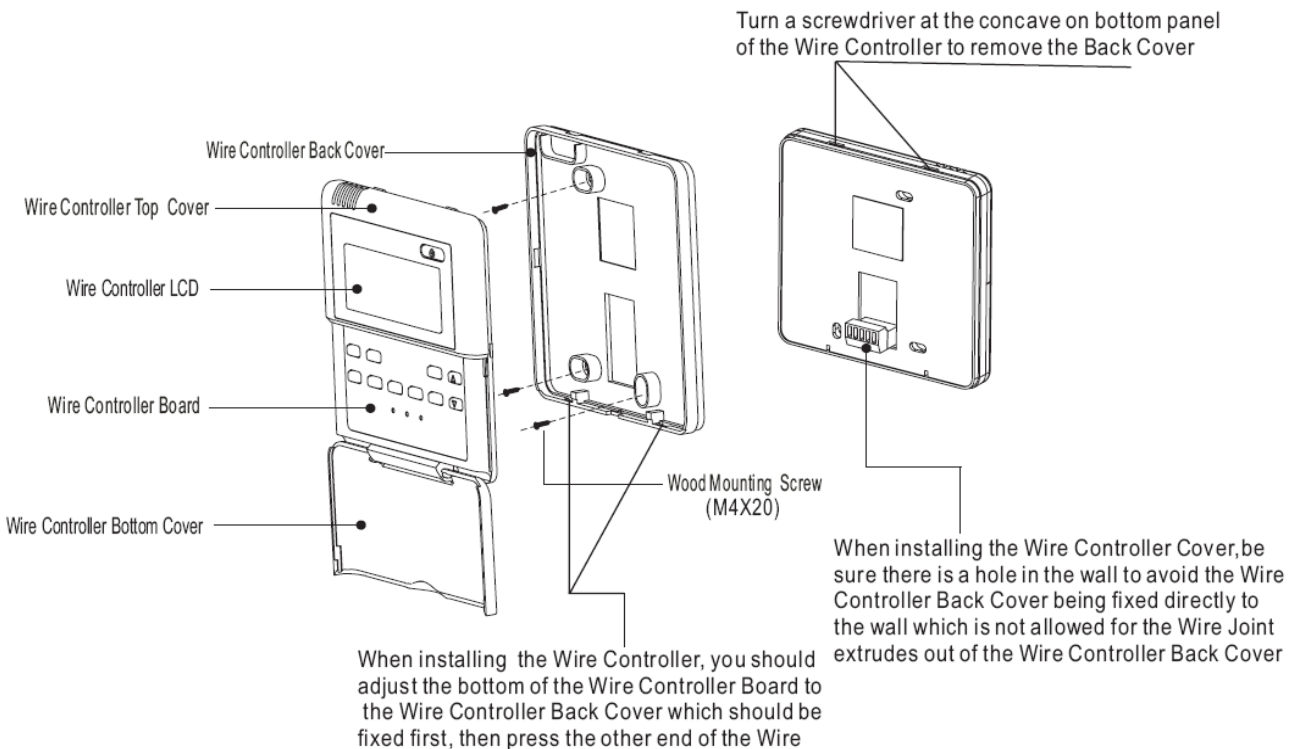

NOTE

Never turn screws too tightly, or else the cover would be dented or the liquid crystal breaks.

Please leave enough long cable for maintenance of the wire controller board.